

Godrej WF Eon 700 PAE

Godrej WF Eon 700 PAE 7 kg Fully-Automatic Front Loading Washing Machine User Manual

Model: WF Eon 700 PAE

[Introduction](#) [Product Overview](#) [Setup & Installation](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Godrej WF Eon 700 PAE 7 kg Fully-Automatic Front Loading Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Fully-automatic front-loading washing machine:** Offers convenient and efficient washing cycles.
- **7 kg Capacity:** Suitable for families with 3 to 4 members.
- **15 Wash Programs:** Provides a variety of options for different fabric types and soil levels.
- **700 RPM Maximum Rotational Speed:** Higher spin speed aids in faster drying of clothes.
- **Eco-balance system:** Optimizes water and energy consumption.
- **Foam protection:** Prevents excessive foam build-up.
- **Unbalanced load correction:** Automatically adjusts the drum to balance uneven loads, reducing vibration and noise.
- **Water overflow protection:** Ensures safety by preventing water overflow.
- **Error detection system:** Helps identify and troubleshoot operational issues.

2.2 Product Components



Image 1: Front view of the Godrej WF Eon 700 PAE washing machine, showing the control panel, detergent dispenser drawer, and the main loading door.



Image 2: Close-up of the washing machine's stainless steel drum, visible when the front loading door is open.



Image 3: The detergent dispenser drawer, showing compartments for pre-wash, main wash detergent, and fabric softener.



Image 4: Rear view of the washing machine, highlighting the water inlet and drain hoses, and the power cord connection.



Image 5: Side profile of the washing machine, showing its depth and overall structure.



Image 6: Front view of the washing machine with key dimensions (height, width, depth) indicated for installation planning.

2.3 What's in the Box

- 1 Front Load Washing Machine
- User Manual (this document)
- Water Inlet Hose
- Drain Hose
- Power Cord

3. SETUP & INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine. It is recommended to have the appliance installed by an authorized service technician.

3.1 Pre-Installation Site Readiness

Before the technician arrives, ensure the following are ready at the installation site:

- **Water Supply:** A tap connection for water intake.
- **Drainage:** An outlet connection to drain water.
- **Electrical Point:** A 15 Amp electric point.
- **Earthing:** Ensure proper earthing to prevent electric shock.

Note: Any extra materials required beyond standard installation, such as a base stand or additional plumbing, will be charged separately by the technician.

3.2 Installation Process Overview

Upon delivery of your washing machine, Amazon will raise an installation request. A brand-authorized technician will contact you within 24 to 36 hours to schedule the installation visit. The technician will install the product and explain its features.

Your browser does not support the video tag.

Video 1: A general guide to washing machine installation, covering site readiness and the installation process. This video provides an overview of what to expect during the installation of your new washing machine.

4. OPERATING INSTRUCTIONS

Follow these steps for basic operation of your fully-automatic front-loading washing machine:

1. **Load Laundry:** Open the front door and load clothes into the drum. Do not overload the machine.
2. **Add Detergent:** Pull out the detergent dispenser drawer (refer to Image 3) and add appropriate amounts of detergent and fabric softener to their respective compartments.
3. **Close Door & Drawer:** Ensure the main door and detergent drawer are securely closed.
4. **Select Program:** Turn the program selector knob to choose one of the 15 available wash programs based on your laundry type (e.g., Cotton, Synthetics, Delicates, Rapid 15', Allergy Protect).
5. **Adjust Settings (Optional):** Depending on the selected program, you may adjust temperature, spin speed, or add delay start if available on the control panel.
6. **Start Cycle:** Press the 'Start/Pause' button to begin the wash cycle.
7. **Unload Laundry:** Once the cycle is complete, the machine will signal. Open the door and remove your clean laundry.

Your browser does not support the video tag.

Video 2: A product demonstration video for the Godrej 7 kg Fully-Automatic Front Loading Washing Machine (WF Eon 700 PAE, White). This video showcases the key features and operational aspects of the washing machine.

5. MAINTENANCE

Regular maintenance ensures the longevity and efficient performance of your washing machine.

- **Clean Detergent Dispenser:** Regularly remove and clean the detergent dispenser drawer to prevent residue buildup.
- **Clean Drum:** Run a drum clean cycle (if available) or a hot wash with a washing machine cleaner periodically.
- **Check Drain Filter:** Inspect and clean the drain filter regularly to remove lint and small objects.
- **Wipe Exterior:** Clean the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.

- **Door Seal:** Wipe the rubber door seal after each wash to prevent mold and mildew growth.
- **Leave Door Ajar:** After use, leave the door slightly ajar to allow the drum to air dry and prevent odors.

6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, power outage, program not selected.	Check power connection, ensure door is latched, check circuit breaker, select a wash program.
No water intake	Water tap closed, water supply cut off, inlet hose kinked.	Open water tap, check household water supply, straighten inlet hose.
Water not draining	Drain hose kinked or blocked, drain filter clogged.	Straighten drain hose, clean the drain filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, unbalanced load.	Adjust leveling feet, ensure transport bolts are removed (during installation), redistribute laundry inside the drum.
Error code displayed	Specific malfunction detected by the error detection system.	Refer to the full user manual for specific error code meanings and solutions, or contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Godrej
Model	WF Eon 700 PAE
Capacity	7 Kilograms
Maximum Rotational Speed	700 RPM
Installation Type	Freestanding
Form Factor	Front-Loading
Colour	White
Control Console	Fully Automatic
Access Location	Front Load
Voltage	240 Volts
Material	Plastic
Item Weight	65 kg
Item Dimensions (LxWxH)	52.7 x 59.7 x 84.5 Centimeters

8. WARRANTY & CUSTOMER SUPPORT

Your Godrej WF Eon 700 PAE washing machine comes with a comprehensive warranty:

- **Product Warranty:** 2 years on the entire product.
- **Motor Warranty:** 10 years on the motor.

For any service requests, technical assistance, or warranty claims, please contact Godrej customer support. Refer to the official Godrej website or your purchase documentation for the most current contact information.