



[Manuals.plus](#) /

> [Kwikset](#) /

> Kwikset 275 Keyless Digital Deadbolt Instruction Manual

Kwikset 92750-001

Kwikset 275 Keyless Digital Deadbolt Instruction Manual

Model: 92750-001 | Brand: Kwikset

1. PRODUCT OVERVIEW

The Kwikset 275 Keyless Digital Deadbolt offers a secure and convenient keyless entry solution for your home. This electronic deadbolt provides enhanced security features and ease of use, allowing access through a personalized code.



Image: The Kwikset 275 digital deadbolt, displaying both the exterior keypad assembly and the interior battery-operated unit.

Key Features:

- Digital Deadbolt for keyless entry.
- Supports up to 30 unique user codes.
- Easy installation process.
- Durable Nickel finish.

2. SETUP AND INSTALLATION

The Kwikset 275 digital deadbolt is designed for straightforward installation, typically requiring only a screwdriver. Follow the instructions provided in the packaging for detailed steps. Ensure your door is properly prepped according to standard deadbolt specifications.



Image: The Kwikset 275 digital deadbolt installed on a standard white interior door, showcasing its sleek design.

Installation Tips:

- Verify door thickness and backset measurements before beginning.
- Ensure all components are present as listed in the packing contents.
- Test the deadbolt's mechanical operation before installing batteries.
- Batteries (not included) are required for electronic functions. Use 4 AA alkaline batteries.

3. OPERATING INSTRUCTIONS

Operating your Kwikset 275 digital deadbolt is simple and intuitive. You can lock and unlock the door using the keypad or a traditional key.



Image: A detailed view of the Kwikset 275 digital deadbolt's illuminated keypad, showing numbers 0-9, a back arrow, and a lock symbol.

Unlocking the Door:

1. Enter your 4-8 digit user code on the keypad.
2. Press the Kwikset button (lock symbol).
3. The deadbolt will retract, allowing you to open the door.

Locking the Door:

- **From the outside:** Press the Kwikset button (lock symbol) on the keypad.
- **From the inside:** Turn the thumbturn on the interior unit to the locked position.

Programming User Codes:

Refer to the detailed programming instructions in your included quick start guide for adding, deleting, or changing user codes. The lock supports up to 30 unique user codes.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Kwikset 275 digital deadbolt.

Cleaning:

- Clean the lock with a soft, damp cloth.
- Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.

Battery Replacement:

The Kwikset 275 deadbolt requires 4 AA alkaline batteries for operation. When the batteries are low, the lock will typically provide an audible or visual indicator. To replace batteries:

1. Remove the battery cover on the interior unit.
2. Remove the old batteries.
3. Insert new AA alkaline batteries, ensuring correct polarity.
4. Replace the battery cover.

5. TROUBLESHOOTING

If you encounter issues with your Kwikset 275 digital deadbolt, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lock does not respond to keypad entry.	Low or dead batteries. Incorrect code entered.	Replace batteries. Re-enter code carefully.
Deadbolt does not extend or retract fully.	Misalignment of lock components or door frame.	Check for obstructions in the door frame or strike plate. Realign lock if necessary.
Keypad lights do not illuminate.	Batteries are completely drained.	Replace all batteries with new AA alkaline batteries.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact Kwikset customer support.

6. SPECIFICATIONS

Detailed specifications for the Kwikset 275 Keyless Digital Deadbolt:

Specification	Value
Manufacturer	Kwikset
Part Number	92750-001
Color	Nickel
Material	Nickel
Item Package Quantity	1
Number of Pieces	1
Included Components	1 Deadbolt
Batteries Required?	No (Batteries not included, but required for operation)
Item Weight	6.31 Kilograms
Product Dimensions (L x W x H)	50.75 x 65.53 x 77.22 cm (19.98 x 25.8 x 30.4 inches)
Lock Type	Electronic Lock

7. WARRANTY AND SUPPORT

Kwikset stands behind the quality of its products.

Warranty Information:

This Kwikset digital deadbolt comes with a **Lifetime Warranty**, ensuring peace of mind regarding its durability and performance. Please refer to the official Kwikset warranty policy for full terms and conditions.

Customer Support:

For technical assistance, warranty claims, or additional product information, please visit the official Kwikset website or contact their customer service department. You can often find support resources, FAQs, and contact details on the [Kwikset Brand Store on Amazon](#) or their corporate website.