

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chefman](#) /

› [Chefman Electric Smokeless Indoor Grill User Manual](#)

## Chefman Electric Smokeless Indoor Grill

# Chefman Electric Smokeless Indoor Grill User Manual

Model: Electric Smokeless Indoor Grill (RJ23-SG)

Brand: Chefman

### INTRODUCTION

The Chefman Electric Smokeless Indoor Grill is designed to bring the joy of grilling indoors without the excessive smoke. Its innovative design ensures a virtually smoke-free cooking experience, allowing you to enjoy perfectly grilled food year-round. The grill features a non-stick cooking surface, adjustable temperature control, and an extra-large cooking area to accommodate various foods.

To achieve its smokeless operation, the grill utilizes a water tray that cools falling grease, preventing it from sticking or smoking. This thoughtful design also contributes to easier cleanup.



Top-down view of the Chefman Electric Smokeless Indoor Grill, showcasing its large cooking surface with various grilled foods.

## SETUP

1. **Unpack:** Carefully remove all packaging materials and components from the box.
2. **Assemble:** Ensure the grill top is securely placed on the base and the water tray is correctly inserted.
3. **Fill Water Tray:** Before each use, fill the removable water tray with water. Ensure the water level is between the minimum and maximum lines indicated on the tray. This step is crucial for the grill's smokeless function, as it instantly cools grease and prevents smoking.
4. **Placement:** Place the grill on a stable, heat-resistant surface away from flammable materials.
5. **Connect Power:** Plug the power cord into a standard 120V electrical outlet.



# Removable drip tray and grate are top-rack dishwasher safe.

The grill's removable components, including the grill plate and water drip tray, designed for easy setup and cleaning.

## OPERATING INSTRUCTIONS

1. **Preheat:** Turn the adjustable temperature knob to your desired setting. The knob ranges from 'Warm' to 'Sear', allowing for versatile cooking. Allow the grill to preheat for approximately 5-10 minutes, or until the indicator light signals it's ready.
2. **Temperature Zones:** The grill features varying heat zones across its surface. The control knob allows you to select the appropriate temperature for different foods, from keeping items warm to searing meats.
3. **Cooking:** Place food directly onto the non-stick grilling surface. The extra-large cooking area allows you to cook multiple items simultaneously.
4. **Smokeless Grilling:** The water in the drip tray will cool any grease that falls, significantly reducing smoke. Ensure the water level is maintained during extended cooking sessions.
5. **Safety Features:** The grill is equipped with cool-touch handles and overheat auto shut-off protection for added safety during operation.



# Adjustable temperature to sear on High or warm up on Low.

Adjustable temperature knob for precise cooking control, from warm to sear.





## Nonstick grates with raised ridges for gorgeous grill marks.

Non-stick grates with raised ridges for achieving perfect grill marks.

### MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your Chefman Electric Smokeless Indoor Grill.

1. **Cool Down:** Always allow the grill to cool completely before cleaning.
2. **Disassemble:** The grill top and non-stick water tray are removable for easy cleaning. Carefully lift them off the base.
3. **Dishwasher Safe:** Both the grill top and the water tray are dishwasher safe, making cleanup convenient.
4. **Wipe Base:** Wipe the main unit (base) with a damp cloth. Do not immerse the electrical base in water or any other liquid.
5. **Non-Stick Surface Care:** The non-stick surface ensures food slides off easily. Avoid using abrasive cleaners or metal utensils that could damage the coating.

### TROUBLESHOOTING

If you encounter any issues with your Chefman Electric Smokeless Indoor Grill, please refer to the following general advice:

- **No Power:** Ensure the grill is properly plugged into a working electrical outlet and the temperature knob is turned to an 'ON' setting. Check your household's circuit breaker.
- **Excessive Smoke:** Verify that the water tray is filled with water between the minimum and maximum lines. Insufficient water is a common cause of smoke.
- **Uneven Cooking:** Ensure the grill has fully preheated before placing food on it. Distribute food evenly across the cooking surface.
- **Food Sticking:** Confirm the non-stick surface is clean and free of residue from previous uses. Avoid using cooking sprays that can build up and cause sticking.

For more detailed troubleshooting or persistent issues, please consult the full User Guide PDF or contact Chefman customer support.

### SPECIFICATIONS

Feature	Detail
Brand	Chefman
Model Name	Electric Smokeless Indoor Grill w/ Non-Stick Cooking Surface
Product Dimensions	20.5"D x 10.5"W x 3.5"H
Color	Black
Material	Aluminum
Finish Type	Non-Stick
Fuel Type	Electric
Voltage	120 Volts
Wattage	1120 Watts
Item Weight	5.3 Pounds
Special Feature	Programmable
Included Components	User Manual
Assembly Required	No

Feature	Detail
Manufacturer	Chefman
Country of Origin	China



Bring this compact grill  
inside for daily BBQ.

Visual representation of the grill's compact dimensions.

WARRANTY INFORMATION

The Chefman Electric Smokeless Indoor Grill comes with a 1-year assurance provided by Chefman. This ensures peace of mind regarding the product's quality and durability. For specific details regarding warranty claims or coverage, please refer to the official warranty document or contact Chefman customer support.






SUPPORT


For further assistance, detailed instructions, or to address any concerns, please utilize the following resources:

- **User Guide (PDF):** [Download the official User Guide](#) for comprehensive information on your grill.

- **Warranty (PDF):** [Access the Warranty document](#) for full terms and conditions.
- **Chefman Customer Service:** Visit the official Chefman website or refer to your product packaging for direct contact information.

## Related Documents - Electric Smokeless Indoor Grill

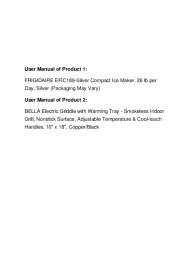	<p><a href="#">Chefman ExacTemp Smokeless Indoor Grill User Guide</a></p> <p>Comprehensive user guide for the Chefman ExacTemp Smokeless Indoor Grill, covering safety instructions, features, operation, cooking tips, cleaning, maintenance, and warranty information.</p>
	<p><a href="#">George Foreman GRV6090B Contact Smokeless Grill Use and Care Manual</a></p> <p>Comprehensive use and care manual for the George Foreman GRV6090B Contact Smokeless Grill, including safety instructions, operating guide, cleaning tips, and recipes.</p>
	<p><a href="#">SHAQ Smokeless Grill XL PG1500XL Owner's Manual - Indoor Grilling Guide</a></p> <p>Official owner's manual for the SHAQ Smokeless Grill XL (Model PG1500XL) by Tristar Products. Learn about safety, operation, parts, cleaning, troubleshooting, and the 60-day guarantee for your indoor electric grill.</p>
	<p><a href="#">PowerXL Smokeless Grill Elite SMG-01 Owner's Manual: Instructions, Safety &amp; Cooking Guide</a></p> <p>Get the most out of your PowerXL Smokeless Grill Elite (Model SMG-01) with this comprehensive owner's manual. Find detailed instructions for setup, operation, cleaning, troubleshooting, safety precautions, and cooking charts for delicious meals.</p>
	<p><a href="#">Frigidaire Ice Maker &amp; Bella Electric Griddle User Manuals</a></p> <p>Comprehensive user manuals for the Frigidaire EFIC189 Compact Ice Maker and the Bella 10" x 18" Electric Griddle, covering operation, safety, maintenance, troubleshooting, and warranty information.</p>



[Power Smokeless Grill XL PG1500XL Owner's Manual and Operating Guide](#)

Comprehensive owner's manual for the Power Smokeless Grill XL (Model PG1500XL), covering important safeguards, operating instructions, cleaning, troubleshooting, and warranty information.


Documents - Chefman – Electric Smokeless Indoor Grill



[Chefman ExacTemp Smokeless Indoor Grill User Guide](#)

Comprehensive user guide for the Chefman ExacTemp Smokeless Indoor Grill, covering safety instructions, features, operation, cooking tips, cleaning, maintenance, and warranty information.

lang:en score:35 filesize: 781.52 K page\_count: 24 document date: 2023-02-02

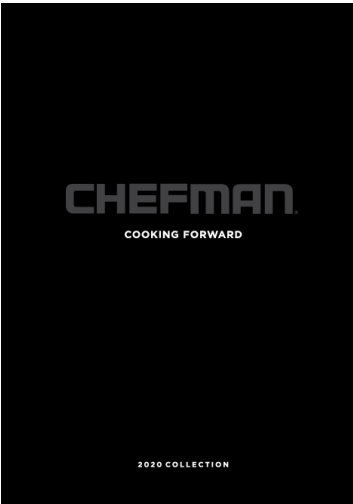

[Chefman 2020 Collection: Innovative Kitchen Appliances](#)

Explore the Chefman 2020 Collection, featuring a wide range of innovative and accessible kitchen appliances designed to enhance your culinary experience. From smart pressure cookers and versatile blenders to efficient coffee makers and air fryers, discover tools that bring convenience and quality to your home.

lang:en score:14 filesize: 8.13 M page\_count: 71 document date: 2020-02-25

[pdf]



Marketing Materials Chefman Electric Smokeless Indoor Grill cfm1053 RJ23 SGChefman SG2708759secure img1 ag wfcnd dm document ac7d828b 3ef3 1361 283c 31260ca32c2d 2708759 SGMarketing SGmarketing materialssecure 2708759secure 8c7ef497 6971 42c3 bfb2 31f01a53efba marketing materials ||| ||| COOKING IN THE ZONE The Electric Indoor Grill is a super easy and convenient way to grill beef, poultry, pork, seafood, burgers, sausages, veggies and more-- any season, anywhere Similar to an outdoor grill, the temperature on this grill varies by heat zone. You can place your food on any section of the grill, allowing you to cook your food to the exact doneness you desire.

Marketing Materials Chefman Electric Smokeless Indoor Grill cfm1053 RJ23 SGChefman SG2708759secure img1 ag wfcnd dm document ac7d828b 3ef3 1361 283c 31260ca32c2d 2708759 SGMarketing SGmarketing materialssecure 2708759secure 8c7ef497 6971 42c3 bfb2 31f01a53efba marketing materials ||| ||| COOKING IN THE ZONE The Electric Indoor Grill is a super easy and convenient way to grill beef, poultry, pork, seafood, burgers, sausages, veggies and more-- any season, anywhere Similar to an outdoor grill, the temperature on this grill varies by heat zone. You can place your food on any section o...

lang:i-klngon score:11 filesize: 2.07 M page\_count: 2 document date: 2020-07-07



