

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FAO Schwarz](#) /
- › [User Manual for FAO Schwarz Karaoke Music Microphone](#)

FAO Schwarz SG_B077XPQVRF_US

User Manual

FAO Schwarz Karaoke Music Microphone

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your FAO Schwarz Karaoke Music Microphone. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The FAO Schwarz Vintage Karaoke Microphone, showcasing its retro design and accompanying retail packaging.

The FAO Schwarz Karaoke Music Microphone is designed with a vintage aesthetic, featuring a built-in speaker and Bluetooth connectivity for a seamless karaoke experience. It allows you to stream music wirelessly from your smartphone or other compatible devices and project your vocals with adjustable echo effects.

SETUP

1. Unboxing and Package Contents

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Vintage-style microphone with built-in speaker and Bluetooth connectivity
- Micro USB cable for charging
- AUX cable to connect to external speakers or headphones
- Instruction Manual (this document)

2. Charging the Microphone

Before first use, fully charge the microphone. Connect the included micro USB cable to the charging port on the microphone and the other end to a standard USB power adapter (not included) or a computer's USB port.



Image: A detailed view of the microphone's connectivity ports, including the micro USB charging port and the AUX output jack.

The indicator light will show charging status (e.g., red for charging, off or green for fully charged, refer to product for specific light behavior).

3. Powering On/Off

Locate the power button on the microphone. Press and hold the power button for a few seconds to turn the microphone ON. Repeat the action to turn it OFF.

4. Bluetooth Pairing

To connect your smartphone or other Bluetooth-enabled device:

1. Ensure the microphone is powered ON and within 3 feet of your device.
2. Activate Bluetooth on your smartphone or device.
3. Search for available Bluetooth devices. The microphone will appear as "FAO Schwarz Mic" or similar.
4. Select the microphone from the list to pair. A confirmation sound may indicate successful pairing.

Once paired, the microphone will automatically connect to your device when both are powered on and within range.

5. AUX Connection

For wired audio output to external speakers or headphones, use the included AUX cable. Connect one end to the AUX output port on the microphone and the other end to the audio input of your external device.

OPERATING INSTRUCTIONS

1. Basic Controls

The microphone features several controls for optimal performance:

- **Volume Control:** Adjusts the overall sound output from the built-in speaker.
- **Echo Control:** Adjusts the intensity of the vocal echo effect.
- **Power Button:** Turns the microphone on/off.



Image: A close-up view of the microphone's control panel, showing the volume and echo adjustment dials, and the power button.

2. Playing Music

Once connected via Bluetooth or AUX, you can play music from your device. The microphone's built-in speaker will output the audio. Adjust the volume using the microphone's volume control and/or your connected device's volume.

3. Using the Microphone for Vocals

Speak or sing directly into the microphone's grille. The built-in speaker will amplify your voice. Use the Echo control to add a vocal echo effect, enhancing your performance.



Image: A person actively using the FAO Schwarz Vintage Karaoke Microphone, demonstrating its intended use for singing.

The microphone is suitable for karaoke, announcements, or general voice amplification.

MAINTENANCE

1. Cleaning

To clean the microphone, gently wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the microphone in water. Keep the microphone grille free of dust and debris.

2. Storage

When not in use, store the microphone in a cool, dry place away from direct sunlight and extreme temperatures. Protect it from impacts and drops.

3. Battery Care

To prolong the life of the internal rechargeable battery, avoid fully discharging it frequently. Charge the microphone regularly, even if not in constant use, to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not power on.	Battery is depleted.	Charge the microphone using the micro USB cable.
No sound from the speaker.	Volume is too low or muted. Device not connected properly.	Increase the microphone's volume and/or the connected device's volume. Re-pair Bluetooth or re-connect AUX cable.
Bluetooth connection fails.	Microphone is out of range. Bluetooth on device is off. Interference.	Move microphone closer to the device (within 3 feet). Ensure Bluetooth is enabled on your device. Turn off other Bluetooth devices nearby.
Microphone not picking up voice.	Microphone volume too low. Speaking too far from the mic.	Ensure microphone volume is adequate. Speak directly into the microphone grille.
Power button is sticking or unresponsive.	Mechanical issue.	If this issue persists, contact customer support for assistance. This may indicate a manufacturing defect.

SPECIFICATIONS

Feature	Detail
Brand	FAO Schwarz
Model Number	SG_B077XPQVRF_US
Manufacturer	MerchSource
Hardware Platform	Smartphone
Compatible Devices	Smartphones, External Speakers, Headphones
Microphone Format	Handheld
Power Source Type	Corded Electric (Rechargeable via USB)
Battery Cell Composition	Lithium Ion
Signal-to-noise ratio (dB)	78 dB
Connector Type	Auxiliary, Bluetooth, USB
Media Type	Bluetooth, Auxiliary

Feature	Detail
Speaker Count	1
Package Dimensions	29.79 x 13 x 10.21 cm
Item Weight	499 g
ASIN	B077XPQVRF
UPC	694202127094

WARRANTY AND SUPPORT

Specific warranty information for the FAO Schwarz Karaoke Music Microphone is typically provided at the point of purchase or within separate documentation included with the product. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the manufacturer, MerchSource, or the retailer from whom you purchased the product. Contact information can usually be found on the product packaging or the manufacturer's official website.

You may also visit the official FAO Schwarz website for additional product information or support resources.

© 2024 FAO Schwarz. All rights reserved.

Model: SG_B077XPQVRF_US