



[Manuals.plus](#) /

> [Tekswamp](#) /

> Tekswamp Replacement Remote Control for Pioneer VSX-D710S Receiver Instruction Manual

Tekswamp TeK-311986

Tekswamp Replacement Remote Control for Pioneer VSX-D710S Receiver

Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your new Tekswamp replacement remote control, designed specifically for the Pioneer VSX-D710S A/V receiver. This remote offers most of the original commands for your device, ensuring seamless control of essential functions. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.



Figure 1: Front view of the Tekswamp Replacement Remote Control.

SAFETY INFORMATION

- Keep the remote control away from water and excessive moisture.
- Avoid dropping the remote or subjecting it to strong impacts.
- Do not expose the remote to direct sunlight or extreme temperatures.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.
- The security screw is a childproofing feature. Do not remove it unless necessary for battery replacement.

PACKAGE CONTENTS

Your package should contain the following item:

- 1 x Tekswamp Replacement Remote Control (Model: TeK-311986)

Note: AAA batteries are not included and must be purchased separately.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.

2. If present, loosen the security screw on the battery compartment cover using a small Phillips head screwdriver.
3. Slide the battery compartment cover downwards or outwards to open it.
4. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
5. Replace the battery compartment cover by sliding it back into place until it clicks securely.
6. If applicable, tighten the security screw to prevent accidental opening.



Figure 2: Open battery compartment showing correct AAA battery placement.

No additional programming is required. The remote is ready for use with your Pioneer VSX-D710S receiver once batteries are installed.

OPERATING INSTRUCTIONS

This Tekswamp remote control is designed to replicate the primary functions of your original Pioneer VSX-D710S receiver remote. Point the remote directly at your receiver when operating.

Basic Functions

- **Power ():** Press the red power button to turn the receiver on or off.
- **Volume (+/-):** Use the 'V+' and 'V-' buttons to increase or decrease the volume level.
- **Input/Source (SRC):** Press the 'SRC' button to cycle through available input sources (e.g., CD, DVD, TV).
- **Mute:** The mute button (often represented by a speaker with a cross) will temporarily silence the audio.

Menu Navigation

- **Menu:** Press the 'MENU' button to access the receiver's on-screen menu.
- **Navigation Arrows (▲ ▼ ◀ ▶):** Use the directional arrow buttons to navigate through menu options.

- **OK:** Press the 'OK' button to confirm a selection within the menu.
- **Exit:** Press the 'EXIT' button to close the current menu or return to the previous screen.

Additional Functions

- **Number Buttons (0-9):** Use these buttons for direct input of channel numbers or other numerical selections.
- **Setup:** The 'SETUP' button may provide direct access to system settings.
- **Mode:** The 'MODE' button can cycle through various audio modes or settings.
- **Sleep:** The 'SLEEP' button may activate a sleep timer function on your receiver.

Note on Specific Functions: While this remote provides most common functions, some highly specific functions (e.g., page flip, keystone correction, video adjustment, or certain advanced numerical inputs) may not work properly with all devices or may require the original remote. This remote does not include a laser pointer function.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the ON indicator light (if present) does not illuminate consistently. Refer to the "Battery Installation" section for detailed instructions on replacing batteries. Always replace both batteries at the same time with new AAA batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	<ul style="list-style-type: none"> • Dead or low batteries. • Incorrect battery installation. • Obstruction between remote and receiver. • Remote is too far from the receiver. 	<ul style="list-style-type: none"> • Replace batteries with new AAA batteries. • Check battery polarity (+/-). • Ensure a clear line of sight to the receiver's IR sensor. • Move closer to the receiver (maximum range is 7 meters).
Some functions do not work.	<ul style="list-style-type: none"> • Function not supported by this replacement remote. • Receiver not in the correct mode. 	<ul style="list-style-type: none"> • This remote provides most common functions; some advanced or specific functions may require the original remote. • Ensure your receiver is set to the appropriate input or mode for the desired function.
ON indicator light does not flash.	<ul style="list-style-type: none"> • Dead batteries. • Remote malfunction. 	<ul style="list-style-type: none"> • Replace batteries. • If new batteries do not resolve the issue, contact customer support.

SPECIFICATIONS

Brand	Tekswamp
Model Number	TeK-311986
Compatible Devices	Pioneer VSX-D710S Home Theater Receiver
Connectivity Technology	Infrared (IR)
Maximum Range	7 Meters (approx. 23 feet)
Power Source	2 x AAA Batteries (not included)
Color	Black
Item Weight	2 Ounces (approx. 57 grams)
Button Quantity	31

WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your Tekswamp remote control, please contact the seller or refer to the purchase platform for support options.

This product is designed to be a direct replacement and typically does not require extensive technical support beyond basic setup and troubleshooting as outlined in this manual.