

[Manuals.plus](#) /

› [AR Blue Clean](#) /

› AR Blue Clean PW909300K Quick Connect Trigger Gun Kit Instruction Manual

AR Blue Clean PW909300K

AR Blue Clean PW909300K Quick Connect Trigger Gun Kit Instruction Manual

Model: PW909300K | Brand: AR Blue Clean

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your AR Blue Clean PW909300K Quick Connect Trigger Gun Kit. Please read this manual thoroughly before assembly, operation, or maintenance. Retain this manual for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury or damage. This kit is designed for use with electric, cold water pressure washers. Ensure your pressure washer is compatible with the kit's specifications (e.g., max PSI, temperature).

- Wear appropriate personal protective equipment (PPE), such as safety glasses, gloves, and hearing protection.
- Never point the spray gun at people, pets, or electrical outlets.
- Ensure all connections are secure before operating the pressure washer.
- Do not operate the pressure washer if any components are damaged.
- Keep children and bystanders away from the operating area.
- Always disconnect the pressure washer from the power source before performing any maintenance or making adjustments.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:



Image: All components of the AR Blue Clean PW909300K Trigger Gun Kit, including the trigger gun, high-pressure hose, M22 lance, foam cannon, and quick-connect nozzles.

- Trigger Gun with Nozzle Holder
- 25-Foot High Pressure Hose (Max 2,900 PSI, 140°F)
- Metal M22 Lance with Quick Connect Outlet
- 25-Ounce Foam Cannon with Adjustable Detergent Knob and Spray Angle
- 5 Quick Connect Nozzles:

- Red Nozzle (0-degree spray pattern)
- Yellow Nozzle (15-degree spray pattern)
- Green Nozzle (25-degree spray pattern)
- White Nozzle (40-degree spray pattern)
- Turbo Nozzle

SETUP INSTRUCTIONS

1. Connect the High Pressure Hose to the Trigger Gun:

Attach one end of the 25-foot high pressure hose to the M22 x 11.5 outlet on the trigger gun. Ensure the connection is tight to prevent leaks.



Image: The 25-foot high pressure hose with M22 connections.

2. Connect the High Pressure Hose to the Pressure Washer:

Connect the other end of the high pressure hose to the outlet of your electric pressure washer. Confirm a secure connection.

3. Attach the M22 Lance to the Trigger Gun:

Screw the metal M22 lance into the M22 x 15mm inlet of the trigger gun. This lance features a quick-connect outlet for nozzles.



Image: The metal M22 lance with quick connect fitting.

4. Select and Attach a Quick Connect Nozzle:

Choose the desired quick connect nozzle based on your cleaning task. Pull back the collar on the lance's quick connect outlet, insert the nozzle, and release the collar to lock it in place. Ensure the nozzle is firmly seated before operation.



Image: The five quick connect nozzles (red 0°, yellow 15°, green 25°, white 40°, and turbo nozzle).

5. Prepare the Foam Cannon (Optional):

Fill the 25-ounce foam cannon with an appropriate pressure washer detergent. Attach the foam cannon to the quick connect outlet of the lance, similar to attaching a nozzle.





Image: The 25-ounce foam cannon with quick connect fitting.

OPERATING INSTRUCTIONS

Once the kit is properly assembled and connected to your pressure washer, follow these steps for operation:

- 1. Water Supply:**

Connect your pressure washer to a suitable water source and turn on the water supply.

- 2. Power On:**

Plug in and turn on your electric pressure washer.

- 3. Purge Air:**

Before engaging the pressure, squeeze the trigger gun to allow water to flow through the system and purge any air. This helps protect the pump.



Image: The trigger gun with its comfortable grip and integrated trigger.

4. Begin Cleaning:

Direct the spray at the cleaning surface, maintaining a safe distance. Squeeze the trigger to begin spraying. Adjust the distance and nozzle angle as needed for effective cleaning.

5. Using the Foam Cannon:

If using the foam cannon, ensure it is filled with detergent and attached. The foam cannon allows for adjustable detergent flow and spray angle. After applying detergent, switch back to a standard nozzle for rinsing.

6. Nozzle Selection Guide:

- **Red Nozzle (0-degree):** Provides a concentrated, powerful stream for direct cleaning on small, tough spots. Use with caution as it can damage surfaces.
- **Yellow Nozzle (15-degree):** Offers a precise spray for intensive cleaning over small to medium surfaces, such as removing stubborn dirt.
- **Green Nozzle (25-degree):** Ideal for general cleaning over medium to large surfaces, suitable for most tasks like cleaning decks or driveways.
- **White Nozzle (40-degree):** Delivers a wide, gentle spray for delicate cleaning over large surfaces, such as vehicles or windows.
- **Turbo Nozzle:** Rotates a 0-degree stream in a circular motion, providing a wider cleaning path with high impact for faster cleaning of tough areas.

7. Shut Down:

When finished, release the trigger, turn off the pressure washer, and then turn off the water supply. Squeeze the trigger gun again to release any remaining pressure in the system.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your kit.

- **Cleaning:** After each use, rinse the foam cannon, nozzles, lance, and trigger gun with clean water to remove any detergent residue or debris.
- **Storage:** Store all components in a clean, dry place, away from direct sunlight and freezing temperatures. Coil the high-pressure hose neatly to prevent kinks.
- **Nozzle Care:** Inspect nozzles regularly for blockages. Use a nozzle cleaning tool (not included) if necessary to clear any obstructions.
- **Connections:** Periodically check all connections for wear or damage. Replace O-rings if leaks occur.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low pressure or no spray	Nozzle clogged	Clean the nozzle
	Insufficient water supply	Ensure water supply is fully open
	Air in the system	Purge air by squeezing trigger without power
	Loose connections	Tighten all hose and gun connections
Water leaking from connections	Loose connections	Tighten connections securely
	Worn or damaged O-rings	Inspect and replace O-rings if damaged
Foam cannon not producing foam	Incorrect detergent concentration	Adjust detergent knob or concentration
	Foam cannon clogged	Clean foam cannon components
	Air intake blocked	Check for blockages in air intake

SPECIFICATIONS

Feature	Detail
Model Number	PW909300K
Brand	AR Blue Clean
Maximum Operating Pressure	2900 PSI
Maximum Temperature	140°F
Hose Length	25 Feet
Trigger Gun Inlet Connection	M22 x 15mm
Trigger Gun Outlet Connection	M22 x 11.5
Foam Cannon Capacity	25 Ounce
Material	Metal (Lance), Plastic (Trigger Gun, Foam Cannon)
Item Weight	5.95 pounds
Product Dimensions	4 x 21.75 x 10.5 inches

WARRANTY INFORMATION

This AR Blue Clean PW909300K Trigger Gun Kit comes with a **90-day warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For warranty claims or further details, please contact AR Blue Clean customer support.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or general inquiries, please visit the official AR Blue Clean website or contact their customer service department. Refer to your pressure washer's manual for specific compatibility questions.
Online Support: www.arblueclean.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question