

GAMI H66250

Gami Moka H66250 Sliding Door Wardrobe Instruction Manual

Model: H66250

INTRODUCTION

Welcome to your new Gami Moka H66250 sliding door wardrobe. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your wardrobe to ensure long-lasting use and satisfaction. Please read these instructions carefully before beginning assembly or use.

SAFETY INFORMATION

Adhering to these safety guidelines is crucial for preventing injury and damage to the product.

- **Two-Person Assembly:** Due to the size and weight of the wardrobe (approximately 219 kg), assembly must be performed by at least two adults.
- **Wall Anchoring:** For stability and safety, especially in homes with children, it is highly recommended to secure the wardrobe to a wall using appropriate anti-tip hardware (not included, but essential for tall furniture).
- **Children and Pets:** Keep children and pets away from the assembly area. Small parts can be a choking hazard.
- **Heavy Components:** Exercise caution when handling heavy panels and components to avoid personal injury.
- **Proper Tools:** Use the correct tools as specified in the assembly instructions.
- **Level Surface:** Assemble the wardrobe on a clean, flat, and stable surface to prevent damage and ensure proper alignment.

PACKAGE CONTENTS

Before beginning assembly, carefully unpack all components and verify that all parts are present and undamaged. Refer to the parts list provided with your specific product packaging.

- Wardrobe panels (side, top, bottom, back)
- Sliding door panels (including mirrored door)

- Internal partitions and shelf supports
- Adjustable shelves
- Hanging rails
- Sliding door mechanisms and rollers
- Assembly hardware (screws, dowels, connectors, etc.)

SETUP AND ASSEMBLY INSTRUCTIONS

The Gami Moka H66250 wardrobe requires assembly. Due to its significant size and weight, assembly by two adults is strongly recommended. For optimal results and to ensure proper functionality, professional assembly is advised.

Tools Required

- Phillips head screwdriver
- Flathead screwdriver
- Hammer
- Measuring tape
- Spirit level
- Drill (for wall anchoring, if applicable)

General Assembly Steps

While specific detailed steps are provided in the packaging, the general assembly sequence is as follows:

1. **Unpack and Identify:** Lay out all components and hardware. Compare them with the parts list to ensure everything is present.
2. **Assemble Base Frame:** Construct the base and top frames of the wardrobe.
3. **Attach Side and Back Panels:** Secure the side panels to the base and top frames. Install the back panels to square the structure.
4. **Install Internal Structure:** Insert internal partitions, shelf supports, and hanging rails according to your desired configuration.
5. **Place Shelves:** Position the adjustable shelves in the central section.
6. **Mount Sliding Door Mechanisms:** Attach the upper and lower tracks for the sliding doors.
7. **Install Sliding Doors:** Carefully lift and place the sliding doors onto their respective tracks. Adjust as necessary for smooth operation.
8. **Wall Anchoring:** Secure the wardrobe to the wall using appropriate hardware to prevent tipping.



Figure 1: The Gami Moka H66250 two-door sliding wardrobe in a wood finish. This image shows the overall aesthetic and design of the assembled unit.

OPERATING INSTRUCTIONS

Sliding Doors

The Gami Moka H66250 wardrobe features two sliding doors equipped with soft-close mechanisms for quiet and gentle operation.

- **Opening:** To open a door, gently slide it horizontally along its track in the desired direction.
- **Closing:** To close a door, push it until the soft-close mechanism engages. The door will then smoothly and silently glide into its fully closed position. Avoid forcing the doors.

Adjustable Shelves

The central section of the wardrobe includes 10 adjustable shelves (five on each side of the central partition), allowing you to customize storage space.

- **Adjusting Height:** To change a shelf's height, first remove any items from the shelf. Then, lift the shelf and remove the shelf pins from their current holes. Reposition the pins into the desired holes at the new height, ensuring they are level, and place the shelf back onto the pins.



Figure 2: Dimensions of the Gami Moka H66250 wardrobe. The wardrobe measures 220 cm in height, 249 cm in width, and 63 cm in depth.

MAINTENANCE AND CARE

Regular maintenance will help preserve the appearance and functionality of your Gami Moka H66250 wardrobe.

Cleaning

- **Wood Finish:** For the charcoal oak imitation paper coating, wipe surfaces with a soft, slightly damp cloth. Immediately dry with a clean, dry cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the finish.
- **Mirror:** Clean the mirror surface with a standard glass cleaner and a lint-free cloth. Spray cleaner onto the cloth, not directly onto the mirror, to prevent liquid from seeping into the edges.

General Care

- **Fittings:** Periodically check all screws, bolts, and fittings for tightness. Re-tighten if necessary to maintain structural integrity.
- **Sliding Tracks:** Ensure the sliding door tracks are kept clean and free from dust, debris, or obstructions to maintain smooth and silent operation.
- **Surface Protection:** Avoid placing hot or wet items directly on the wardrobe surfaces. Use coasters or protective mats when necessary.
- **Sunlight Exposure:** Prolonged exposure to direct sunlight can cause fading or discoloration of the finish.

TROUBLESHOOTING

This section addresses common issues you might encounter with your wardrobe.

Problem	Possible Cause	Solution
Doors do not slide smoothly	Debris in tracks, misaligned rollers, loose fittings	Clean tracks thoroughly. Check roller alignment and adjust if needed. Ensure all door mechanism fittings are tight.
Doors do not close completely	Obstruction in the track, soft-close mechanism issue, wardrobe not level	Remove any obstructions. Inspect the soft-close mechanism for damage. Verify the wardrobe is on a level surface.
Wardrobe feels unstable or wobbly	Loose assembly fittings, not secured to wall, uneven floor	Tighten all assembly screws and bolts. Ensure the wardrobe is securely anchored to the wall. Use shims if the floor is uneven.
Shelves are not level	Shelf pins incorrectly inserted, unevenly distributed weight	Ensure shelf pins are fully inserted into corresponding holes at the same height. Redistribute weight evenly on the shelf.



Figure 3: A view of the Gami Moka H66250 wardrobe, showcasing the mirrored door on the left side and the wood-finished doors on the right.

SPECIFICATIONS

Detailed specifications for the Gami Moka H66250 Sliding Door Wardrobe.

Feature	Detail
Brand	GAMI
Model Number	H66250
Dimensions (Depth x Width x Height)	63 cm x 249 cm x 220 cm
Weight	Approximately 219 kg

Feature	Detail
Material	Particle board with charcoal oak imitation paper coating, 2 mm ABS edges
Doors	2 Sliding Doors with Soft-Close Mechanism
Internal Configuration	2 hanging sections (on outer sides), 10 adjustable shelves (2x5 in central section)
Special Features	Integrated mirror, easy-care coating, French manufacturing



Figure 4: A different perspective of the Gami Moka H66250 wardrobe, showing the mirrored door on the right side.

WARRANTY AND SUPPORT

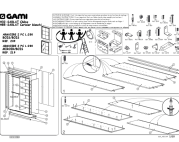
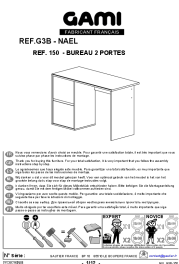
GAMI products are manufactured to high-quality standards. For specific warranty details regarding your Gami Moka H66250 wardrobe, please refer to the warranty information provided with your purchase documentation or contact

your retailer.

For assistance with assembly, missing parts, or any other product-related inquiries, please contact your authorized GAMI retailer or GAMI customer support directly. Please have your model number (H66250) and purchase information ready when contacting support.

© 2023 GAMI. All rights reserved.

Related Documents - H66250

	<p>GAMI NAEL 2-Door Wardrobe Assembly Instructions (REF. G3B, REF. 520)</p> <p>Comprehensive assembly guide for the GAMI NAEL 2-door wardrobe, model REF. G3B / REF. 520. Includes detailed step-by-step instructions, parts list, safety warnings, maintenance tips, and wall-mounting guidance. Manufactured by GAUTIER FRANCE.</p>
	<p>GAMI Cyrus Wardrobe Assembly Instructions and Product Information</p> <p>Detailed assembly instructions, parts list, hardware guide, and usage information for GAMI Cyrus wardrobes (models REF.HOH, REF.HOJ, REF.HOK, REF.HOS) available in sizes REF.150 (L153), REF.200 (L183), and REF.210 (L200). Includes safety warnings, maintenance tips, and recycling guidelines.</p>
	<p>GAMI REF.J66 CLAY REF. 250 High Cabinet 4 Doors Assembly Instructions and User Manual</p> <p>Detailed assembly instructions and user guide for the GAMI REF.J66 CLAY REF. 250 High Cabinet with 4 doors. Includes parts list, step-by-step assembly, maintenance, and safety information.</p>
	<p>GAMI SARLAT Wardrobe Assembly Instructions</p> <p>Comprehensive step-by-step assembly guide for GAMI SARLAT wardrobes, including models H32-SARLAT Chêne (REF. 209) and H85-SARLAT Cerisier blanchi (REF. 219). Features detailed instructions, parts lists, care advice, and warranty information.</p>
	<p>GAMI NAEL Bureau 2 Portes Assembly Instructions</p> <p>Comprehensive assembly instructions for the GAMI NAEL Bureau 2 Portes, including safety advice, material information, and maintenance tips.</p>

