

[Manuals.plus](#) /

› [Bayside](#) /

› Bayside Calypso 213017 Ceiling Fan User Manual

Bayside 213017

Bayside Calypso 213017 Ceiling Fan User Manual

Model: 213017

1. INTRODUCTION AND OVERVIEW

This manual provides essential instructions for the safe installation, operation, and maintenance of your Bayside Calypso 213017 Ceiling Fan. Please read this manual thoroughly before installation and retain it for future reference.

The Bayside Calypso 213017 is a durable ceiling fan featuring robust ABS plastic housing and blades. Its lightweight design makes it suitable for various environments, including areas with high humidity or coastal regions. The fan operates at 45 Watts, 230 Volts, and has a diameter of 122 cm.

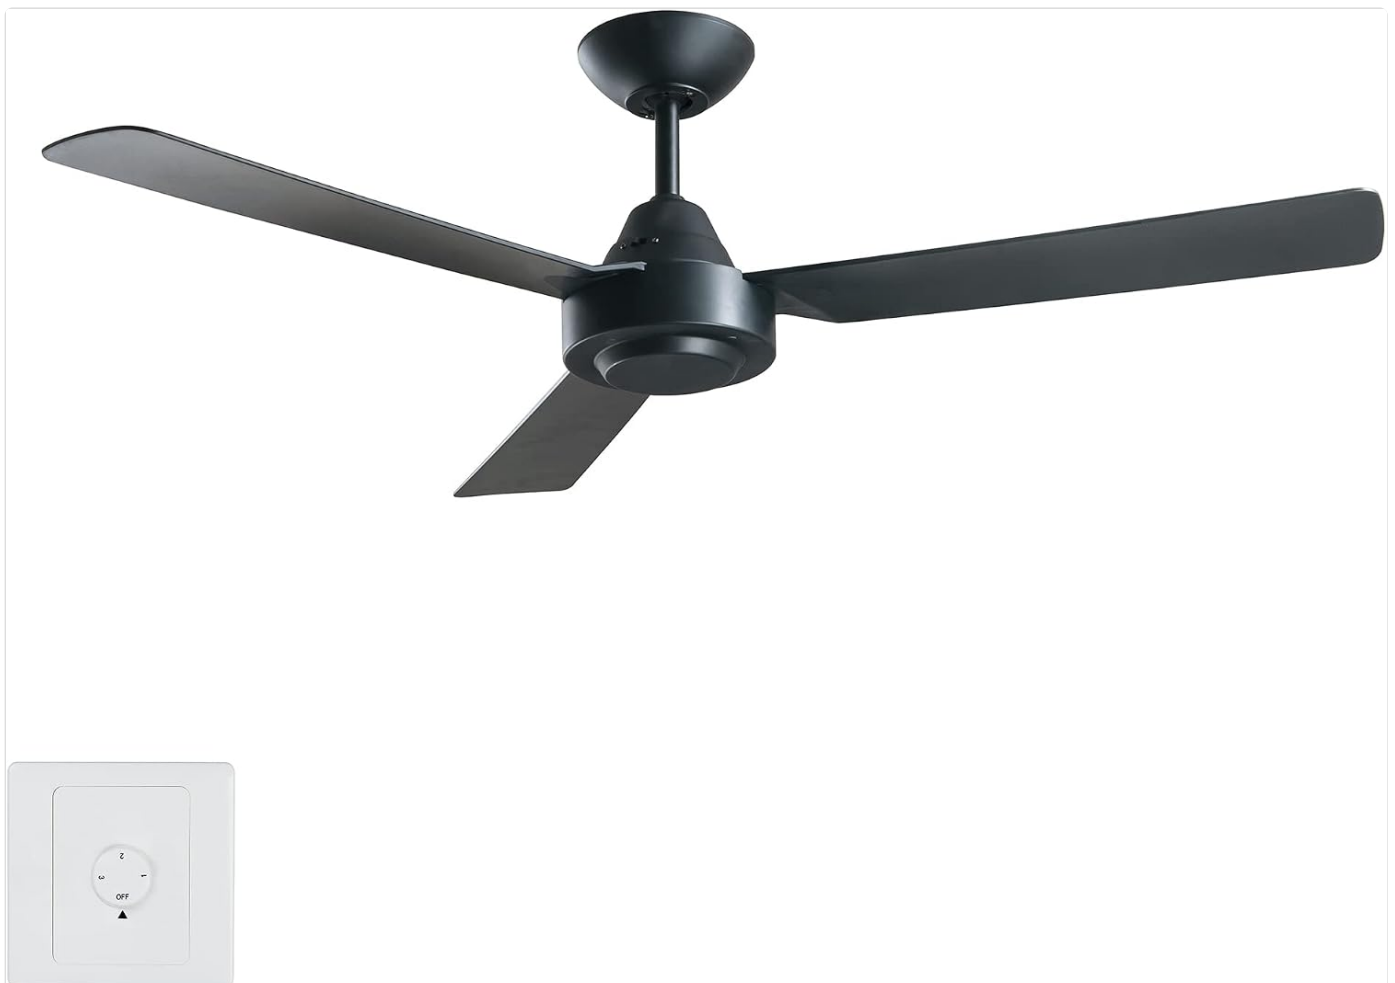


Image 1.1: The Bayside Calypso 213017 Ceiling Fan, shown with its included wall control unit.

2. SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or injury, always follow these safety precautions:

- Ensure the main power supply is disconnected before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with all local electrical codes.
- The fan must be securely mounted to a structural ceiling joist or a suitable support system capable of holding the fan's weight (4 kg).
- Ensure the fan blades are at least 2.3 meters (7.5 feet) from the floor and have adequate clearance from walls or other obstructions.
- Do not insert any objects into the path of the rotating blades.
- Do not attempt to repair or modify the fan yourself. Contact qualified service personnel for repairs.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation:

- Bayside Calypso 213017 Ceiling Fan Unit (Motor housing, blades, downrod, canopy)
- Wall Control Unit
- Mounting Hardware (screws, washers, wire nuts)
- Instruction Manual (this document)

4. SETUP AND INSTALLATION

Follow these general steps for installing your ceiling fan. Refer to the detailed diagrams for specific component placement.

1. **Turn off Power:** Before beginning, ensure the power to the installation location is turned off at the circuit breaker.
2. **Mounting Bracket Installation:** Secure the mounting bracket to a ceiling joist or a fan-rated outlet box. Use appropriate screws and washers to ensure a stable attachment.
3. **Assemble Downrod and Motor:** Attach the downrod to the fan motor housing. Carefully feed the electrical wires through the downrod.
4. **Hang Fan Assembly:** Lift the fan assembly and hang it onto the mounting bracket. This will free your hands for wiring.
5. **Electrical Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the separate wiring instructions (if applicable) or by a qualified electrician. Ensure all connections are secure and insulated with wire nuts.
6. **Attach Blades:** Securely attach the fan blades to the motor housing using the provided screws.
7. **Install Canopy:** Slide the canopy up to the ceiling and secure it to cover the wiring and mounting bracket.
8. **Install Wall Control:** Install the wall control unit in a standard wall switch box. Connect the wires as per the diagram provided with the wall control.
9. **Restore Power:** Once installation is complete and all connections are checked, restore power at the circuit breaker.



Abmessungen



dimensions



dimensions



dimensioni



dimensiones


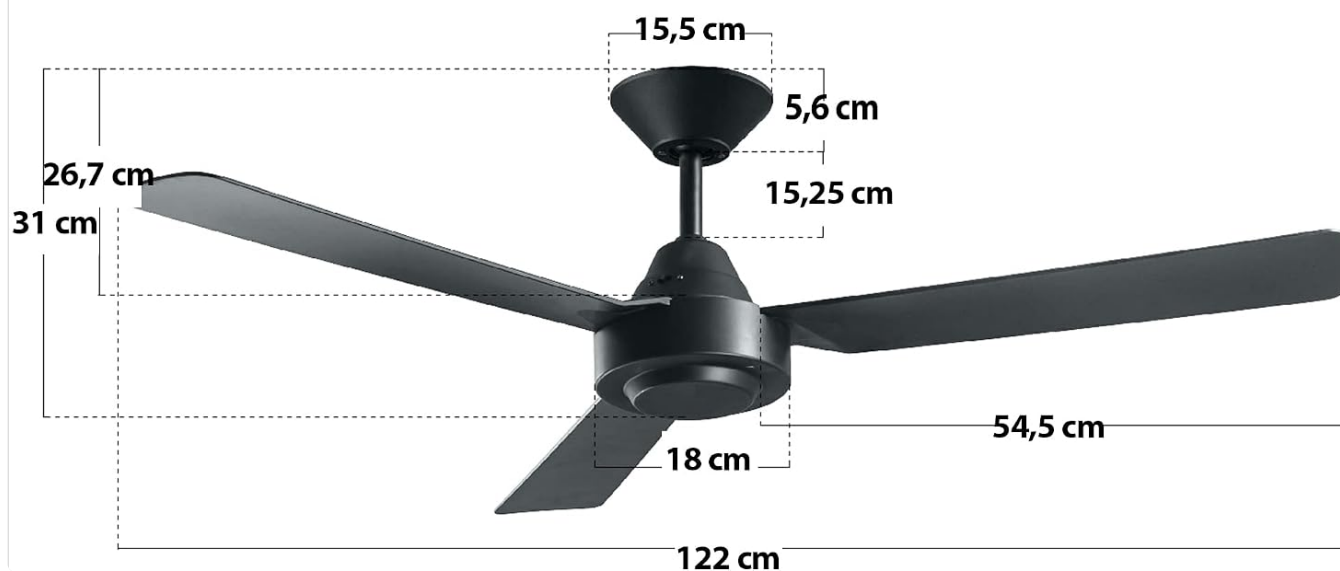


Image 4.1: Detailed dimensions of the Bayside Calypso 213017 Ceiling Fan, showing a diameter of 122 cm and a height of 31 cm.

- 🇩🇪 Inkl. Wandschaltung
🇬🇧 incl. wall control 🇫🇷 interrupteur mural incluse
🇮🇹 incluso interruttore a muro 🇪🇸 incluye interruptor de pared

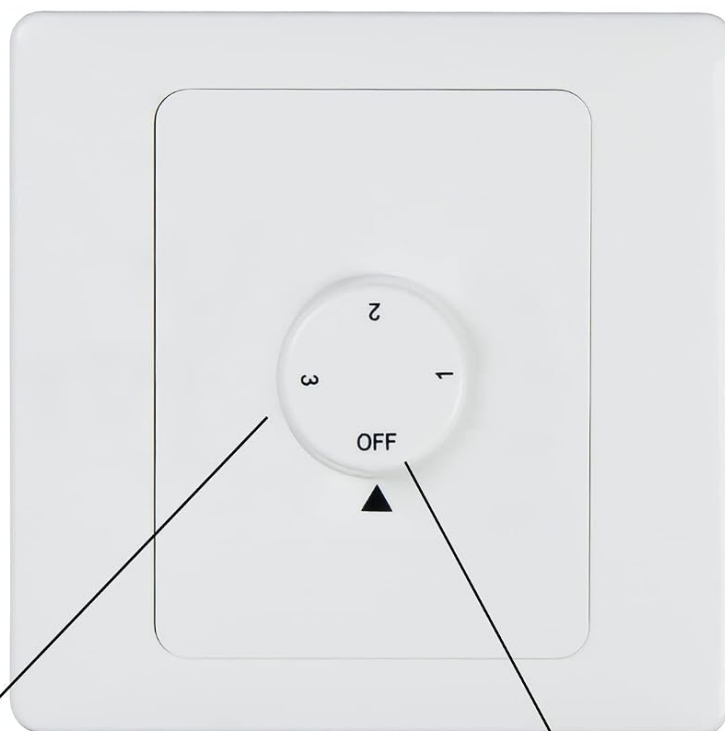

- 🇩🇪 3 Geschwindigkeitsstufen
🇬🇧 3 speed levels
🇫🇷 3 niveaux de vitesse
🇮🇹 3 livelli di velocità
🇪🇸 3 niveles de velocidad

- 🇩🇪 Ventilator aus
🇬🇧 fan off
🇫🇷 ventilateur marrêt
🇮🇹 ventilatore spento
🇪🇸 ventilador apagado

Image 4.2: The included wall control unit, featuring an OFF switch and three speed levels (1, 2, 3).

5. OPERATING INSTRUCTIONS

Your Bayside Calypso 213017 Ceiling Fan is operated via the included wall control unit.

5.1. Fan Speed Control

- The wall control features an "OFF" switch to turn the fan off.
- Select from three speed settings: "1" for low speed, "2" for medium speed, and "3" for high speed. Adjust the dial to your desired setting.

5.2. Winter and Summer Modes

The fan includes a reversible motor for year-round use. A switch on the fan motor housing (usually located near the downrod) allows you to change the direction of blade rotation.

- **Summer Mode (Counter-clockwise rotation):** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.

- **Winter Mode (Clockwise rotation):** Blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling, helping to distribute heat more evenly.

🇩🇪 2 verschiedene Modi
 🇬🇧 2 different modes 🇫🇷 2 modes différents
 🇮🇹 2 modalità diverse 🇪🇸 2 modos diferentes



🇩🇪 Wintermodus
 🇬🇧 winter mode
 🇫🇷 mode hiver
 🇮🇹 modalità inverno
 🇪🇸 modo invierno



🇩🇪 Sommermodus
 🇬🇧 summer mode
 🇫🇷 mode été
 🇮🇹 mode été
 🇪🇸 modo verano



Image 5.1: Illustration of the fan's Winter (clockwise rotation) and Summer (counter-clockwise rotation) modes.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish. Ensure power is off before cleaning.
- **Tighten Screws:** Check all screws on the fan blades and mounting hardware annually. Tighten any loose screws to prevent wobbling or noise.
- **No Lubrication Required:** The fan motor is permanently lubricated and does not require additional oiling.

7. TROUBLESHOOTING

If you experience issues with your Bayside Calypso 213017 Ceiling Fan, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Faulty wall control.	Check circuit breaker; Verify all wire connections are secure; Test wall control.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Ensure blades are balanced (use a balancing kit if necessary); Check mounting bracket for secure attachment.
Noisy operation	Loose screws; Motor hum; Blades hitting an obstruction.	Check and tighten all screws; Ensure canopy is not vibrating against the ceiling; Verify no obstructions are near the blades.
Airflow is weak	Incorrect fan direction (Winter mode); Low speed setting.	Ensure fan is in Summer mode for downward airflow; Increase speed setting on wall control.

If the problem persists after attempting these solutions, contact a qualified electrician or the manufacturer's customer support.



8. SPECIFICATIONS

Technical details for the Bayside Calypso 213017 Ceiling Fan:

Brand	Bayside
Model Number	213017
Color	Black
Dimensions (L x W x H)	122 x 122 x 30 cm
Weight	4 Kilograms
Power	45 Watts
Voltage	230 Volts
Material	Plastic, Metal
Number of Speeds	3
Noise Level	50 Decibels (max)
Special Feature	Lightweight
Recommended Use	Ventilation
Mounting Type	Ceiling Mount
Room Type	All rooms (Ideal for rooms up to 20 m²)
Manufacturer	Beacon Lighting

🇩🇪 Zuverlässiger Deckenventilator
🇬🇧 reliable ceiling fan 🇫🇷 ventilateur de plafond fiable
🇮🇹 ventilatore a soffitto affidabile 🇪🇸 ventilador de techo fiable



Image 8.1: Overview of key features including noise level (18-34 dB), power consumption (11-39 W), number of blades (3), seasonal modes, and diameter (122 cm).

🇩🇪 Ideal für Räume bis 20 m²
🇬🇧 for rooms up to 20 m² 🇫🇷 pour les petites pièces jusqu'à 20 m²
🇮🇹 per stanze fino a 20 m² 🇪🇸 para salas de hasta 20 m²



Image 8.2: The Bayside Calypso 213017 Ceiling Fan is ideal for rooms up to 20 square meters.

9. WARRANTY AND SUPPORT

Warranty information for the Bayside Calypso 213017 Ceiling Fan is typically provided at the point of purchase or included with the product packaging. Please refer to these documents for specific warranty terms and conditions.

For technical support, replacement parts, or further assistance, please contact the manufacturer, Beacon Lighting, or your retailer. Keep your purchase receipt as proof of purchase for warranty claims.

Availability of spare parts: Information unavailable on spare parts.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question