

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kwikset](#) /

› [Kwikset Polo Interior Privacy Door Knob \(Model 93001-918\) Instruction Manual](#)

Kwikset 93001-918

Kwikset Polo Interior Privacy Door Knob (Model 93001-918) Instruction Manual

Brand: Kwikset | Model: 93001-918

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Kwikset Polo Interior Privacy Door Knob. Designed for interior bed and bath applications, this polished chrome door knob offers reliable privacy with a classic aesthetic. Please read these instructions thoroughly before beginning installation or use to ensure proper function and longevity of your product.



Image: Front view of the Kwikset Polo Interior Privacy Door Knob in polished chrome.

SETUP & INSTALLATION

The Kwikset Polo Interior Privacy Door Knob is designed for easy, do-it-yourself installation. All necessary hardware and detailed directions are included to ensure a hassle-free setup.

What's Included:

- Exterior and Interior Knobs
- Screws
- Adjustable Latch
- Strike Plate
- Emergency Unlock Tool
- Installation Hardware
- Install Guide

Door Compatibility:

This door knob fits standard size doors from 1-3/8" to 1-3/4" thick. The adjustable latch backset can be set from 2-3/8" to 2-3/4" with a simple twist during installation.

Installation Process:

1. Prepare the door: Ensure the door is properly bored for the knob and latch.
2. Install the latch: Insert the adjustable latch into the door edge and secure it with screws. Adjust the backset if necessary.
3. Assemble the knobs: Place the exterior and interior knobs onto the door, aligning the spindle with the latch mechanism.
4. Secure the knobs: Fasten the knobs together using the provided screws.
5. Install the strike plate: Attach the strike plate to the door frame, ensuring proper alignment with the latch.
6. Test operation: Verify that the knob turns smoothly and the privacy lock functions correctly.



Image: All components included in the Kwikset Polo Interior Privacy Door Knob package.

Your browser does not support the video tag.

Video: A demonstration of installing a universal handle door knob, applicable to the Kwikset Polo Privacy Knob.

OPERATING INSTRUCTIONS

The Kwikset Polo Privacy Door Knob is designed for simple and intuitive operation, providing privacy for interior spaces like bedrooms and bathrooms.

Locking the Door:

From the inside of the room, locate the turn button on the interior knob. Rotate the turn button to engage the lock mechanism. The door is now locked, providing privacy.



Image: Close-up of the interior knob showing the turn button for locking.

Unlocking the Door:

- **From the Inside:** Simply rotate the turn button back to its original position. The door will now be unlocked.
- **From the Outside (Emergency Release):** In case of emergency or accidental lockout, locate the small hole on the exterior knob. Insert the provided emergency unlock tool (or a small, pointed object like a paperclip) into this hole and push firmly to disengage the lock.

Your browser does not support the video tag.

Video: A comparison of round and egg-shaped privacy door knobs, demonstrating the locking and unlocking mechanism.

MAINTENANCE

To ensure the continued smooth operation and appearance of your Kwikset Polo Privacy Door Knob, follow these simple maintenance guidelines:

- **Cleaning:** Clean the door knob regularly with a soft, damp cloth. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the polished chrome finish.
- **Lubrication:** Periodically apply a small amount of silicone-based lubricant to the latch mechanism and the interior moving parts to maintain smooth operation. Do not use oil-based lubricants, as they can attract dust and debris.
- **Tightening Screws:** Over time, screws may loosen. Periodically check and tighten all mounting screws to ensure the knob remains securely attached to the door.

TROUBLESHOOTING

If you encounter any issues with your Kwikset Polo Privacy Door Knob, refer to the following common troubleshooting steps:

- **Knob is Loose:** Check and tighten the mounting screws on both sides of the door. Ensure the spindle is correctly engaged with the latch.
- **Latch Not Engaging/Retracting:** Verify that the latch is installed correctly and is not obstructed. Ensure the adjustable


backset is set appropriately for your door. Lubricate the latch mechanism if it feels stiff.

- **Privacy Lock Not Working:** Ensure the turn button on the interior knob is fully engaging the locking mechanism. If using the emergency release, ensure the tool is inserted correctly and pushed firmly.
- **Door Not Closing Properly:** Check the alignment of the strike plate on the door frame. Adjust its position slightly if it is preventing the latch from fully engaging.

If these steps do not resolve the issue, please contact Kwikset customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	93001-918
Brand	Kwikset
Material	Metal (Bronze handle)
Color	Polished Chrome
Exterior Finish	Chrome
Product Dimensions	7.36" L x 3.42" W
Item Weight	14.9 ounces
Lock Type	Turn Button Lock
Door Thickness	1-3/8" to 1-3/4"
Adjustable Latch Backset	2-3/8" to 2-3/4"
Hand Orientation	Ambidextrous
Certifications	Grade 3 BHMA certified (Security, Durability, Finish)
UPC	883351635394

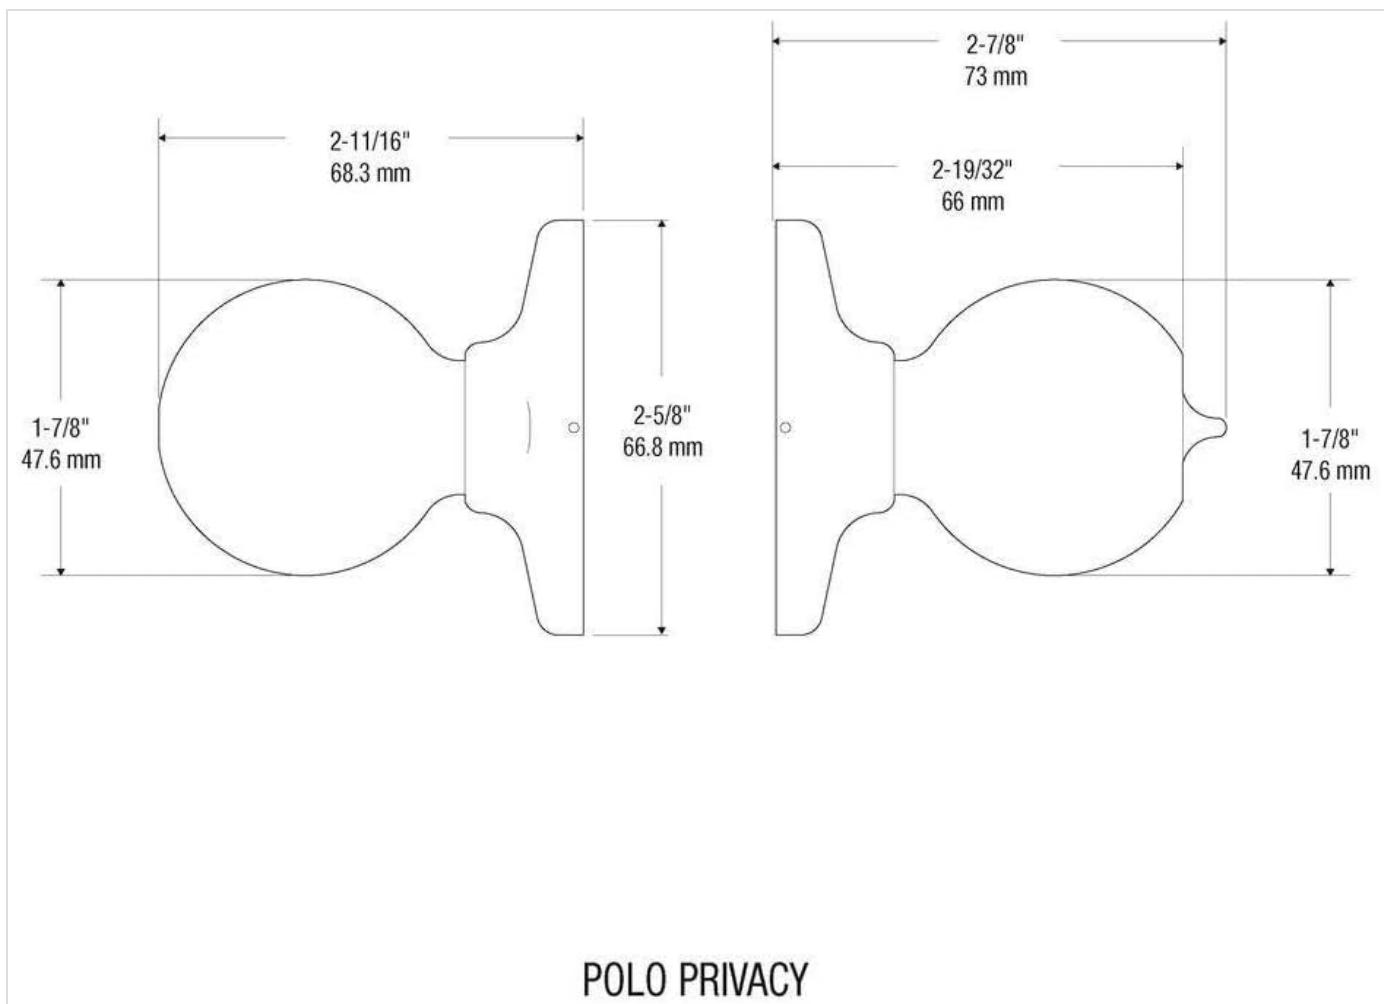

POLO PRIVACY

Image: Diagram showing the dimensions of the Kwikset Polo Privacy Door Knob.

WARRANTY & SUPPORT

Warranty Information:

Kwikset products are backed by a **lifetime mechanical and finish warranty**. For specific details regarding warranty coverage and claims, please refer to the official Kwikset warranty documentation or visit the Kwikset website.

Customer Support:

For any questions, technical assistance, or support needs, please visit the official Kwikset website or contact their customer service department. You can find contact information and FAQs on their website: www.kwikset.com