

[Manuals.plus](#) /

› [Yale Security](#) /

› Yale Security Deadbolt Lock Instruction Manual

Yale Security YRD256-NR-619

Yale Security Deadbolt Lock Instruction Manual

Model: YRD256-NR-619

1. INTRODUCTION

The Yale Assure Lock SL is a sleek and modern touchscreen deadbolt designed to provide convenient, key-free access to your home. This non-connected version offers reliable security through a digital keypad, allowing users to unlock their door with a unique entry code. Its simple installation process makes it an ideal upgrade for enhancing home security and curb appeal. For advanced smart home integration, an optional Yale Smart Module can be added (sold separately).

2. KEY FEATURES

- **Key-Free Unlocking:** Enter your 4-8 digit entry code on the digital keypad for convenient access.
- **Auto-Lock Functionality:** Automatically locks the door after a set period, providing peace of mind.
- **Easy Installation:** Designed for simple installation on standard doors (1-3/8" to 2-1/4" thick).
- **Code Sharing:** Create and share unique entry codes with trusted individuals, eliminating the need for physical keys.
- **Upgradeability:** Compatible with Yale Smart Modules (sold separately) for Wi-Fi connectivity and smart home integration.

3. SETUP AND INSTALLATION

The Yale Assure Lock SL is designed for straightforward installation, typically replacing an existing deadbolt. Ensure your door meets the thickness requirements (1-3/8" to 2-1/4"). The package includes all necessary mounting hardware and an installation manual with a door template for precise fitting.



Figure 3.1: Yale Assure Lock SL - Front and Interior View. This image displays both the exterior touchscreen keypad and the interior thumbturn mechanism of the lock.

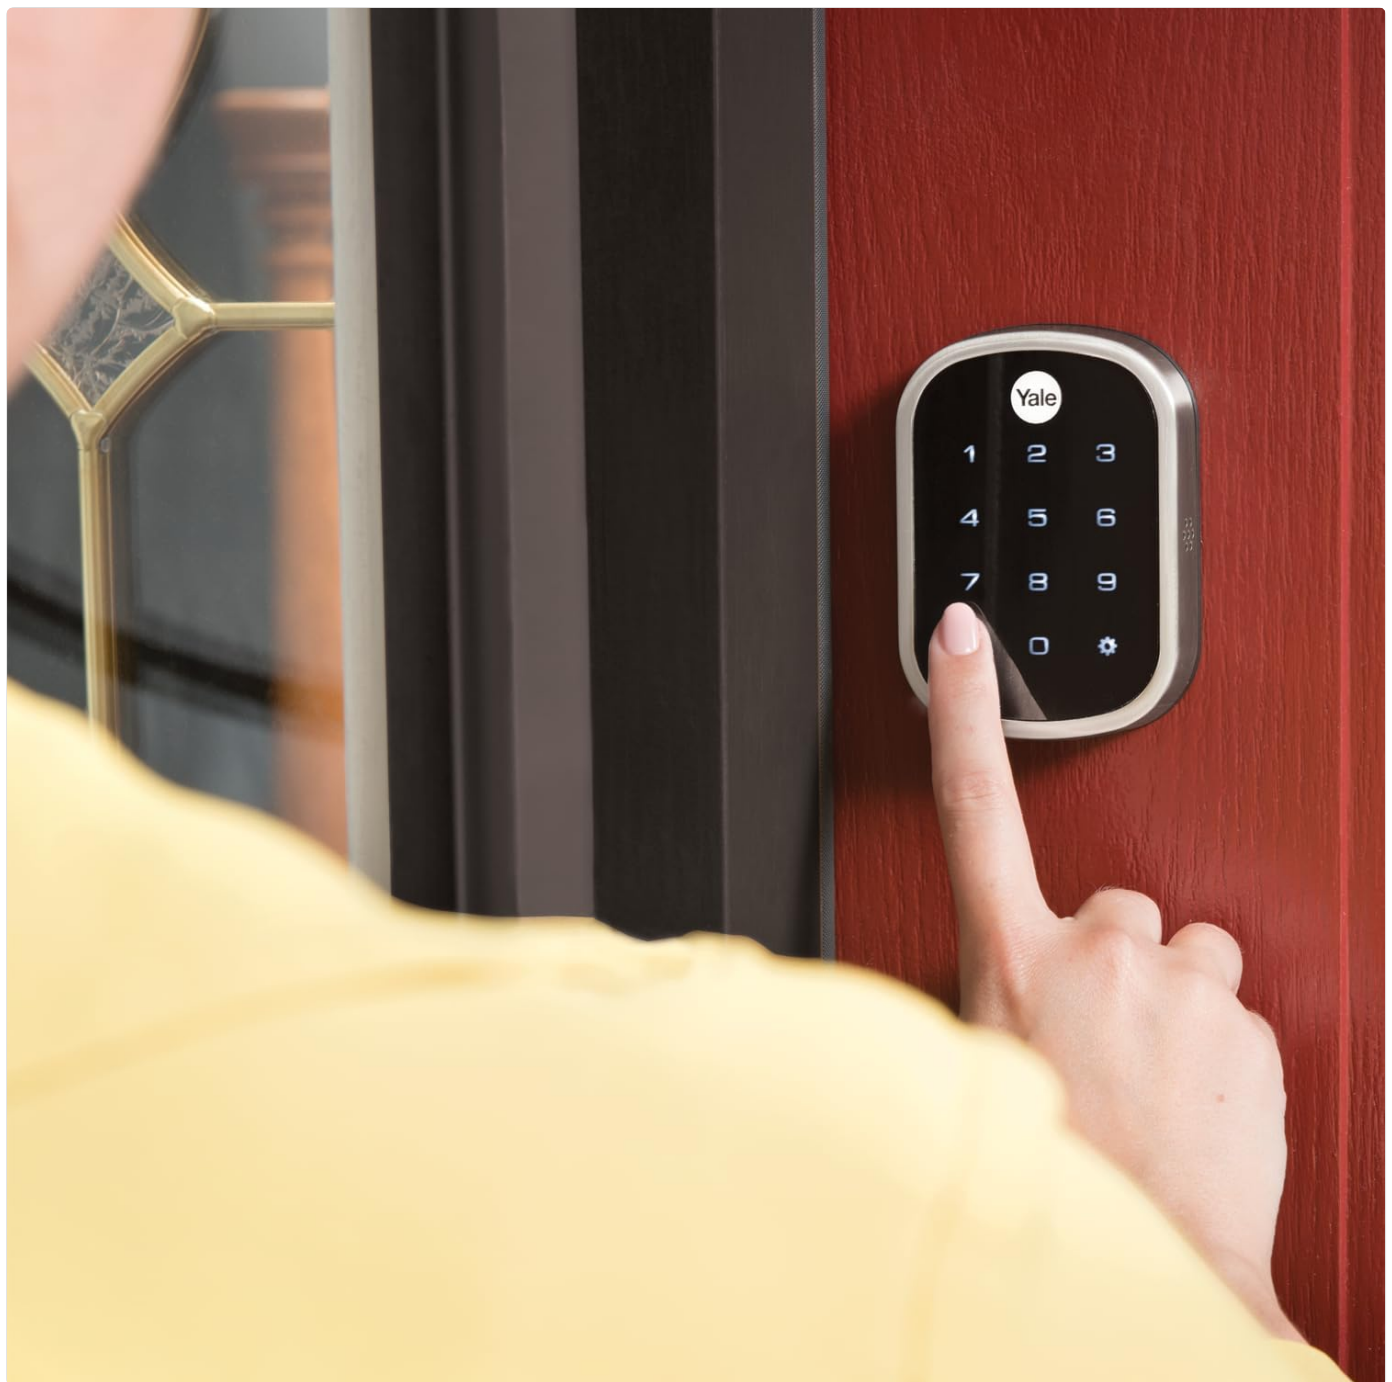


Figure 3.2: Yale Assure Lock SL - Front View on Door. A user is shown interacting with the illuminated touchscreen keypad on a door, demonstrating code entry.



Figure 3.3: Yale Assure Lock SL - Side View of Deadbolt Mechanism. This image provides a close-up of the deadbolt mechanism and the

side profile of the lock components when installed on a door frame.

For detailed step-by-step instructions, please refer to the comprehensive User Manual (PDF) available at: [User Manual \(PDF\)](#).

4. OPERATING INSTRUCTIONS

4.1 Unlocking the Door

1. **Wake the Keypad:** Touch the touchscreen with your palm or fingertips to activate the keypad.
2. **Enter Code:** Input your 4-8 digit entry code.
3. **Confirm:** Press the checkmark (✓) icon to confirm your code. The deadbolt will retract, allowing you to open the door.

4.2 Locking the Door

- **One-Touch Locking:** Simply tap the keypad with your palm or fingertips. The deadbolt will extend to secure the door.
- **Auto-Lock:** The lock can be configured to automatically lock itself after a preset time (e.g., 30 seconds, 1 minute, etc.) once the door is closed. Refer to the full user manual for auto-lock settings.

4.3 Managing Entry Codes

The Yale Assure Lock SL allows you to create and manage multiple unique entry codes for different users. This feature is ideal for granting temporary access to guests, service providers, or family members without distributing physical keys. Code management is typically done directly on the keypad or through the Yale Access app if a smart module is installed.

5. MAINTENANCE

To ensure optimal performance and longevity of your Yale Assure Lock SL, regular maintenance is recommended:

- **Cleaning:** Wipe the touchscreen keypad with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronics.
- **Battery Replacement:** The lock is powered by 4 AA batteries (included). Replace all four batteries simultaneously when the low battery indicator appears or when the lock's response time slows.
- **Door Alignment:** Periodically check that your door and frame are properly aligned. Misalignment can cause the deadbolt to bind, leading to excessive battery drain or operational issues.

6. TROUBLESHOOTING

If you encounter issues with your Yale Assure Lock SL, consider the following common troubleshooting steps:

- **Keypad Not Responding:** Ensure the batteries are not depleted. Replace them if necessary. If the keypad is unresponsive after battery replacement, try a factory reset (refer to the full user manual for instructions).
- **Deadbolt Not Extending/Retracting:** Check for any obstructions in the door frame or strike plate. Ensure the door is properly aligned and not binding. Low batteries can also affect motor performance.
- **Incorrect Code Entry:** If the lock repeatedly rejects your code, ensure you are entering the correct 4-8 digit sequence followed by the checkmark icon. Verify that the master code has not been changed.
- **Auto-Lock Malfunction:** Confirm that the auto-lock feature is enabled in the settings. Ensure the door sensor (if applicable)

is clean and unobstructed.

For more complex issues or advanced troubleshooting, consult the detailed User Manual or contact Yale Security customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Yale Security
Model Name	Yale Assure Lock SL in Satin Nickel (Non-Connected) (YRD256)
Model Number	YRD256-NR-619
Color	Satin Nickel
Material	Stainless Steel
Lock Type	Deadbolt, Keypad
Special Features	Auto-Lock, One-Touch Lock, Back-Lit Keypad
Item Dimensions (L x W x H)	0.66 x 2.59 x 3.62 inches
Item Weight	3 Pounds
Power Source	Battery powered
Batteries	4 AA batteries required (included)
Connectivity Protocol	Z-Wave (with optional module)
Display Style	Touchscreen
UPC	081023000017

8. WARRANTY & SUPPORT

The Yale Assure Lock SL comes with a comprehensive warranty to ensure your peace of mind:

- **Finish and Mechanical:** Lifetime limited warranty.
- **Electronics:** One-year warranty.

For further assistance, detailed product information, or to download the full user manual, please visit the official Yale Security website or refer to the provided PDF document: [User Manual \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B077YRHFHQ>

More documents and user manuals: <https://manuals.plus/>