

[Manuals.plus](#) /

› [Seneca River Trading](#) /

› Bissell Upholstery Tool for Multi Cordless Handheld Vacuum, 1612787 Instruction Manual

Seneca River Trading 1612787

Bissell Upholstery Tool for Multi Cordless Handheld Vacuum (Model 1612787)

INTRODUCTION

This manual provides instructions for the proper use and maintenance of the Bissell Upholstery Tool, model 1612787. This accessory is designed to enhance the cleaning capabilities of compatible Bissell Multi Cordless Handheld Vacuums, specifically for upholstery surfaces.

SETUP AND INSTALLATION

The Bissell Upholstery Tool (1612787) is designed for attachment to the suction nozzle of your Bissell Multi Cordless Handheld Vacuum. It is crucial to have the correct suction nozzle, part number 1612785, for proper installation and function.

1. **Identify the Suction Nozzle:** Locate the suction nozzle on your Bissell Multi Cordless Handheld Vacuum. Ensure it is part number 1612785.
2. **Attach the Upholstery Tool:** Align the opening of the upholstery tool with the end of the suction nozzle. Gently push the tool onto the nozzle until it is securely seated. A firm connection is necessary for optimal suction.
3. **Verify Attachment:** Lightly pull on the upholstery tool to confirm it is firmly attached and will not detach during use.



Image 1: The Bissell Upholstery Tool (Model 1612787) ready for attachment. This tool is designed to connect directly to the vacuum's suction nozzle.

OPERATING INSTRUCTIONS

Once the upholstery tool is securely attached, your vacuum is ready for cleaning various upholstered surfaces.

- **Power On:** Turn on your Bissell Multi Cordless Handheld Vacuum.
- **Surface Application:** Gently move the upholstery tool across the fabric surface you wish to clean. Use slow, overlapping strokes to ensure thorough cleaning.
- **Targeted Cleaning:** The design of the tool allows for effective removal of dirt, pet hair, and debris from cushions, car interiors, stairs, and other upholstered items.

Compatible Vacuum Models: This upholstery tool is compatible with Bissell Multi Cordless Handheld Vacuum models: 1985, 1985T, 2151A, 21512, 21513, 2151C, and 2151V.

MAINTENANCE

Regular cleaning of the upholstery tool will help maintain its effectiveness and prolong its lifespan.

- **Detachment:** After use, turn off the vacuum and carefully detach the upholstery tool from the suction nozzle.
- **Cleaning:** Remove any accumulated debris, lint, or hair from the tool's opening and surface. A soft cloth or brush can be used for this purpose.
- **Storage:** Store the tool in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not attach securely.	Incorrect suction nozzle or improper alignment.	Ensure you are using the Bissell suction nozzle part number 1612785. Realign the tool and push firmly until it is securely seated.
Reduced suction when using the tool.	Blockage in the tool or nozzle, or improper attachment.	Check the tool and suction nozzle for any obstructions and remove them. Verify the tool is securely attached to the nozzle. Ensure the vacuum's dust bin is not full and filters are clean.

SPECIFICATIONS

- **Model Name:** Bissell Upholstery Tool for Multi Cordless Handheld Vacuum
- **Model Number:** 1612787
- **Brand:** Seneca River Trading (Replacement Part for Bissell)
- **Color:** Black
- **Material:** Plastic
- **Dimensions:** Approximately 7"L x 9"W x 2"H
- **Item Weight:** 5 ounces
- **Compatible Suction Nozzle:** Part Number 1612785 (Required)
- **Compatible Vacuum Models:** 1985, 1985T, 2151A, 21512, 21513, 2151C, 2151V

WARRANTY INFORMATION

This product comes with a 30-day warranty. For details regarding warranty claims or service, please refer to your purchase documentation or contact the seller directly.

CUSTOMER SUPPORT

For further assistance, questions, or to purchase replacement parts, please contact the retailer or manufacturer where the product was acquired. Ensure you have your product model number (1612787) and purchase information available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B077ZD5N7C>

More documents and user manuals: <https://manuals.plus/>