

[Manuals.plus](#) /

> [Hyper Tough](#) /

> Hyper Tough 9pc Cutting Tools User Manual

Hyper Tough B0781K5PYG

Hyper Tough 9pc Cutting Tools User Manual

Model: B0781K5PYG

INTRODUCTION

This user manual provides essential information for the safe and effective use, maintenance, and care of your Hyper Tough 9pc Cutting Tools set. Please read this manual thoroughly before using the tools and retain it for future reference.



Figure 1: Overview of the Hyper Tough 9pc Cutting Tools set.

PRODUCT COMPONENTS

The Hyper Tough 9pc Cutting Tools set includes the following items:

- 1 x 8-inch Household Scissors
- 1 x 5-1/2-inch Scissors
- 1 x Mini Foldable Scissors
- 1 x Plastic Scraper with Blade
- 1 x Precision Knife
- 3 x Precision Knife Blades
- 1 x 9mm Snap-Off Knife

SETUP

Precision Knife Blade Installation

1. Unscrew the chuck at the tip of the precision knife handle.
2. Carefully insert one of the precision knife blades into the opening, ensuring it is seated firmly.
3. Tighten the chuck securely to hold the blade in place. Ensure the blade is stable and does not wobble before use.



Figure 2: Installing a blade into the precision knife.

Plastic Scraper Blade Installation

The plastic scraper comes with a pre-installed blade. To replace it, locate the blade release mechanism (often a button or slide) and carefully remove the old blade. Insert a new compatible blade and ensure it clicks into place securely.

OPERATING INSTRUCTIONS

General Use of Scissors

The household scissors, 5-1/2-inch scissors, and mini foldable scissors are designed for cutting various materials such as paper, fabric, and vegetable stems. Hold the scissors firmly, place the material between the blades, and apply even pressure to cut.

Using the Precision Knife

The precision knife is ideal for detailed cutting, scoring, and trimming tasks on materials like paper, cardstock, and thin

plastics. Hold the knife like a pen, ensuring a firm grip. Apply light, consistent pressure and guide the blade along your desired cutting line. Always cut away from your body.



Figure 3: Using the precision knife for detailed work.

Using the Plastic Scraper

The plastic scraper is suitable for removing stickers, labels, paint, or other residues from surfaces without causing damage. Hold the scraper firmly and apply gentle, even pressure to scrape away unwanted material. Test on an inconspicuous area first to ensure compatibility with the surface.



Figure 4: The plastic scraper in action.

Using the 9mm Snap-Off Knife

The 9mm snap-off knife is designed for general-purpose cutting of materials like cardboard, plastic sheeting, and wallpaper. Extend the blade to the desired length using the slider. When the blade becomes dull, snap off the worn segment at the score line to reveal a new sharp edge. Always snap off blades away from your body and dispose of segments safely.

MAINTENANCE

Cleaning

After each use, wipe down all tools with a clean, dry cloth to remove any debris or moisture. For stubborn residues, a damp cloth with mild soap can be used, followed by thorough drying. Do not immerse tools in water.

Blade Replacement

Replace blades on the precision knife, plastic scraper, and snap-off knife when they become dull or damaged. Refer to the "Setup" section for blade installation instructions. Always use compatible replacement blades.

Storage

Store all cutting tools in a dry, safe place, out of reach of children and pets. Keep blades protected when not in use, ideally in their original packaging or a dedicated tool case, to prevent accidental injury and maintain blade sharpness.

TROUBLESHOOTING

- **Dull Blades:** If a tool is not cutting effectively, the blade may be dull. Replace the blade following the instructions in the "Maintenance" section.
- **Blade Wobbling (Precision Knife):** Ensure the chuck is tightened securely. If the blade still wobbles, check if the blade is correctly seated or if it is the correct size for the knife.
- **Difficulty Cutting:** Ensure the material is appropriate for the tool being used. Apply consistent, firm pressure. For thicker materials, multiple passes may be required.

SAFETY INFORMATION

- Always handle sharp tools with extreme care.
- Keep fingers and other body parts away from cutting edges.
- Always cut away from your body.
- Use appropriate personal protective equipment, such as gloves, when handling or replacing blades.
- Ensure your work surface is stable and clear of obstructions.
- Do not use tools for purposes other than their intended design.
- Keep out of reach of children and pets.
- Dispose of old blades safely in a puncture-resistant container.

SPECIFICATIONS

Attribute	Value
Brand	Hyper Tough
Model	B0781K5PYG
Material	Plastic, Rubber (Handle), Plastic (Blade)
Item Weight	11.4 ounces
Package Dimensions	11.1 x 6.89 x 1.34 inches
Special Features	Foldable (Mini Scissors)

WARRANTY AND SUPPORT

Information regarding specific warranty terms for Hyper Tough products is typically provided with the product packaging or available on the manufacturer's official website. For product support, inquiries, or to purchase replacement parts, please refer to the contact information provided by Hyper Tough.

As of the publication of this manual, specific warranty details are not provided here. Please check the official Hyper Tough website or your product packaging for the most current warranty and support information.

© 2024 Hyper Tough. All rights reserved.
Manual Version: 1.0

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question