

Schou RAWLINK 36685

RAWLINK Full HD Dashcam User Manual

Model: RAWLINK 36685

INTRODUCTION

Thank you for choosing the RAWLINK Full HD Dashcam. This device is designed to record your journeys, providing a reliable record of events on the road. Featuring Full HD video recording, night vision capabilities, loop recording, and a 2.4-inch LCD display, it ensures clear video and photo capture. This manual provides detailed instructions for installation, operation, and maintenance to help you get the most out of your dashcam.



Image: The RAWLINK Full HD Dashcam product box, showcasing the device and its key features.

SAFETY INFORMATION

- Do not operate the dashcam while driving. Adjust settings only when the vehicle is safely parked.
- Ensure the dashcam is securely mounted and does not obstruct the driver's view or interfere with airbag deployment.
- Avoid exposing the device to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture.
- Use only the original power adapter and accessories provided with the dashcam.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel for assistance.
- Regularly format the memory card to ensure optimal performance and prevent data corruption.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- RAWLINK Full HD Dashcam
- Memory Card
- Mounting Accessories (Suction Cup Mount)
- Car Charger (USB power cable and cigarette lighter adapter)
- User Manual (this document)



Image: All components included in the RAWLINK Dashcam package: the dashcam unit, suction cup mount, USB cable, and car charger.

PRODUCT OVERVIEW

Familiarize yourself with the various parts of your RAWLINK Dashcam:



Image: Front view of the dashcam attached to its suction cup mount, showing the screen and control buttons.



Image: Side view of the dashcam, highlighting the main camera lens and the "FULL HD CAR DVR 1080P" branding.



Image: Close-up front view of the dashcam's 2.4-inch LCD display, showing a road scene, and the control buttons below the screen.



Image: Side view of the dashcam, displaying the USB, AV, and HDMI ports for connectivity.

Key Components:

- **2.4" LCD Display:** For live view, playback, and menu navigation.
- **Camera Lens:** Wide-angle lens for capturing road footage.
- **Control Buttons:** (OK, Up, Down, Menu/Mode, Power) for operating the device.
- **Microphone:** For audio recording.
- **Speaker:** For audio playback.
- **USB Port:** For power supply and data transfer.
- **HDMI Port:** For connecting to an external display.
- **MicroSD Card Slot:** For memory card insertion.
- **Mounting Slot:** For attaching the suction cup mount.

SETUP

1. Mounting the Dashcam

1. Clean the windshield area where you intend to mount the dashcam. Ensure it is free from dust and grease.
2. Attach the suction cup mount to the dashcam's mounting slot.
3. Press the suction cup firmly against the windshield and flip the lever to secure it. Position the dashcam so it does not obstruct your view and is centered for optimal recording.
4. Adjust the angle of the camera lens to ensure it captures the road ahead clearly.



Image: The RAWLINK Dashcam securely mounted on the car's windshield, positioned below the rearview mirror.



Image: A hand demonstrating the installation of the RAWLINK Dashcam onto the windshield using its suction cup mount.

2. Inserting the Memory Card

- Ensure the dashcam is powered off.
- Locate the MicroSD card slot on the side of the dashcam.
- Insert the memory card with the gold contacts facing the back of the dashcam until it clicks into place.
- To remove, gently push the card in until it springs out.
- *Note: A memory card is required for recording. It is recommended to use a Class 10 or higher MicroSD card. Format the card within the dashcam's settings before first use.*

3. Connecting Power

- Connect the small end of the USB power cable to the dashcam's USB port.
- Connect the other end of the USB power cable to the car charger adapter.

- Plug the car charger adapter into your vehicle's cigarette lighter socket.
- Route the cable neatly along the windshield trim to avoid obstructing your view.
- The dashcam will typically power on automatically when the vehicle's ignition is turned on and begin recording.

OPERATING INSTRUCTIONS

Power On/Off

- **Automatic:** The dashcam will power on and start recording automatically when connected to power and the vehicle's ignition is on. It will power off automatically when the ignition is turned off.
- **Manual:** Press and hold the Power button to manually turn the dashcam on or off.

Recording Modes

- **Loop Recording:** The dashcam continuously records video in short segments (e.g., 1, 3, or 5 minutes). When the memory card is full, the oldest unlocked files are automatically overwritten by new recordings. This ensures continuous recording without manual intervention.



Image: A visual representation of loop recording, showing how older video segments are overwritten as new footage is recorded, ensuring continuous operation.

- **Emergency Recording (G-Sensor):** The built-in G-sensor detects sudden impacts or collisions. When triggered, the current video segment is automatically locked and saved to prevent it from being overwritten by loop recording. These files are stored in a separate folder on the memory card.
- **Parking Monitor:** If enabled in settings, the dashcam can automatically start recording when it detects motion or impact while the vehicle is parked. This feature requires a continuous power supply (e.g., hardwire kit, not included).

Menu Navigation

- Press the **Menu/Mode** button to enter the settings menu.
- Use the **Up** and **Down** buttons to navigate through menu options.
- Press the **OK** button to select an option or confirm a setting.
- Press the **Menu/Mode** button again to exit the menu.

Key Settings:

- **Resolution:** Set video resolution (e.g., 1080p Full HD).

- **Loop Recording:** Adjust segment length (1/3/5 minutes).
- **G-Sensor Sensitivity:** Adjust sensitivity for emergency recording (Low/Medium/High).
- **Date/Time:** Set the correct date and time for accurate timestamps on recordings.
- **Night Vision:** The dashcam features an automatic night vision function to enhance low-light recording. No manual adjustment is typically required.
- **Image Stabilization:** The dashcam includes an automated image stabilizer to reduce blur from vehicle vibrations. This is an automatic feature.
- **White Balance:** The dashcam automatically adjusts white balance for accurate color representation in varying light conditions. This is an automatic feature.
- **Format:** Format the MicroSD card to clear all data and prepare it for recording.

Playback

- In standby mode, press the **Mode** button to switch to playback mode.
- Use the **Up** and **Down** buttons to browse through recorded videos and photos.
- Press the **OK** button to play a selected video or view a photo.
- Press the **Mode** button again to exit playback mode.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the dashcam's lens and screen. Do not use abrasive cleaners or solvents.
- **Memory Card Management:**
 - Regularly format the memory card (e.g., once a month) to prevent data corruption and ensure smooth operation.
 - Back up important video files to a computer before formatting the card.
 - Replace the memory card if you notice frequent errors or degraded performance.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates. Follow the instructions carefully if an update is available.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Dashcam does not power on.	• Check if the power cable is securely connected to the dashcam and the car charger. • Ensure the car charger is properly plugged into the vehicle's cigarette lighter socket. • Verify that the vehicle's cigarette lighter socket is receiving power. • The internal battery might be depleted. Charge the device for a few minutes.

Problem	Possible Cause / Solution
Dashcam stops recording or shows "Card Full" error.	• The memory card is full of locked files. Format the memory card (back up important files first). • The memory card is not compatible or faulty. Try a different Class 10 or higher MicroSD card. • Loop recording might be disabled. Check settings.
Video footage is blurry or unclear.	• Clean the camera lens. • Ensure the protective film has been removed from the lens. • Check if the dashcam is securely mounted and not vibrating excessively. • Adjust video resolution settings to Full HD (1080p).
Dashcam frequently restarts or freezes.	• Format the memory card. • Try a different, high-quality memory card. • Ensure the power supply is stable. • Perform a factory reset via the settings menu.
G-Sensor is too sensitive/not sensitive enough.	• Adjust the G-sensor sensitivity setting in the menu (Low/Medium/High).

SPECIFICATIONS

Feature	Detail
Model Name	RAWLINK
Model Number	36685
Video Recording Resolution	1080p (Full HD)
Display Size	2.4 inches LCD
Connectivity Technology	USB
Mounting Type	Windshield Suction Cup Mount
Control Method	Touch (Buttons)
Special Features	Night Vision Function, Loop Recorder, Automated Image Stabilizer, White Balance
Included Components	Memory Card, Mounting Accessories, Display
Product Dimensions	5 x 5 x 5 cm
Item Weight	358 g

Feature	Detail
Battery	1 Lithium-Ion Battery (included)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer where you purchased the RAWLINK Dashcam. Keep your proof of purchase for warranty claims.

© 2024 Schou. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question