

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Thrustmaster](#) /

› [Thrustmaster T80 Ferrari 488 GTB Edition Racing Wheel User Manual \(PS4 / PS5 / PC\)](#)

Thrustmaster T80 Ferrari 488 GTB Edition

Thrustmaster T80 Ferrari 488 GTB Edition Racing Wheel User Manual

For PlayStation 4, PlayStation 5, and PC

[Introduction](#) [Package Contents](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

The Thrustmaster T80 Ferrari 488 GTB Edition racing wheel is a replica of the Ferrari 488 GTB steering wheel, officially licensed by Ferrari and PlayStation 4. This racing wheel is designed to provide a realistic driving experience across various PlayStation 4, PlayStation 5, and PC racing games. It features integrated PlayStation buttons for system navigation and an ergonomic design suitable for different racing game genres.

The wheel incorporates a realistic linear resistance mechanism with automatic re-centering, utilizing Thrustmaster's exclusive "Bungee Cord" system. It also includes sequential paddle shifters and a large, adjustable pedal set for precise control over acceleration and braking. A central clamping system ensures optimal stability during use.

PACKAGE CONTENTS

- Thrustmaster T80 Ferrari 488 GTB Edition Racing Wheel
- 2-Pedal Pedal Set
- Fastening System
- Warranty Information
- User Manual (this document)

SETUP

1. Attaching the Racing Wheel to a Surface

The T80 Ferrari 488 GTB Edition racing wheel features a central clamping system designed for optimal stability. This system allows you to securely attach the wheel to a desk or table.

1. Place the racing wheel on a flat, stable surface (e.g., a desk or table).
2. Position the central clamping system's wide jaws against the edge of the surface.

3. Tighten the clamping screw until the wheel is firmly secured and does not move during use.

2. Connecting the Pedal Set

Connect the pedal set to the racing wheel using the dedicated connector cable. Ensure the connection is secure.

3. System Connection

The racing wheel is compatible with PlayStation 4, PlayStation 5, and PC (Windows 7/8/10).

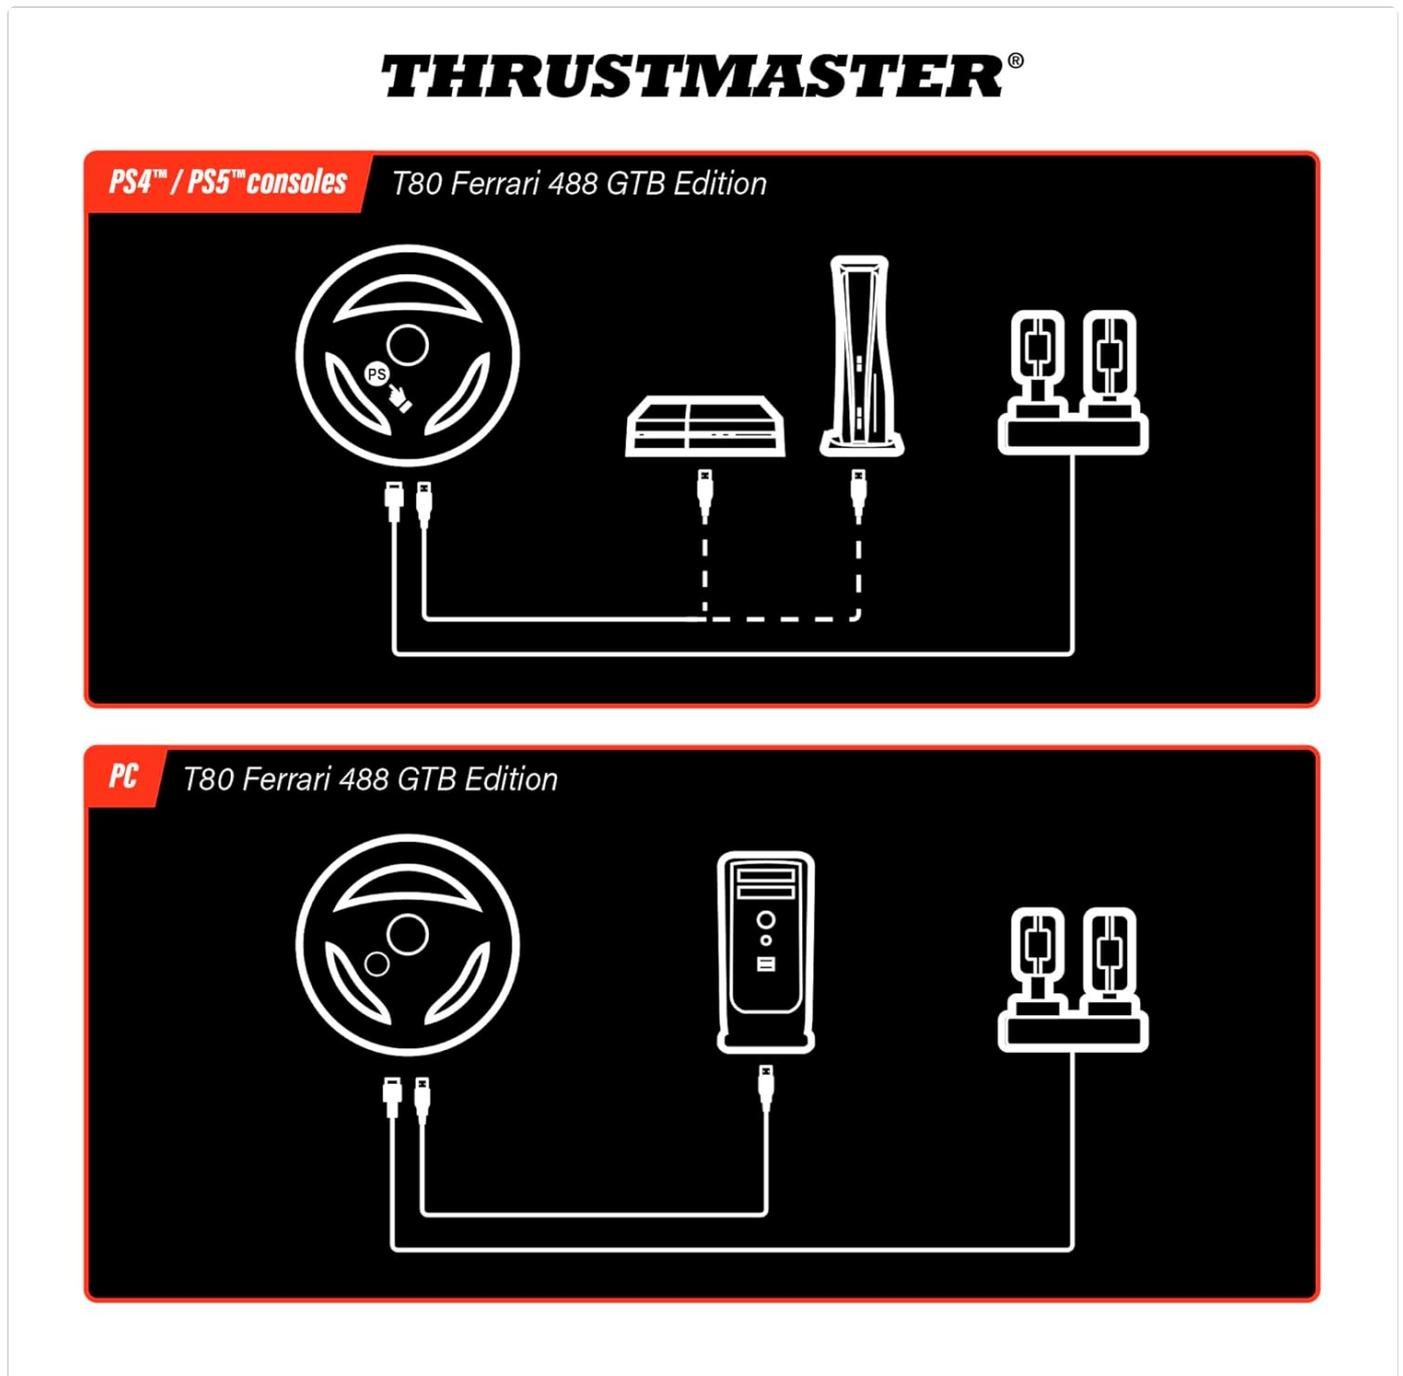


Image: Connection diagram for the T80 Ferrari 488 GTB Edition racing wheel. The top diagram illustrates connecting the wheel and pedals to a PlayStation 4 or PlayStation 5 console via USB. The bottom diagram shows connecting the wheel and pedals to a PC via USB.

For PlayStation 4 / PlayStation 5:

1. Ensure your console is powered off.
2. Connect the racing wheel's USB cable to an available USB port on your PlayStation console.
3. Power on your console. The system should automatically detect the racing wheel.
4. Press the "PS" button on the racing wheel to assign it to a user profile.

For PC:

1. Connect the racing wheel's USB cable to an available USB port on your PC.
2. Windows will automatically detect the device and install the necessary drivers. If prompted, follow the on-screen instructions.
3. For optimal performance, it is recommended to download and install the latest drivers and firmware from the official Thrustmaster support website.

OPERATING INSTRUCTIONS

Steering Wheel Controls



Image: Front view of the T80 Ferrari 488 GTB Edition racing wheel, showing the Ferrari logo, PlayStation buttons (PS, SHARE, OPTIONS), action buttons, D-pad, and paddle shifters.

- **Integrated PlayStation Buttons:** The wheel features "PS", "SHARE", and "OPTIONS" buttons for easy navigation within the PlayStation system and game menus.

- **Action Buttons & D-pad:** The wheel is equipped with 11 action buttons and a D-pad, which can be configured for various in-game functions.
- **Sequential Paddle Shifters:** Two digital paddle shifters (up and down) are mounted on the wheel, allowing for quick gear changes. These are designed for durability and responsiveness.
- **Linear Resistance & Auto-Centering:** The "Bungee Cord" mechanism provides realistic linear resistance to steering movements and automatic re-centering, enhancing control and immersion. The rotation angle is 240 degrees.

Pedal Set Operation



Image: Top-down view of the T80 Ferrari 488 GTB Edition racing wheel and its two-pedal set. The pedals are shown with a wide footrest, indicating their adjustable nature for comfortable use.

- **Two-Pedal Set:** Includes an accelerator pedal and a brake pedal.
- **Adjustable Tilt & Footrest:** The pedal set features adjustable tilt and a wide footrest, allowing users to customize

their setup for comfort and precise control.

- **Progressive Brake Resistance:** The brake pedal offers progressive resistance, simulating a more realistic braking feel.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Thrustmaster T80 Ferrari 488 GTB Edition racing wheel.

- **Cleaning:** Use a soft, dry cloth to clean the racing wheel and pedal set. Avoid using abrasive cleaners or solvents, as these can damage the surfaces.
- **Storage:** When not in use, store the device in a clean, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Ensure all cables are not kinked or pinched to prevent damage.
- **Firmware Updates:** Regularly check the official Thrustmaster support website for any available firmware updates. Keeping your device's firmware up-to-date can improve performance and compatibility.

TROUBLESHOOTING

If you encounter issues with your racing wheel, please refer to the following common solutions:

Problem	Possible Solution
Wheel not detected by console/PC	Ensure all cables are securely connected. Try a different USB port. Restart your console/PC. For PC, ensure the latest drivers are installed from the Thrustmaster website. For PlayStation, ensure you press the "PS" button on the wheel to assign it to a user profile.
No force feedback or linear resistance	Verify that the game you are playing supports force feedback. Check in-game settings to ensure force feedback is enabled and configured correctly. Ensure the wheel's firmware is up-to-date.
Pedals not responding	Ensure the pedal set cable is firmly connected to the racing wheel. Test the pedals in the device's calibration utility (PC) or in a different game.
Buttons not working correctly	Check in-game control settings to ensure buttons are mapped correctly. Ensure the wheel's firmware is up-to-date.

If these solutions do not resolve your issue, please contact Thrustmaster customer support.

SPECIFICATIONS

Feature	Detail
Model Number	4160672
Compatibility	PlayStation 4, PlayStation 5, PC (Windows 7/8/10)

Feature	Detail
Steering Wheel Diameter	28 cm (11 inches)
Rotation Angle	240 degrees
Resistance System	Realistic linear resistance with automatic re-centering (Thrustmaster "Bungee Cord" system)
Shifters	2 digital sequential paddle shifters
Buttons	11 action buttons, 1 D-pad, "PS", "SHARE", "OPTIONS" buttons
Pedal Set	2-pedal set (accelerator, brake) with adjustable tilt and wide footrest; progressive brake resistance
Clamping System	Central clamping system with wide jaws for optimal stability
Product Dimensions	14.57 x 12.4 x 12.4 inches
Item Weight	8.6 pounds
Manufacturer	Thrustmaster
Date First Available	December 9, 2017

WARRANTY & SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty information included in your package for details regarding coverage and duration. For technical support, driver downloads, firmware updates, and additional product information, please visit the official Thrustmaster support website:

www.thrustmaster.com

You can also find support resources and contact information on the [Thrustmaster Store on Amazon](#).

