

## Easypix 20148

# GoXtreme Enduro Black Action Camera User Manual

Model: 20148

[Information](#)   [Setup](#)   [Operating](#)   [Introduction](#)   [Safety](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

### 1.1 Product Overview

The GoXtreme Enduro Black is a versatile action camera designed to capture high-quality photos and videos in various environments. It features 4K Ultra HD video recording (interpolated), a 2-inch display, and built-in Wi-Fi for easy connectivity and remote control via a mobile application. Its robust design, coupled with the included waterproof case, allows for use in challenging conditions, including underwater up to 30 meters.



Figure 1.1: GoXtreme Enduro Black Action Camera with Waterproof Case.

This image displays the GoXtreme Enduro Black action camera encased in its transparent waterproof housing. The camera's black body is visible through the clear case, with the lens prominently featured on the front. Side buttons and the top latch of the housing are also visible, indicating its readiness for outdoor and underwater use.

## 1.2 Package Contents

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact your retailer.

- GoXtreme Enduro Black Action Camera
- Wrist Remote Control
- Waterproof Case (up to 30m)
- Protective Case

- Helmet Mount
- Bike Mount
- Support Straps
- Tripod Adapter
- Rechargeable Lithium Battery (900 mAh)
- USB Cable
- User Manual (this document)

## 2. SAFETY INFORMATION

---

To ensure safe operation and prevent damage to your device, please read and adhere to the following safety guidelines:

- **Waterproof Case:** Always ensure the waterproof case is properly sealed and free of debris before submerging the camera in water. Test the case without the camera first.
- **Battery Safety:** Use only the specified battery type. Do not expose batteries to extreme temperatures, direct sunlight, or fire. Do not short-circuit or disassemble the battery.
- **Temperature:** Operate the camera within recommended temperature ranges. Avoid extreme hot or cold environments.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals or solvents. For the waterproof case, rinse with fresh water after saltwater use and allow to air dry.
- **Storage:** Store the camera and accessories in a cool, dry place away from direct sunlight and moisture.
- **Disposal:** Dispose of the camera and battery according to local regulations. Do not dispose of electronic waste in general household trash.

## 3. SETUP

---

### 3.1 Battery Installation and Charging

1. Locate the battery compartment on the bottom of the camera.
2. Open the battery compartment cover.
3. Insert the provided 900 mAh lithium battery, ensuring the contacts align correctly.
4. Close the battery compartment cover securely.
5. Connect the camera to a USB power source using the supplied USB cable to fully charge the battery before first use. The charging indicator will typically show the charging status.

### 3.2 Micro SD Card Installation

The camera requires a Micro SD card (not included) for storing photos and videos. A minimum of U3 Class 10 speed rating is recommended for optimal performance, with support for cards up to 64GB.

1. Locate the Micro SD card slot on the side of the camera.
2. Gently insert the Micro SD card into the slot with the contacts facing the correct direction (refer to the camera's markings). Push until it clicks into place.
3. To remove, gently push the card again until it springs out.

### 3.3 Attaching the Waterproof Case and Mounts

The waterproof case protects your camera from water, dust, and impacts. Various mounts are included for different activities.

1. Open the waterproof case by releasing the top latch.
2. Carefully place the GoXtreme Enduro Black camera inside the case, ensuring it fits snugly.
3. Close the case and firmly press down the top latch until it clicks, ensuring a watertight seal.
4. Attach the desired mount (e.g., helmet mount, bike mount, tripod adapter) to the bottom of the waterproof case using the provided screws and accessories. Ensure all connections are secure before use.



Figure 3.1: Camera in Waterproof Case with Mounting Bracket.

This image shows the GoXtreme Enduro Black action camera securely placed within its transparent waterproof housing. The integrated mounting bracket at the bottom of the case is clearly visible, demonstrating how the camera can be attached to various accessories like bike or helmet mounts.

## 4. OPERATING THE CAMERA

### 4.1 Powering On/Off and Mode Selection



Figure 4.1: Front of GoXtreme Enduro Black Camera (without case).

This image provides a clear front view of the GoXtreme Enduro Black action camera itself, removed from its waterproof housing. The prominent lens is on the right, and the power/mode button, marked with a power symbol and "mode" text, is on the left, indicating the primary control for operation.

- **Power On:** Press and hold the Power/Mode button (usually on the front or top) for a few seconds until the screen turns on.
- **Power Off:** Press and hold the Power/Mode button again until the screen turns off.
- **Change Mode:** Briefly press the Power/Mode button to cycle through different modes (e.g., Video, Photo, Playback, Settings). The current mode will be displayed on the 2-inch screen.

## 4.2 Recording Videos

The camera supports various video resolutions:

- 4K Ultra HD @ 30fps (interpolated)
- 2.7K @ 30fps
- 1080p @ 60fps / 30fps
- 720p @ 120fps / 60fps

1. Switch to Video Mode using the Power/Mode button.
2. Press the Shutter/OK button (usually on top) to start recording. A red indicator light will typically flash, and a timer will appear on the screen.
3. Press the Shutter/OK button again to stop recording.



## 4.3 Taking Photos

The camera offers multiple photo resolutions:

- 16 Megapixels (interpolated)
- 12 Megapixels
- 8 Megapixels
- 5 Megapixels
- 2 Megapixels

1. Switch to Photo Mode using the Power/Mode button.
2. Frame your shot using the screen.
3. Press the Shutter/OK button to take a photo.

## 4.4 Wi-Fi Connection and App Control

The GoXtreme Enduro Black features built-in Wi-Fi, allowing you to connect to your smartphone or tablet for remote control and live view. Compatible with iOS 7.0 and above, and Android 4.1 and above.

1. Download the official GoXtreme app from the App Store (for iOS) or Google Play Store (for Android).
2. On the camera, navigate to the Wi-Fi settings (usually found in the main settings menu or by a dedicated Wi-Fi button/mode). Enable Wi-Fi.
3. On your mobile device, go to Wi-Fi settings and connect to the camera's Wi-Fi network (SSID will typically be "GoXtreme" followed by a model number). The default password is often "1234567890" or similar, check the camera's screen or manual for specifics.
4. Once connected, open the GoXtreme app on your mobile device. You can now view a live feed, start/stop recording, take photos, and adjust settings remotely.

## 4.5 Using the Wrist Remote Control

The included wrist remote control provides convenient access to basic camera functions without needing to touch the camera itself.

- Ensure the remote control is paired with the camera (refer to the remote's specific instructions if pairing is required).
- Typically, there are buttons for starting/stopping video recording and taking photos. Press the corresponding button for the desired action.

# 5. MAINTENANCE

---

## 5.1 Cleaning the Camera and Case

- **Camera Body:** Use a soft, lint-free cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water. Avoid using alcohol or chemical cleaners.
- **Lens:** Use a lens cleaning cloth or a lens brush to gently remove dust. For smudges, use a specialized lens cleaning solution and cloth.
- **Waterproof Case:** After use, especially in saltwater, rinse the case thoroughly with fresh water. Allow it to air dry completely before storing. Ensure the rubber seal is clean and free of sand or debris to maintain its waterproof integrity.

## 5.2 Battery Care

- Charge the battery fully before each use for optimal performance.

- If storing the camera for an extended period, charge the battery to about 50% and remove it from the camera. Recharge it every few months to prevent deep discharge.
- Avoid exposing the battery to extreme temperatures.

5.3 Storage

Store the camera and all accessories in a cool, dry, and dust-free environment. Keep them away from direct sunlight and strong magnetic fields.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or not installed correctly.	Charge the battery fully. Ensure the battery is inserted with correct polarity.
Cannot record video/take photos.	Micro SD card is full, corrupted, or not inserted.	Insert a Micro SD card. Format the card (this will erase all data). Delete unnecessary files. Ensure the card is U3 Class 10 or higher.
Wi-Fi connection fails.	Incorrect password, Wi-Fi not enabled on camera, or app issue.	Ensure Wi-Fi is enabled on the camera. Double-check the Wi-Fi password. Restart both camera and mobile device. Reinstall the app.
Poor video/photo quality.	Lens is dirty, low light conditions, or incorrect settings.	Clean the lens. Ensure adequate lighting. Adjust resolution settings in the camera menu.
Camera freezes or becomes unresponsive.	Software glitch or battery issue.	Remove and reinsert the battery to perform a hard reset. If issues persist, check for firmware updates (consult manufacturer's website).

7. SPECIFICATIONS

Feature	Detail
Display	2-inch (5 cm) LCD Screen
Waterproof Depth	Up to 30 meters (with included waterproof case)
Image Sensor	8.0 Megapixel CMOS Sensor
Photo Resolution	16MP, 12MP, 8MP, 5MP, 2MP (JPG format)
Video Resolution	4K@30fps (interpolated), 2.7K@30fps, 1080p@60/30fps, 720p@120/60fps (AVI Motion JPG format)
View Angle	170° Wide Angle
Wi-Fi	Yes (for remote control via app)
Microphone	Integrated
Storage	Micro SD card up to 64GB (min. U3 Class 10 recommended)

Feature	Detail
PC Interface	USB 2.0
Battery	900 mAh Rechargeable Lithium-ion (replaceable)
Dimensions (L x W x H)	59 x 41 x 32 mm (camera only)
Weight	60 Grams (camera only)
Compatibility	iOS 7.0 and higher, Android 4.1 and higher
Model Number	20148

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package or consult the retailer where you purchased the product for specific terms and conditions. Keep your proof of purchase for warranty claims.



Spare parts availability is indicated for 2 years from the date of purchase.

### 8.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact your local retailer or visit the official Easypix website for support resources and contact information.

*Note: Manufacturer contact details are not provided in this manual.*

## Related Documents

	<p><a href="#">Instrukcja obsługi EasyPix PowerPro VX7230 Compact</a></p> <p>Szczegółowa instrukcja obsługi aparatu cyfrowego EasyPix PowerPro VX7230 Compact, zawierająca informacje o funkcjach, ustawieniach, bezpieczeństwie i konserwacji dla optymalnego użytkowania.</p>
	<p><a href="#">Easypix Cyberscanner View User Manual</a></p> <p>User manual for the Easypix Cyberscanner View, providing instructions on setup, operation, image adjustment, playback, and system requirements.</p>





[\[pdf\]](#) User Manual Guide Declaration of Conformity

easypix info doc goxtreme enduro black GOXTREME Enduro Black Action Camera User Manual Manuals Guide |||

EG-KONFORMITÄTSERKLÄRUNG EU-Declaration of conformity / TRA approval

Hersteller Issuer easypix GmbH Em Parkveedel 11 50733 Kln Germany Produkt

Product Art. No. **20148** Model: GoXtreme Enduro Black Type: Action Cam Hiermit

erklären wir, dass das oben beschriebene Produkt den grundlegenden Anforderungen...

lang:en score:47 filesize: 323.19 K page\_count: 1 document date: 2021-02-09



[\[pdf\]](#) Dimension Guide

RESOLUTIONS 2 RC Video 4K\* 7K 1080p 720p Photo fps 30 60 120 16M\* 12M\* 8M 5M 2M DISPLAY

LCD display 0 5cm FEATURES\* GoXtreme EnduroBlack easypix info 30FPS MOUNTS INCLUDED

GOXTREME ENDURO BLACK ART NR 20148 EAN 4260041685529 GoXtreme® is a brand of Easypix

GmbH Technical changes and mistakes reserved \* by interpolation

30FPS 2 4K 2 RC 30FPS DISPLAY RESOLUTIONS Video 4K\* 2.7K 1080p 720p

Photo fps 30 30 60 / ... hort joint adapters, battery, straps, lens cloth, USB cable,

manual GOXTREME ENDURO BLACK ART. NR. **20148** EAN 4260041685529

GoXtreme is a brand of Easypix GmbH. Technical changes and mistakes reserved...

lang:en score:23 filesize: 619.4 K page\_count: 2 document date: 2020-05-06