

WELIKERA B078342YRQ

WELIKERA 12V 100W Cordless Portable Handheld Vacuum Cleaner User Manual

Model: B078342YRQ

1. INTRODUCTION

Thank you for purchasing the WELIKERA 12V 100W Cordless Portable Handheld Vacuum Cleaner. This manual provides important information on the safe operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before using the product and keep it for future reference. This handheld vacuum is designed for indoor use, offering powerful and convenient cleaning for various surfaces including hard floors and carpets. Its cordless design ensures maximum portability and ease of use.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

3. PACKAGE CONTENTS

Carefully unpack your WELIKERA Handheld Vacuum Cleaner and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.



Image: The WELIKERA handheld vacuum cleaner shown with its included accessories: carrying bag, adapter, brush tool, soft pipe, and crevice nozzle.



Image: A detailed diagram labeling the main components of the vacuum cleaner, including the power/light switch, lock button, battery indicator, LED light, adapter, brush, soft pipe, crevice nozzle, and carrying bag.

Included Components:

- WELIKERA Handheld Vacuum Cleaner
- Charging Adapter
- Brush Tool
- Soft Pipe (Hose)
- Crevice Nozzle
- Carrying Bag
- Instruction Guide (this manual)

4. PRODUCT OVERVIEW

The WELIKERA 12V 100W Cordless Portable Handheld Vacuum Cleaner is designed for efficient and convenient cleaning. It features a powerful motor, a durable stainless steel filter, and a lightweight, portable design.

Key Features:

- **Cordless Design:** Offers maximum flexibility and portability for cleaning anywhere.
- **Powerful Suction:** 100W motor provides strong suction for various debris.
- **Stainless Steel Filter:** Washable and reusable, designed for long-term use (up to 500 washes).
- **Double Filtration System:** Ensures efficient dust capture and cleaner air output.
- **Two Power Levels:** Adjustable suction for different cleaning needs.
- **Multi-functional Attachments:** Includes brush, soft pipe, and crevice nozzle for versatile cleaning.
- **Battery Indicator:** LED lights show battery status.



Image: Demonstrates the vacuum's running time of 20-25 minutes for light cleaning and its powerful suction capability.



Image: Illustrates the double filtration system, highlighting the washable stainless steel filter and the HEPA filter, designed to filter dust efficiently.

5. SETUP AND CHARGING

Before first use, ensure the vacuum cleaner is fully charged. This will help prolong battery life.

Charging Instructions:

1. Connect the charging adapter to the vacuum cleaner's charging port.
2. Plug the adapter into a standard wall outlet.
3. The LED battery indicator lights will show the charging status.
4. A full charge typically takes 3-4 hours.

Important Charging Notes:

- Turn off all switches on the vacuum while charging.
- Do not use the vacuum during charging to protect battery life.
- If the vacuum battery is fully discharged, the LED lights may not flash immediately. It may take up to 3 hours for the lights to begin flashing, and more than 5 hours for the vacuum battery to fully charge again in this state.



Image: Illustrates the vacuum cleaner being charged via its adapter plugged into a wall socket, with notes on battery indicator and charging time.

6. OPERATING INSTRUCTIONS

Turning On/Off and Power Levels:

1. To turn on the vacuum, slide the Power/Light Switch located on the handle.
2. The vacuum has two power levels. Slide the switch further to toggle between the standard and high power modes.

3. To turn off, slide the switch back to the "OFF" position.

Attaching Accessories:

The WELIKERA vacuum comes with several attachments for various cleaning tasks:

- **Crevice Nozzle:** Ideal for reaching tight spaces, corners, and crevices in cars, furniture, and other areas.
- **Brush Tool:** Perfect for cleaning upholstery, pet hair, and delicate surfaces.
- **Soft Pipe (Hose):** Provides extended reach and flexibility for awkward angles or when cleaning inside vehicles.

To attach an accessory, simply push it firmly onto the vacuum's suction inlet until it clicks into place. To remove, pull it off gently.

Recommended Uses:

This versatile handheld vacuum is suitable for a wide range of indoor cleaning tasks:

- **Car Interiors:** Clean crumbs, dust, and debris from seats, floor mats, and dashboards.
- **Home Use:** Ideal for quick clean-ups in the kitchen (e.g., spilled dry food), bedroom, or office.
- **Hard Floors & Carpets:** Effective on both hard surfaces and low-pile carpets for small messes.
- **Pet Hair:** The brush tool is particularly effective for removing pet hair from upholstery.



Image: Shows the vacuum being used in various environments such as a car, bedroom, kitchen, and office, highlighting its multi-functional and portable nature.



Image: Depicts the vacuum cleaning various types of debris, including spilled cereal, coins in a tight space, car interior, and upholstery, demonstrating its versatility.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Compartment:

1. Ensure the vacuum is turned off.
2. Press the "lock" button located on the side of the vacuum to release the dust compartment.
3. Carefully remove the dust compartment from the main unit.
4. Empty the collected dust and debris into a trash bin.

Cleaning the Filter:

The stainless steel filter is washable and reusable. It is recommended to clean the filter after each use or when suction power decreases.

1. After emptying the dust compartment, gently pull out the washable filter.
2. Rinse the filter under running water until all dust and debris are removed.
3. Allow the filter to air dry completely before reinserting it into the vacuum. Do not use the vacuum with a wet filter.
4. Reinsert the dry filter into the dust compartment, then reattach the compartment to the vacuum until it clicks securely.



Image: A four-panel illustration demonstrating how to press the lock button, remove the washable filter, empty the dust compartment, and clean both the dust compartment and filter under running water.

Note:

- The stainless steel filter can be washed up to 500 times.
- Regular cleaning of the filter is crucial for maintaining optimal suction and preventing secondary pollution.

8. TROUBLESHOOTING

If you encounter issues with your WELIKERA Handheld Vacuum Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the vacuum fully (3-4 hours).
	Power switch is not fully engaged.	Ensure the power switch is slid completely to the "ON" position.
Low suction power.	Dust compartment is full.	Empty the dust compartment.
	Filter is clogged or dirty.	Clean the stainless steel filter and ensure it is completely dry before reinserting.

Problem	Possible Cause	Solution
	Suction inlet or hose is blocked.	Check for and remove any blockages in the nozzle, hose, or suction inlet.
Battery indicator not lighting up during charging.	Battery is deeply discharged.	Allow up to 3 hours for the indicator to light up if the battery was completely drained. Continue charging for 5+ hours for a full charge.
Vacuum stops working suddenly.	Battery is depleted.	Recharge the vacuum.
	Overheating protection activated.	Turn off the vacuum and let it cool down for at least 30 minutes before resuming use. Ensure filters are clean and no blockages are present.

If the problem persists after trying these solutions, please contact WELIKERA customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	WELIKERA
Model Number	B078342YRQ
Power	100W
Voltage	12V
Filter Type	Stainless Steel, HEPA
Cordless	Yes
Form Factor	Handheld
Color	Black and White (Stainless Steel accents)
Number of Power Levels	2
Recommended Uses	Carpet, Hard Floor (Indoor Use)
Item Weight	2.64 pounds
Package Dimensions	15.2 x 5.7 x 5.1 inches
UPC	612957085605

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official WELIKERA website. Please have your model number (B078342YRQ) and purchase date ready when contacting support.

Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question