

VINABTY AA59-00484A

VINABTY AA59-00484A Replacement Remote Control User Manual

Model: **AA59-00484A**

Brand: **VINABTY**

INTRODUCTION

Welcome to the user manual for the VINABTY AA59-00484A Replacement Remote Control. This manual provides essential information for setting up, operating, and maintaining your new remote control. This remote is designed to be a direct replacement for various Samsung LCD TV models, requiring no programming.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Do not expose the remote control to direct sunlight, high temperatures, or excessive moisture.
- Avoid dropping or subjecting the remote to strong impacts.
- Dispose of used batteries according to local regulations.

PACKAGE CONTENTS

- 1 x VINABTY AA59-00484A Replacement Remote Control

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: No programming or pairing is required. The remote is ready to use once batteries are installed.





Image: Front view of the VINABTY AA59-00484A replacement remote control, showing all buttons and their labels. The model number AA59-00484A is visible at the bottom.

OPERATING INSTRUCTIONS

This remote control is designed to function identically to the original Samsung remote models it replaces. Simply point the remote at your Samsung LCD TV and press the desired button.

Key Functions

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **VOL +/-:** Adjusts volume up or down.
- **CH +/-:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **MENU:** Accesses the TV's main menu.
- **GUIDE:** Displays the electronic program guide.
- **INFO:** Displays information about the current program.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigates through menus and selections.
- **RETURN/EXIT:** Returns to the previous screen or exits the current menu.
- **Color Buttons (Red, Green, Yellow, Blue):** Access specific functions within certain TV menus or applications.
- **P.MODE (Picture Mode):** Adjusts picture settings.
- **SRS (Sound Retrieval System):** Activates or deactivates SRS sound enhancement.
- **DUALI-II:** Likely related to dual audio or picture-in-picture functions, depending on TV model.
- **E-MANUAL:** Accesses the TV's electronic manual.

- **P.SIZE (Picture Size):** Adjusts the aspect ratio of the screen.
- **AD/SUBT (Audio Description/Subtitles):** Toggles audio description or subtitles.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback if supported by the TV.



Image: A person sitting on a couch, holding the remote control and pointing it towards a Samsung LCD TV, demonstrating typical usage.

COMPATIBLE SAMSUNG LCD TV MODELS

This remote control is compatible with the following Samsung LCD TV models, replacing original remotes such as AA59-00901A, AA59-00481A, and AA59-00482A:

- LE32D551, LE37D551, LE37D550, LE40D550, LE40D551, LE46D550, LE46D551
- LE32D580, LE37D580, LE40D580, LE46D580
- LE19D450, LE32D450, LE26D451, LE32D451, LE22D450, LE22D451, LE19D451, LE26D450
- PS43D450, PS51D450

If your TV model is listed, the remote should work without any additional setup.

MAINTENANCE

- Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and corrosion.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within the effective range of the TV's infrared receiver.
- **TV Sensor:** Verify that the TV's infrared sensor is not blocked or dirty.

Buttons Not Working

- If only specific buttons are not working, try replacing the batteries. If the issue persists after battery replacement, the remote may be faulty.

SPECIFICATIONS

Feature	Detail
Model Number	AA59-00484A
Brand	VINABTY
Compatible Devices	Samsung LCD Televisions
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	5 x 1.9 x 0.5 inches
Item Weight	3 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where you purchased this product. Keep your purchase receipt for any warranty claims.