

EEEKit 100002

EEEkit Wireless Pro Gaming Controller User Manual

Model: 100002

1. INTRODUCTION

Thank you for purchasing the EEEkit Wireless Pro Gaming Controller. This manual provides detailed instructions for setting up, operating, and maintaining your controller. This controller is designed for use with Nintendo Switch, Nintendo Switch Lite, and PC (Windows 7/8/10).

2. SAFETY INFORMATION

- Keep the controller away from water and other liquids.
- Do not expose the controller to extreme temperatures.
- Avoid dropping or subjecting the controller to strong impacts.
- Do not attempt to disassemble or modify the controller. This will void the warranty.
- Use only the provided USB Type-C cable for charging.

3. PRODUCT OVERVIEW

Familiarize yourself with the layout of your EEEkit Wireless Pro Gaming Controller:



This diagram illustrates the various buttons and components of the EEEkit Wireless Pro Gaming Controller, including joysticks, D-pad, action buttons, and shoulder buttons, along with its physical dimensions.

- **L Stick / R Stick:** Analog joysticks for movement and camera control.
- **D-pad:** Directional pad for precise input.
- **A/B/X/Y Buttons:** Standard action buttons.
- **L/R/ZL/ZR Buttons:** Shoulder and trigger buttons.
- **HOME Button:** Powers on the controller and returns to the console's home screen.
- **SELECT / START Buttons:** Function buttons.
- **VIB Screen Shot Button:** Captures screenshots.
- **Charging Port:** USB Type-C port for charging and wired connection.
- **RESET Button:** Small button for resetting the controller.

4. SETUP

4.1 Charging the Controller

Before first use, fully charge the controller. Connect the provided USB Type-C cable to the controller's charging port and the other end to a USB power source (e.g., console, PC, USB wall adapter).



A detailed view of the USB Type-C port located on the top edge of the controller, used for charging and wired connections.

4.2 Pairing with Nintendo Switch / Switch Lite

To pair the controller wirelessly with your Nintendo Switch or Switch Lite:

Made For Switch

Wireless controller fits for Nintendo Switch console.



The image shows the EEEkit Wireless Pro Gaming Controller, emphasizing its compatibility with the Nintendo Switch console and the smooth movement of its analog joysticks.

1. From the HOME Menu, select 'Controllers' > 'Change Grip/Order'.

2. While on the 'Change Grip/Order' screen, press and hold the HOME button on the EEEkit controller for 3-5 seconds.
3. The indicator lights on the bottom of the controller will flash, then remain solid when successfully paired.
4. Once paired, press the HOME button to return to the HOME Menu.

4.3 Connecting to PC (Windows 7/8/10)

The controller can be connected to a PC via the USB Type-C cable for wired play:

1. Connect the USB Type-C cable to the controller and the other end to an available USB port on your PC.
2. The PC should automatically detect and install the necessary drivers.
3. The controller will be recognized as a standard gamepad.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

- **Analog Joysticks (L Stick, R Stick):** Used for character movement, camera control, and menu navigation.
- **D-pad:** Provides directional input, often used for menu selection or specific game actions.
- **Action Buttons (A, B, X, Y):** Perform in-game actions such as jumping, attacking, or confirming selections.
- **Shoulder Buttons (L, R, ZL, ZR):** Used for various in-game functions like aiming, firing, or menu navigation.

5.2 Vibration Function

The controller features built-in dual motors that provide vibration feedback during gameplay, enhancing immersion.

BUILD-IN DUAL MOTORS



The image highlights the controller's dual motor vibration feature, which provides tactile feedback during gameplay for an immersive experience.

5.3 Screenshot Function

Press the VIB Screen Shot button to capture a screenshot of your current game on the Nintendo Switch.

6. MAINTENANCE

6.1 Cleaning

Wipe the controller with a soft, dry cloth. Do not use chemical cleaners or abrasive materials, as these may damage the surface.

6.2 Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

7. TROUBLESHOOTING

7.1 Controller Not Connecting/Pairing

- Ensure the controller is fully charged.
- Verify that the console is powered on and within range.
- Repeat the pairing process (Section 4.2).
- If issues persist, press the small RESET button on the back of the controller using a thin object (e.g., a paperclip) and then attempt to re-pair.

7.2 Unresponsive Buttons/Joysticks

- Ensure the controller is properly connected or paired.
- Check for any physical obstructions around the buttons or joysticks.
- Try resetting the controller using the RESET button.
- Test the controller with another game or device if possible.

7.3 Controller Not Charging

- Ensure the USB Type-C cable is securely connected to both the controller and the power source.
- Try using a different USB port or power adapter.
- Verify that the charging cable is not damaged.

8. SPECIFICATIONS

Feature	Detail
Brand	EEEKit
Model Number	100002
Compatible Devices	Nintendo Switch, Nintendo Switch Lite, PC (Windows 7/8/10)
Connectivity Technology	Wireless, USB
Controller Type	Gamepad
Color	Black
Additional Features	Ergonomic Design, Dual Rumble Motors
Button Quantity	16
Power Source	USB Type-C Charging
Dimensions (Approx.)	5.9 inches (Width) x 4.1 inches (Height) x 2.36 inches (Depth)
UPC	760970206085

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact EEEkit customer service through the retailer where the product was purchased or refer to the official EEEkit website.

