



Manuals.plus /

- › Brother /
- › Brother HL-L2375DW Monochrome Laser Printer User Manual

Brother HL-L2375DW

Brother HL-L2375DW Monochrome Laser Printer User Manual

Model: HL-L2375DW

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Brother HL-L2375DW Monochrome Laser Printer. Please read this manual thoroughly before using the printer and keep it for future reference.

The Brother HL-L2375DW is designed for busy home and small offices, offering reliable monochrome laser printing with features like automatic 2-sided printing and versatile connectivity options.

PRODUCT OVERVIEW



Figure 1: Front view of the Brother HL-L2375DW Monochrome Laser Printer, showcasing its compact design and paper tray.

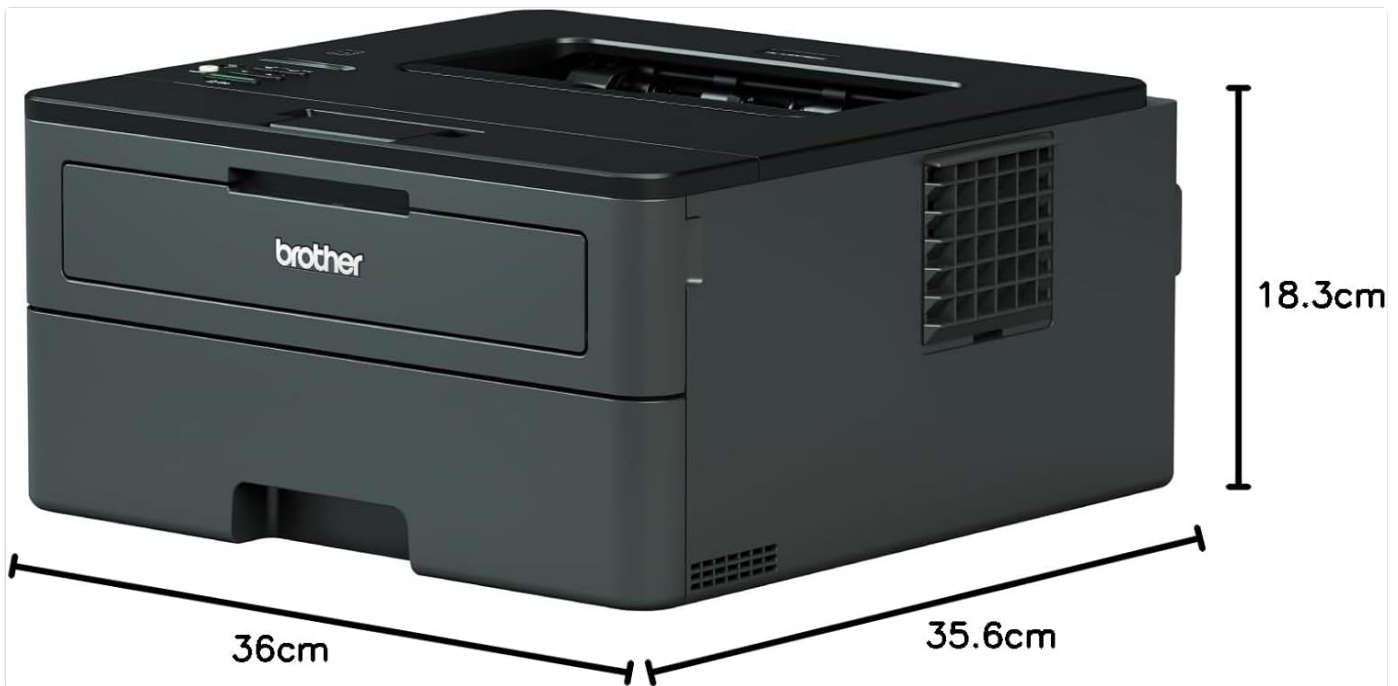


Figure 2: Side view of the Brother HL-L2375DW printer, illustrating its physical dimensions: 36 cm (width), 35.6 cm (depth), and 18.3 cm (height).

The HL-L2375DW features a compact design suitable for desktop placement. Key components include the paper tray, output tray, and control panel.

SETUP

1. Unpacking and Initial Placement

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the printer body and internal compartments. Place the printer on a stable, level surface with adequate ventilation.

2. Power Connection

Connect the power cord to the printer's power input and then to a grounded electrical outlet. Do not connect to a power strip or surge protector during initial setup to avoid potential power issues.

3. Toner Cartridge and Drum Unit Installation

1. Open the front cover of the printer.
2. Remove the toner cartridge and drum unit assembly from its protective bag.
3. Gently slide the toner cartridge into the drum unit until it locks into place.
4. Insert the combined toner and drum unit assembly into the printer until it clicks securely.
5. Close the front cover.

4. Paper Loading

Open the paper tray and adjust the paper guides to fit the paper size (e.g., A4). Load up to 250 sheets of plain paper into the tray. Ensure the paper is not creased or curled. Close the paper tray.

5. Connectivity Setup (Wired/Wireless)

Wired Network Connection:

Connect an Ethernet cable from your network router or switch to the Ethernet port on the back of the printer.

Wireless Network Connection:

On the printer's control panel, navigate to the Network settings. Select WLAN and then Setup Wizard. Follow the on-screen instructions to select your Wi-Fi network and enter the password. Alternatively, use Wi-Fi Direct for direct connection from mobile devices.

6. Driver Installation

For optimal performance, install the latest drivers from the official Brother support website. Search for "Brother HL-L2375DW drivers" to find the correct downloads for your operating system.

OPERATING INSTRUCTIONS

Printing a Document

1. Ensure the printer is powered on and connected to your computer or network.
2. Open the document you wish to print on your computer.
3. Select **Print** from the application's menu (e.g., File > Print).
4. Choose **Brother HL-L2375DW** as your printer.

5. Adjust print settings as needed, such as paper size, orientation, and number of copies.
6. For *automatic 2-sided printing*, select the duplex printing option in your printer settings.
7. Click **Print**.

Printing from Mobile Devices (Apple AirPrint / Wi-Fi Direct)

Apple AirPrint:

Ensure your iOS device and the printer are connected to the same Wi-Fi network. Open the app you want to print from, tap the share icon or print icon, select **Print**, and choose your Brother HL-L2375DW printer.

Wi-Fi Direct:

Enable Wi-Fi Direct on your printer. On your mobile device, connect to the printer's Wi-Fi Direct network (usually named DIRECT-XXXX_HL-L2375DW). Once connected, you can print directly from compatible applications.

MAINTENANCE

Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Interior:** Periodically clean the inside of the printer to remove paper dust and toner residue. Refer to the printer's display for prompts on cleaning the drum unit or fuser.

Replacing Consumables

Toner Cartridge:

When the "Toner Low" or "Replace Toner" message appears, replace the toner cartridge. Ensure you use genuine Brother toner cartridges for optimal print quality and printer longevity.

Drum Unit:

The drum unit has a separate lifespan from the toner cartridge. Replace the drum unit when the "Replace Drum" message appears on the printer's display. Follow the instructions provided with the new drum unit for proper installation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not powering on	Power cord not connected securely; Power outlet not active.	Check power cord connections at both ends. Test the power outlet with another device.
Paper jams	Incorrect paper loading; Overloaded paper tray; Foreign objects in paper path.	Remove all paper from the tray and reload correctly. Clear any jammed paper following printer instructions. Ensure paper guides are set correctly.
Poor print quality (streaks, faded prints)	Low toner; Dirty drum unit; Incorrect print settings.	Replace toner cartridge if low. Clean the drum unit. Adjust print quality settings in the printer driver.
Cannot connect to Wi-Fi	Incorrect Wi-Fi password; Printer too far from router; Network interference.	Verify Wi-Fi password. Move printer closer to the router. Restart router and printer.

For more detailed troubleshooting, refer to the Brother support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Model	HL-L2375DW
Printing Technology	Monochrome Laser
Max Print Speed (Monochrome)	Up to 34 ppm
Duplex Printing	Automatic 2-sided printing
Connectivity	Wi-Fi, Ethernet, USB
Paper Input Capacity	250 sheets (standard tray)
Maximum Media Size	8.5 x 14 inch (Legal)
Compatible Devices	Smartphones, Computers
Controller Type	Apple Airprint
Product Dimensions (W x D x H)	36 x 35.6 x 18.3 cm
Item Weight	7.4 kg
Power Source	Corded Electric
Voltage	240 Volts
Wattage	510 watts

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your printer or visit the official Brother support website. Warranty terms and conditions may vary by region.

For technical support, driver downloads, FAQs, and additional resources, please visit the [Brother Support Website](#) or contact Brother customer service directly.

