

[Manuals.plus](#) /

> [ECOVACS](#) /

> ECOVACS DG3G-KTA Buddy Accessory Kit for DEEBOT OZMO 930: Instruction Manual

ECOVACS DG3G-KTA

ECOVACS DG3G-KTA Buddy Accessory Kit for DEEBOT OZMO 930

Instruction Manual

INTRODUCTION

This manual provides essential instructions for the installation, maintenance, and replacement of components within the ECOVACS DG3G-KTA Buddy Accessory Kit. This kit is designed to ensure the continued optimal performance of your ECOVACS DEEBOT OZMO 930 robot vacuum cleaner. Regular replacement of these accessories is crucial for maintaining cleaning efficiency and extending the lifespan of your device.

COMPATIBILITY

The ECOVACS DG3G-KTA Buddy Accessory Kit is specifically designed for use with the following model:

- **ECOVACS DEEBOT OZMO 930**

Using non-compatible accessories may lead to reduced performance or damage to your robot vacuum cleaner.

PACKAGE CONTENTS

Verify that all items are present in your accessory kit:

- 1x Main Brush
- 4x Side Brushes
- 3x High-Efficiency Filters

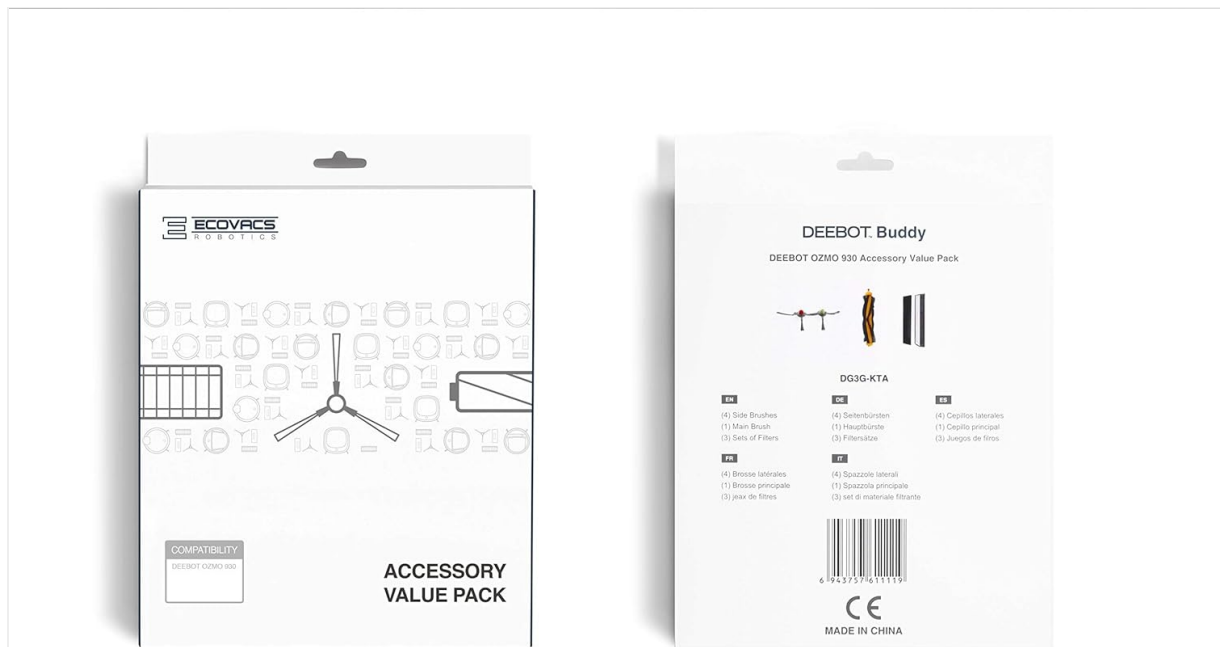


Image: Front packaging of the accessory kit, displaying the ECOVACS brand and contents.



Image: Back packaging of the accessory kit, detailing contents and compatibility.

INSTALLATION INSTRUCTIONS

No additional tools are required for the installation of these accessories. Always power off your DEEBOT OZMO 930 before attempting any installation or replacement.

Replacing the Main Brush

1. Turn the DEEBOT OZMO 930 over to access its underside.
2. Locate the main brush cover, usually secured by two tabs or screws.
3. Press the tabs or unscrew the screws to release the main brush cover.
4. Remove the old main brush.
5. Clean any hair or debris from the brush compartment.
6. Insert the new main brush, ensuring the ends align with the slots.
7. Replace the main brush cover and secure it.

Note: The main brush should be replaced every 6-12 months, depending on usage.

Replacing the Side Brushes

1. Turn the DEEBOT OZMO 930 over.
2. Locate the side brushes. Each brush is typically held by a single screw.
3. Using a screwdriver (not included in this kit, but usually provided with the DEEBOT), unscrew the retaining screw for each side brush.
4. Remove the old side brushes.

5. Align the new side brushes with the corresponding posts (L for left, R for right, if marked).
6. Secure the new side brushes with the screws.

Note: Side brushes should be replaced every 3-6 months, depending on usage and wear.

Replacing the High-Efficiency Filters

1. Open the top cover of the DEEBOT OZMO 930.
2. Remove the dust bin.
3. Open the dust bin cover to access the filter compartment.
4. Remove the old high-efficiency filter and sponge filter.
5. Clean the dust bin thoroughly.
6. Insert the new sponge filter first, followed by the new high-efficiency filter, ensuring they are seated correctly.
7. Close the dust bin cover and reinsert the dust bin into the DEEBOT.
8. Close the top cover.

Note: High-efficiency filters should be replaced every 3-6 months. Do not wash the high-efficiency filter with water.

MAINTENANCE

Regular maintenance of your DEEBOT's accessories ensures optimal cleaning performance and extends the life of your robot. The replacement intervals provided are general guidelines and may vary based on usage frequency, pet hair presence, and environment.

- **Main Brush:** Inspect weekly for tangled hair or debris. Clean as needed. Replace every 6-12 months.
- **Side Brushes:** Inspect weekly for wear, bending, or tangles. Clean as needed. Replace every 3-6 months.
- **High-Efficiency Filters:** Tap out dust from the filter weekly. Replace every 3-6 months. Do not wash.

SPECIFICATIONS

Component	Quantity
Main Brush	1
Side Brushes	4
High-Efficiency Filters	3

Model Number: DG3G-KTA

Compatible Model: ECOVACS DEEBOT OZMO 930

Item Weight: 6.67 ounces (approx. 189 grams)

Global Trade Identification Number (GTIN): 06943757611119

Manufacturer: Ecovacs Robotics

TROUBLESHOOTING

If you experience issues after replacing accessories, consider the following:

- **Reduced Cleaning Performance:** Ensure all brushes and filters are installed correctly and are free from obstructions. Check if the replacement interval has been exceeded.
- **Unusual Noises:** Verify that the main brush is properly seated and not obstructed by hair or debris. Ensure side brushes are securely attached and not bent.

- **Dust Leakage:** Confirm that the high-efficiency filter and dust bin are correctly installed and sealed.
- **Brushes Not Spinning:** Check for tangled hair or debris around the brush axles. Ensure the brushes are genuine ECOVACS parts and compatible with your DEEBOT OZMO 930.

For persistent issues, refer to your DEEBOT OZMO 930's main instruction manual or contact ECOVACS customer support.

WARRANTY AND SUPPORT

This accessory kit is an original ECOVACS product. For information regarding warranty coverage for accessories or for technical support, please refer to the warranty documentation included with your original DEEBOT OZMO 930 robot vacuum cleaner or visit the official ECOVACS website. Keep your purchase receipt as proof of purchase.

ECOVACS Official Website: www.ecovacs.com