

[Manuals.plus](#) /

> [Lindby](#) /

> Lindby Vinsta Floor Lamp Instruction Manual (Model 9621005)

Lindby 9621005

Lindby Vinsta Floor Lamp Instruction Manual

Model: 9621005

1. INTRODUCTION

The Lindby Vinsta Floor Lamp features a slender white glass shade and a timeless design. It provides pleasant and inviting light, suitable for various indoor spaces such as living rooms and dining areas. This manual provides essential information for the safe and efficient use of your new floor lamp.



Image 1.1: Lindby Vinsta Floor Lamp in a modern living room.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before installation or use. Keep this manual for future reference.

- **Electrical Safety:** Always disconnect the power supply before cleaning, replacing the bulb, or performing any maintenance.
- **Indoor Use Only:** This lamp is designed for indoor use in dry environments. Do not use it in damp or wet locations.
- **Bulb Type:** Use only E27 bulbs with a maximum wattage of 40W. LED bulbs are recommended for energy efficiency.
- **Stable Placement:** Ensure the lamp is placed on a stable, level surface to prevent tipping.
- **Cleaning:** Clean the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Children and Pets:** Keep the lamp out of reach of children and pets to prevent accidents.
- **Damage:** If the power cord or plug is damaged, do not use the lamp. Contact qualified personnel for repair.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with assembly.

- Floor Lamp Base and Pole Assembly
- Glass Shade
- Lamp Holder Ring
- Instruction Manual
- **Note:** Bulb is not included.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Lindby Vinsta Floor Lamp.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Pole:** Screw the pole sections together, ensuring they are securely tightened.
3. **Attach Pole to Base:** Insert the assembled pole into the lamp base and secure it firmly.



Image 4.1: Lamp base with integrated foot switch.

4. **Prepare Lamp Holder:** Unscrew the lamp holder ring from the E27 socket.

Your browser does not support the video tag.

Video 4.1: Demonstration of floor lamp assembly, including attaching the pole to the base and preparing the lamp holder. This video shows general assembly steps for a floor lamp.

5. **Install Glass Shade:** Place the glass shade over the lamp holder, then screw the lamp holder ring back on to secure the shade.



Image 4.2: Detail of the white glass shade.

6. **Install Bulb:** Screw an E27 bulb (max 40W) into the lamp holder.
7. **Position Lamp:** Place the lamp in your desired location, ensuring it is stable.
8. **Connect to Power:** Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

The Lindby Vinsta Floor Lamp is operated via a push-button foot switch located on the power cord.

- **To Turn On:** Press the foot switch once.
- **To Turn Off:** Press the foot switch again.



Image 5.1: The Lindby Vinsta Floor Lamp providing ambient light.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** Dust the lamp regularly with a soft, dry, lint-free cloth. For the glass shade, a slightly damp cloth can be used, followed by a dry cloth. Ensure the lamp is unplugged before cleaning.
- **Bulb Replacement:** Before replacing the bulb, ensure the lamp is unplugged and the bulb has cooled down. Unscrew the old bulb and replace it with a new E27 bulb (max 40W).
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If damage is found, discontinue use and seek professional repair.

7. TROUBLESHOOTING

If you encounter issues with your Lindby Vinsta Floor Lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none">Lamp unplugged.Bulb is loose or faulty.Power outlet is not working.	<ul style="list-style-type: none">Ensure the lamp is securely plugged into a working outlet.Tighten the bulb or replace it with a new one.Test the outlet with another appliance.
Light flickers.	<ul style="list-style-type: none">Loose bulb connection.Faulty bulb.	<ul style="list-style-type: none">Tighten the bulb.Replace the bulb.
Lamp is unstable.	<ul style="list-style-type: none">Not placed on a level surface.Pole sections not fully tightened.	<ul style="list-style-type: none">Move the lamp to a flat, stable surface.Ensure all pole sections are securely screwed together.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Model Number	9621005
Brand	Lindby
Dimensions (D x W x H)	20 cm x 20 cm x 153 cm
Weight	3.58 kg
Material	Metal, Glass
Shade Material	Glass
Shade Color	White / Opal
Bulb Base	E27
Number of Bulbs	1 (not included)
Max Wattage	40W
Recommended Bulb Type	LED
Operating Voltage	230 Volts
Switch Type	Push-button (Foot Switch)
Protection Class	II
IP Rating	IP20 (Not water resistant)
Style	Modern
Intended Use	Indoor lighting, Decoration

9. WARRANTY AND SUPPORT

This Lindby product is manufactured to high-quality standards. For any questions related to the product, or if you require support, please contact our customer service. You can reach our customer service through our Amazon seller profile. The product comes with a standard return policy of 30 days for refund or replacement.

