

Lindby 9972008

Lindby Outdoor Wall Light Instruction Manual

Model: 9972008

Brand: Lindby

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Lindby Outdoor Wall Light. Please read these instructions thoroughly before installation or use to ensure proper function and safety.

The Lindby Outdoor Wall Light is a modern and elegant luminaire designed for outdoor use, featuring a durable stainless steel body and a polycarbonate diffuser. Its IP44 rating ensures protection against splashing water, making it ideal for various outdoor applications such as gardens, patios, balconies, and entryways.



Image: The Lindby Outdoor Wall Light beautifully illuminated on an exterior wall, showcasing its modern design and effective lighting.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage:

- **Electrical Safety:** Installation should only be performed by a qualified electrician or competent person in accordance with local wiring regulations and standards.
- **Power Disconnection:** Always disconnect the main power supply at the fuse box or circuit breaker before commencing any installation, maintenance, or bulb replacement.
- **Bulb Type:** Use only E27 bulbs with a maximum wattage of 40W. Do not exceed the specified wattage. LED bulbs are recommended for energy efficiency.
- **IP44 Rating:** This product is rated IP44, meaning it is protected against solid objects over 1mm and splashing water from any direction. Ensure all seals and covers are correctly fitted after installation to maintain this protection.

- **Handling:** Handle the product with care. Do not drop or subject it to strong impacts.
- **Cleaning:** Do not use abrasive cleaners or solvents. Refer to the Maintenance section for cleaning instructions.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning installation:

- 1 x Lindby Outdoor Wall Light Unit
- Mounting Hardware (screws, wall plugs)
- Instruction Manual

Note: The light bulb (E27, max 40W) is **not included** and must be purchased separately.



Image: An open view of the light fixture's interior, revealing the E27 bulb socket and the designated area for electrical connections.

4. SETUP AND INSTALLATION

Follow these steps carefully for safe and correct installation:

1. **Preparation:** Choose a suitable mounting location on an exterior wall. Ensure the surface is flat and capable of supporting the fixture's weight.
2. **Disconnect Power:** Before starting, turn off the electricity supply to the circuit at the main fuse box or circuit breaker. Verify that the power is off using a voltage tester.
3. **Mark Drilling Points:** Remove the mounting base from the light fixture. Hold the base against the wall at the desired installation height and mark the drilling points using a pencil.
4. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall material. Insert the provided wall plugs into the drilled holes.
5. **Mount Base:** Secure the mounting base to the wall using the provided screws. Ensure it is firmly attached.
6. **Connect Wiring:** Connect the electrical wires from your mains supply to the terminal block inside the fixture. Ensure correct connections: Live (L), Neutral (N), and Earth (\oplus). Double-check all connections are secure.
7. **Install Bulb:** Screw an E27 bulb (max 40W) into the lamp holder.
8. **Secure Fixture:** Carefully attach the main body of the light fixture to the mounted base, ensuring all wires are tucked away and not pinched. Secure it with the screws or clips provided. Ensure the IP44 seal is properly seated.
9. **Restore Power:** Once the fixture is securely installed and all connections are checked, restore the electricity supply at the main fuse box or circuit breaker.



Image: A close-up of the internal components, including the E27 socket and wiring terminals, to assist with electrical connections during installation.

5. OPERATING INSTRUCTIONS

The Lindby Outdoor Wall Light is designed for simple operation. Once installed and connected to the mains power supply, it can be controlled by a standard wall switch or an external timer/sensor connected to the same circuit.

- **Turning On/Off:** Use the connected wall switch to turn the light on or off.
- **Automatic Operation:** If connected to a dusk-to-dawn sensor or timer (not included), the light will operate automatically according to the sensor's or timer's settings.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your Lindby Outdoor Wall Light:

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, damp cloth. Do not use harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the stainless steel finish or polycarbonate diffuser.
- **Bulb Replacement:** Disconnect power before replacing the bulb. Allow the old bulb to cool down completely before unscrewing it. Insert the new E27 bulb (max 40W) carefully.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose connections, or wear. Ensure the seals are intact to maintain the IP44 rating. If any damage is found, disconnect power and consult a qualified electrician.

7. TROUBLESHOOTING

If you encounter issues with your Lindby Outdoor Wall Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; Faulty bulb; Loose wiring connection; Faulty switch.	Check circuit breaker/fuse. Replace bulb. Check wiring connections (with power off). Test switch.
Light flickers.	Loose bulb; Incorrect bulb type; Loose wiring connection.	Tighten bulb. Ensure correct E27 bulb is used. Check wiring connections (with power off).
Water inside fixture.	Improper installation; Damaged seal.	Disconnect power. Re-check installation steps, ensuring all seals are correctly seated and screws tightened. If seal is damaged, contact customer support.

If the problem persists after attempting these solutions, please contact a qualified electrician or Lindby customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Lindby Outdoor Wall Light:

Feature	Specification
Brand	Lindby
Model Number	9972008

Feature	Specification
Dimensions (H x W x D)	25.6 cm x 12 cm x 9.4 cm (approx. 10.1 x 4.7 x 3.7 inches)
Weight	599 g (approx. 1.32 lbs)
Material	Stainless Steel, Polycarbonate (PC)
IP Rating	IP44 (Splash-proof)
Voltage	230 Volts
Bulb Socket Type	E27
Max. Wattage	40W
Special Features	Water-resistant



Image: A diagram illustrating the key dimensions (height, width, depth) of the Lindby Outdoor Wall Light.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided at the point of purchase or visit the official Lindby website. Specific details regarding spare parts availability and software updates are not available in this document.

If you require further assistance, technical support, or have questions not covered in this manual, please contact Lindby customer service through their official channels.