

[Manuals.plus](#) /

› [GJS Gourmet](#) /

› GJS Gourmet Sealing Gasket for 6 Quart T-fal Pressure Cooker (Models CY505E51, ERRIE EPC06)

GJS Gourmet TRTAZ11A

GJS Gourmet Sealing Gasket Instruction Manual

For 6 Quart T-fal Pressure Cooker and Pressure Fryer (Models CY505E51, ERRIE EPC06)

1. INTRODUCTION

This manual provides instructions for the proper installation, use, and maintenance of your GJS Gourmet Sealing Gasket. This gasket is designed as a replacement part for specific T-fal pressure cooker and pressure fryer models to ensure safe and efficient operation.

Important Note: This product is manufactured by GJS Gourmet and is not created or sold by T-fal. It is an aftermarket compatible part.

2. COMPATIBILITY

The GJS Gourmet Sealing Gasket is compatible with the following 6 Quart T-fal Pressure Cooker and Pressure Fryer models:

- **Model:** CY505E51
- **Model:** ERRIE EPC06

Please verify your pressure cooker's model number before installation to ensure proper fit and function.

3. PRODUCT FEATURES

- Made from durable, food-grade silicone for safety and longevity.
- Flexible design ensures a tight seal for optimal pressure cooking performance.
- Dishwasher safe for easy cleaning.

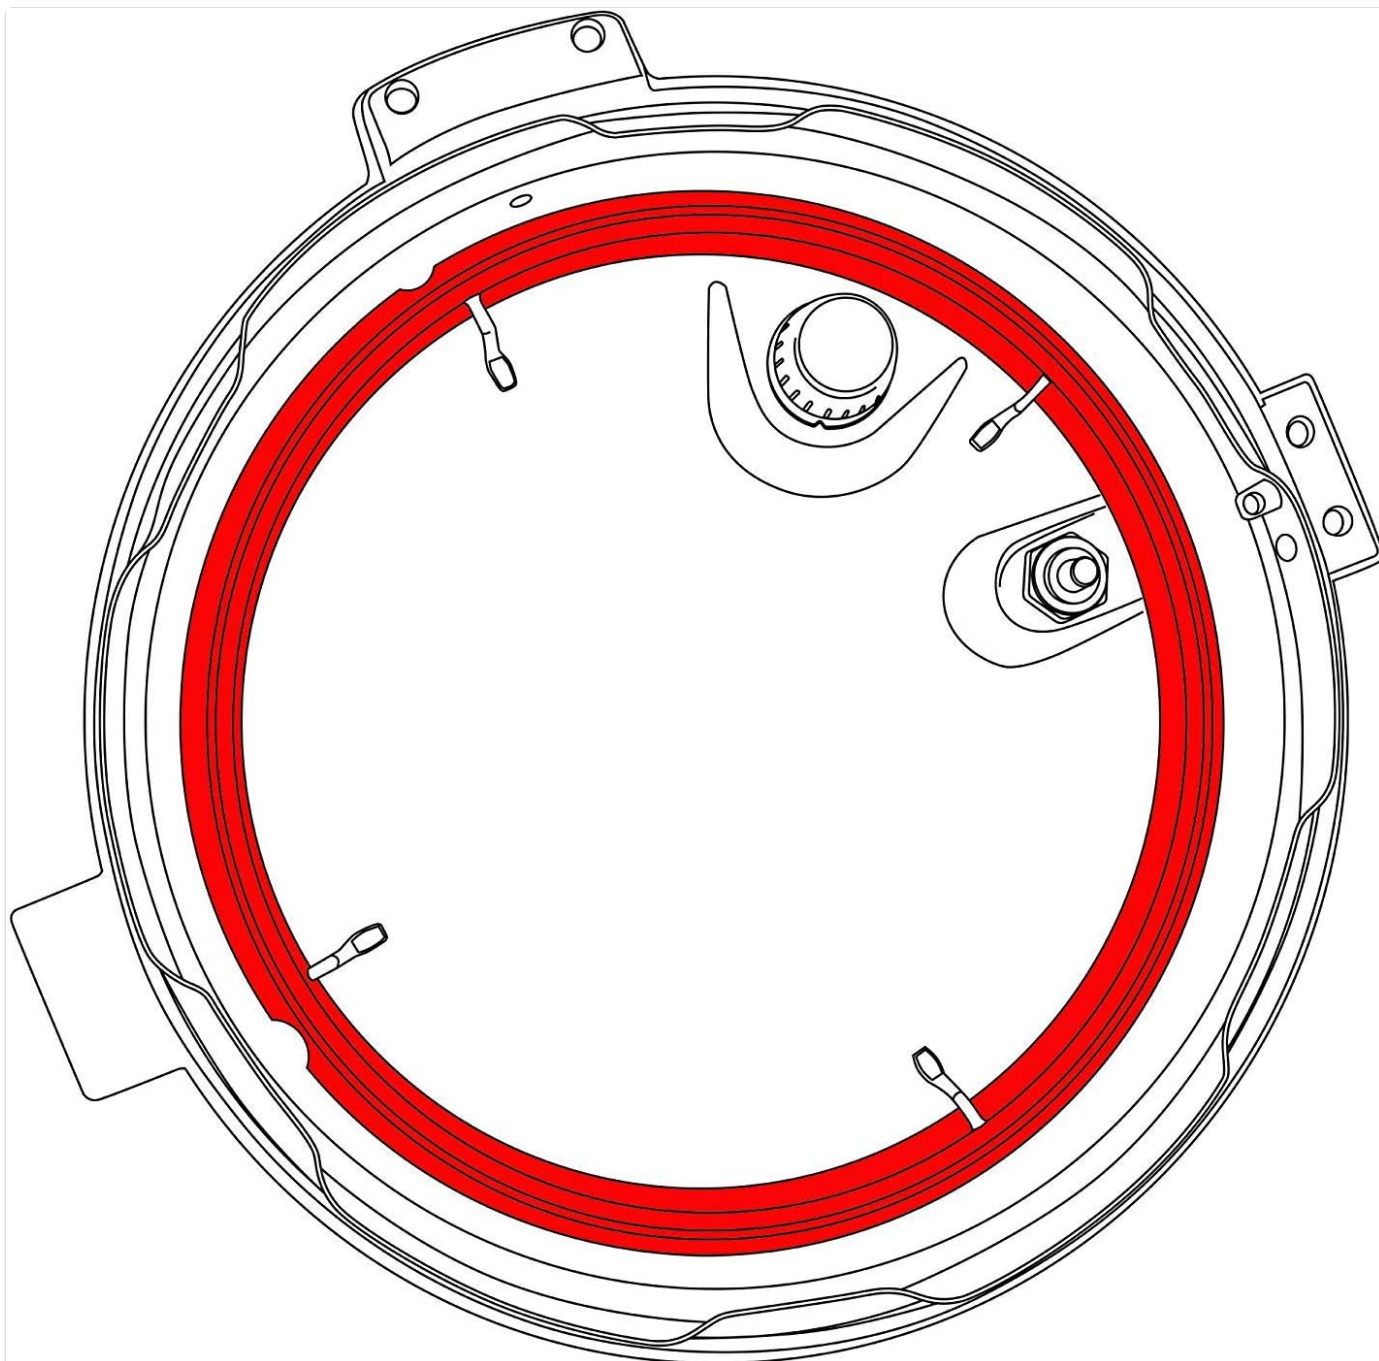


Image: The gasket demonstrating its flexibility and durable silicone material.

4. INSTALLATION INSTRUCTIONS

1. **Remove Old Gasket:** Carefully remove the old sealing gasket from the lid of your pressure cooker. Inspect the lid for any debris or residue and clean thoroughly.
2. **Inspect New Gasket:** Before installation, inspect the new GJS Gourmet sealing gasket for any signs of damage or manufacturing defects.
3. **Position Gasket:** Place the new silicone gasket into the designated groove on the underside of your pressure cooker lid. Ensure it sits evenly and securely within the groove.
4. **Secure Gasket:** Gently press the gasket into place around the entire circumference of the lid. Make sure there are no twists or gaps. The gasket should fit snugly.

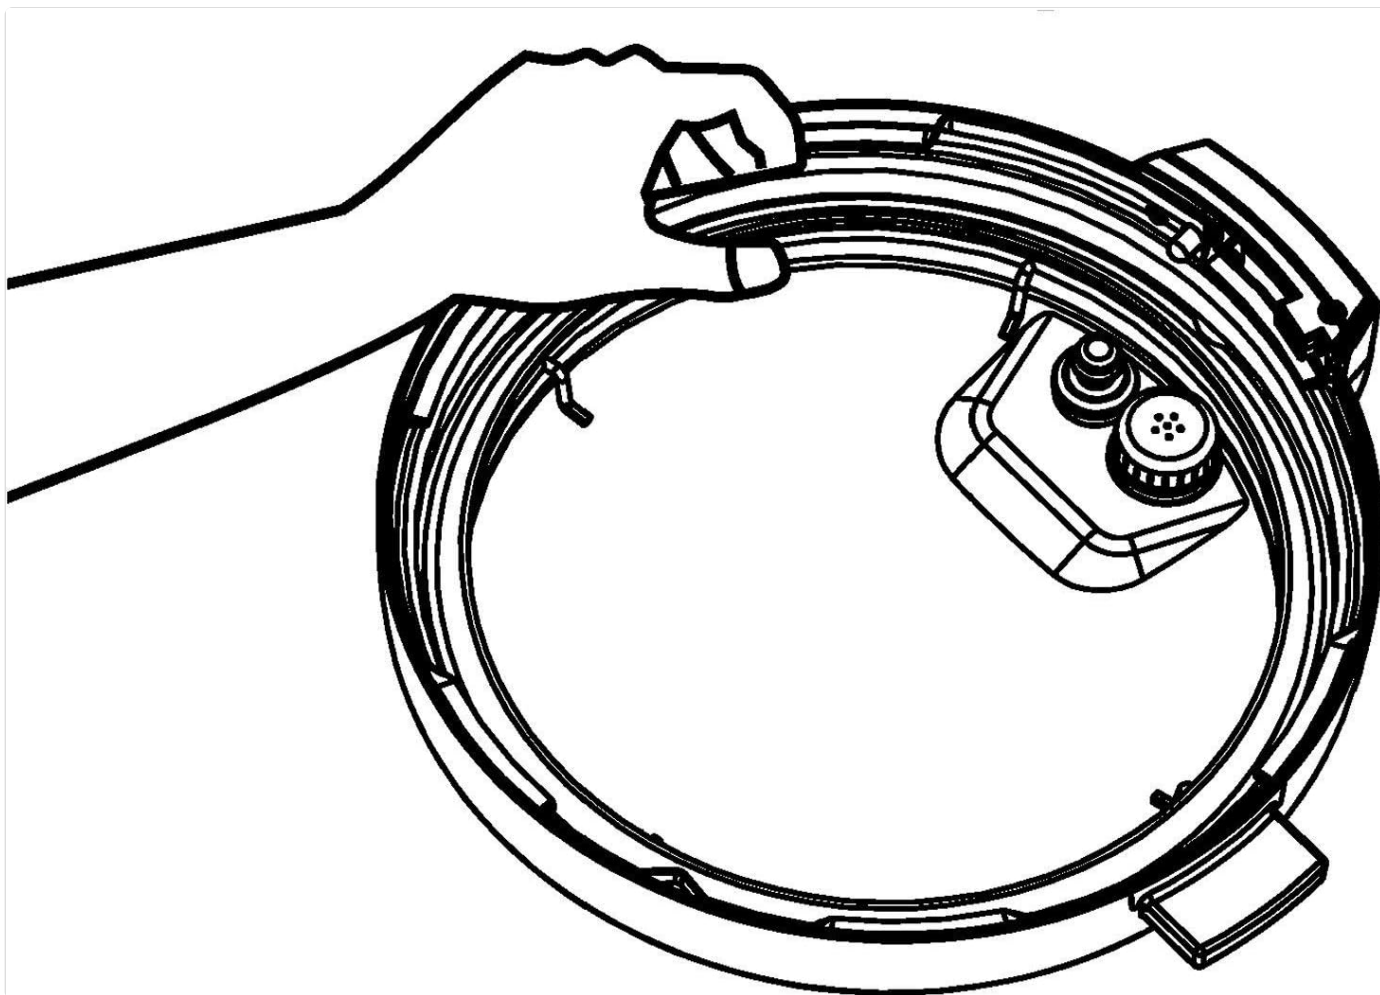


Image: A hand demonstrating the placement of the gasket into the lid's groove.



Image: The gasket fully installed and seated correctly in the pressure cooker lid.

After installation, perform a water test (refer to your pressure cooker's original manual) to ensure a proper seal before cooking with food.

5. USAGE CONSIDERATIONS

The sealing gasket is crucial for maintaining pressure within your cooker. Always ensure the gasket is clean and properly seated before each use. A dry or improperly installed gasket can prevent the cooker from sealing correctly.

6. MAINTENANCE AND CARE

- **Cleaning:** The silicone gasket is dishwasher safe. You can also wash it by hand with warm, soapy water. Rinse thoroughly and allow it to air dry completely before re-installing or storing.
- **Storage:** Store the gasket flat or in its natural shape to prevent deformation. Avoid folding or creasing.
- **Replacement:** It is recommended to replace the sealing gasket every 18-24 months, or sooner if you notice any signs of wear, cracking, hardening, or deformation. A worn gasket can compromise the pressure seal and safety of your cooker.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gasket does not stay in place / falls out easily.	• Incorrect installation. • Gasket is dry or has residue. • Gasket is worn or deformed.	• Ensure the gasket is fully seated in the lid's groove. • Clean the gasket and the lid groove thoroughly. • If the gasket is old or visibly damaged, replace it.
Pressure cooker is leaking steam or not building pressure.	• Gasket is not properly installed. • Gasket is dirty or has food particles. • Gasket is worn, cracked, or hardened. • Incorrect gasket size for your model.	• Re-install the gasket, ensuring it is flat and snug. • Clean the gasket and the lid thoroughly. • Replace the gasket if it shows signs of wear. • Verify your pressure cooker model number against the compatible models listed in this manual.

8. SPECIFICATIONS

- **Brand:** GJS Gourmet
- **Material:** Food-Grade Silicone
- **Color:** Clear
- **Capacity Compatibility:** 6 Quarts
- **Item Model Number:** TRTAZ11A
- **UPC:** 752830295018
- **Dishwasher Safe:** Yes
- **Item Weight:** Approximately 2.01 ounces (0.06 Kilograms)
- **Package Dimensions:** 8.78 x 5.79 x 1.34 inches

9. SUPPORT AND CONTACT

For further assistance or inquiries regarding your GJS Gourmet Sealing Gasket, please contact GJS Gourmet customer support through the retailer where you purchased the product or visit the official GJS Gourmet store on Amazon: [GJS Gourmet Store](#). Please have your product model number (TRTAZ11A) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question