

## Kingfisher FO3G

# Kingfisher 91cm Multi-Function LED Fibre Optic Christmas Tree Instruction Manual

Model: FO3G

## 1. INTRODUCTION

Thank you for choosing the Kingfisher 91cm Multi-Function LED Fibre Optic Christmas Tree. This artificial Christmas tree is designed to bring festive illumination to your home or office with its integrated fibre optic lights and multi-color LED functions. Please read this manual carefully before assembly and operation to ensure safe and proper use of your product.

## 2. SAFETY INFORMATION

- Always unplug the tree from the mains power supply before assembly, disassembly, or cleaning.
- Ensure the power cord is not damaged, pinched, or placed under heavy objects.
- Do not expose the tree to rain or moisture. This product is intended for indoor use only.
- Keep the tree away from heat sources, open flames, and flammable materials.
- Do not attempt to modify or repair the tree or its electrical components. Refer all servicing to qualified personnel.
- This product is not a toy. Keep out of reach of children and pets.

## 3. PACKAGE CONTENTS

Please check that all components are present before beginning assembly:

- Kingfisher 91cm Fibre Optic Christmas Tree (pre-lit with 80 LEDs)
- Metal Tree Stand
- Power Adapter

## 4. SETUP INSTRUCTIONS

1. **Assemble the Stand:** Take the metal tree stand and unfold its legs to form a stable base. Ensure the legs are fully extended and locked into position.
2. **Insert the Tree:** Carefully insert the main pole of the Christmas tree into the central opening of the assembled stand. Tighten any securing screws on the stand, if present, to hold the tree firmly in place.
3. **Arrange Branches:** Gently unfold and spread out the branches of the tree. Start from the bottom and work your way up, shaping them to achieve a full and natural appearance. Ensure the fibre optic strands are not tangled or bent sharply.
4. **Connect Power:** Locate the power connector on the tree and connect it securely to the provided power adapter.



Image 1: The sturdy black metal stand designed to support the Kingfisher 91cm Multi-Function LED Fibre Optic Christmas Tree is shown, indicating its easy assembly.





Image 2: The Kingfisher 91cm Multi-Function LED Fibre Optic Christmas Tree is shown fully assembled, with its green branches and integrated fibre optic elements visible. The tree is ready for operation.

## 5. OPERATING INSTRUCTIONS

1. **Power On:** Plug the power adapter into a standard electrical outlet. The tree's fibre optic lights and LEDs will illuminate automatically, cycling through various multi-function color changes.
2. **Enjoy:** The tree is designed to provide a continuous display of changing colors. There are no manual controls for light functions; the tree will automatically cycle through its pre-programmed light patterns.
3. **Power Off:** To turn off the tree, simply unplug the power adapter from the electrical outlet.





Image 3: This image shows the Kingfisher 91cm Multi-Function LED Fibre Optic Christmas Tree fully assembled and illuminated, displaying its multi-colored fibre optic lights and star topper. The tree is positioned in a corner against a wooden wall.



Image 4: This image provides a close-up view of the individual fibre optic bundles on a branch of the Kingfisher Christmas tree, showcasing the vibrant, changing colors of the lights.

## 6. MAINTENANCE

---

- **Cleaning:** To clean the tree, unplug it from the power source. Use a soft, dry cloth to gently wipe away any dust from the branches and fibre optic strands. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, unplug the tree and carefully disassemble it by reversing the setup steps. Fold the branches gently to avoid damaging the fibre optics. Store the tree and its components in a cool, dry place, preferably in its original packaging, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

- **Tree does not light up:**
  - Ensure the power adapter is securely plugged into both the tree and a working electrical outlet.
  - Check the power outlet by plugging in another device.



- Inspect the power cord for any visible damage. If damaged, discontinue use and contact support.

- **Lights are flickering or inconsistent:**

- Check all connections to ensure they are firm.
- Ensure the power adapter is functioning correctly.

If you experience any issues not covered here, please contact customer support.

## 8. SPECIFICATIONS

Brand	Kingfisher
Model	FO3G
Height	91 cm (3 feet)
Lighting Type	Fibre Optic with 80 Multi-Function LEDs
Power Source	Mains Powered (0.5W LEDs)
Intended Use	Indoor Use Only

## 9. WARRANTY INFORMATION



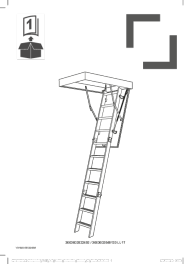
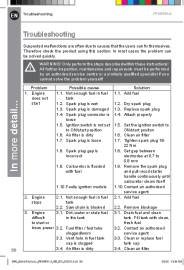
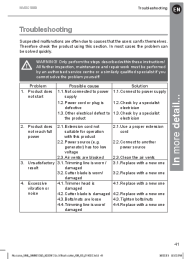
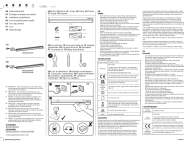
This Kingfisher product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, refer to the documentation provided at the time of purchase or contact Kingfisher customer support.

## 10. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report a problem with your Kingfisher 91cm Multi-Function LED Fibre Optic Christmas Tree, please contact your retailer or the manufacturer's customer service department. Please have your model number (FO3G) and proof of purchase ready when contacting support.

© 2023 Kingfisher. All rights reserved. Information in this manual is subject to change without notice.

### Related Documents - FO3G

	<p><a href="#">Kingfisher D002A-10L Dehumidifier: User Manual &amp; Operation Guide</a></p> <p>Discover the Kingfisher D002A-10L dehumidifier. This comprehensive manual offers essential operating instructions, safety guidelines, maintenance advice, and troubleshooting tips for effective moisture control in your home. Learn about its 10L/day capacity, R290 refrigerant, and user-friendly features.</p>
	<p><a href="#">Kingfisher Deluxe Undercounter Glass &amp; Dishwashers User Manual</a></p> <p>User manual for Kingfisher Deluxe Undercounter Glass &amp; Dishwashers, covering introduction, safety instructions, product specifications, installation, operation, and maintenance.</p>
	<p><a href="#">Kingfisher LL1T Loft Ladder Installation and Assembly Guide</a></p> <p>Comprehensive installation and assembly instructions for the Kingfisher LL1T loft ladder, including safety guidelines, part lists, and usage information. Download the manual for proper setup and maintenance.</p>
	<p><a href="#">Troubleshooting Guide for Petrol Chainsaw FPCSP41-3</a></p> <p>A comprehensive troubleshooting guide for the FPCSP41-3 petrol chainsaw, detailing common problems, their possible causes, and solutions to help users quickly resolve issues.</p>
	<p><a href="#">NMBC1000 Brush Cutter Troubleshooting Guide</a></p> <p>Troubleshooting guide for the Kingfisher NMBC1000 brush cutter, detailing common issues, their causes, and solutions for self-repair.</p>
	<p><a href="#">Kingfisher 559mm LED Undercabinet Light Installation and Safety Guide</a></p> <p>Comprehensive guide for installing and safely using the Kingfisher 559mm LED Undercabinet Light. Includes safety warnings, technical specifications, installation steps, and warranty information.</p>