

Ridgeway QS-1037B

Ridgeway QS-1037B Bluetooth Speaker User Manual

Model: QS-1037B

INTRODUCTION

Thank you for purchasing the Ridgeway QS-1037B Bluetooth Speaker. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new speaker. Please read this manual thoroughly before using the product to ensure proper function and to extend its lifespan. The Ridgeway QS-1037B is a portable and powerful amplified speaker designed to enhance your audio experience with its robust sound, versatile connectivity, and dynamic LED lighting. It features a 10-inch subwoofer, Bluetooth connectivity, USB and SD card readers, FM radio, and a karaoke function with an included microphone.

PACKAGE CONTENTS

Please check the package for the following items:

- Ridgeway QS-1037B Bluetooth Speaker
- Remote Control
- Microphone
- P2/P2 Audio Cable
- Internal Battery Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Side view of the Ridgeway QS-1037B Bluetooth Speaker, showcasing its robust design and side control panel.



Figure 2: Front view of the Ridgeway QS-1037B

Bluetooth Speaker, highlighting the 10-inch subwoofer and dual tweeters.



Figure 3: Top view of the speaker, showing the integrated LED globe for party lighting effects.



Figure 4: Front view of the speaker with its dynamic LED lights illuminated, showcasing various color patterns.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker's internal battery. Connect the provided charging cable to the speaker's charging port and plug the other end into a suitable power outlet. The charging indicator light will show the charging status. A full charge typically takes approximately 3 hours.

2. Placement

Place the speaker on a stable, flat surface. It can be used as a table-mounted or floor-standing unit. Ensure there is adequate ventilation around the speaker and avoid placing it near heat sources or in direct sunlight.

3. Powering On/Off

Locate the power switch on the speaker's control panel. Flip the switch to the "ON" position to power on the speaker. You will hear an audible prompt indicating it is ready for use. To power off, flip the switch to the "OFF" position.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED or audible prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Ridgeway QS-1037B" (or similar name) from the list of devices.
4. Once paired, the speaker will confirm with an audible sound, and the LED indicator will stop flashing.
5. You can now play audio from your device through the speaker.

2. USB/SD Card Playback

1. Insert a USB flash drive or SD card into the corresponding slot on the speaker's control panel.
2. The speaker will automatically detect the media and begin playing audio files.
3. Use the control buttons on the speaker or the remote control to navigate tracks (play/pause, next/previous).

3. FM Radio Mode

1. Press the "Mode" button on the speaker or remote control until you hear the FM radio prompt.
2. Press and hold the "Play/Pause" button to initiate an automatic station scan. The speaker will scan and save available FM stations.
3. Use the "Next/Previous" buttons to switch between saved stations.

4. Karaoke Function

1. Connect the provided microphone to the microphone input jack on the speaker.
2. Adjust the microphone volume using the dedicated knob on the control panel.
3. Play your desired music through Bluetooth, USB, or SD card, and sing along!

5. LED Lighting Control

The speaker features dynamic front LEDs and an LED globe. Use the dedicated LED control button on the speaker or remote control to cycle through different lighting modes or turn them off.

6. Remote Control Usage

The included remote control allows for convenient operation from a distance. It provides control over power, mode selection, volume, track navigation, FM radio functions, and LED lighting.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the

speaker regularly, even if not in constant use.

- **Handling:** The speaker is portable but should be handled with care. Use the integrated strap and wheels for easy transport. Avoid dropping or subjecting the speaker to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is off.	Charge the speaker; Ensure the power switch is in the "ON" position.
No sound	Volume is too low; Incorrect mode selected; Device not paired (Bluetooth).	Increase volume; Select the correct input mode (Bluetooth, USB, SD, FM); Re-pair Bluetooth device.
Bluetooth not connecting	Speaker is not in pairing mode; Device Bluetooth is off; Too far from speaker.	Ensure speaker is in pairing mode; Turn on Bluetooth on your device; Move device closer to speaker (within 10 meters).
USB/SD card not playing	Unsupported file format; Corrupted media; Card/drive not inserted correctly.	Ensure audio files are in a supported format (e.g., MP3); Try a different USB drive/SD card; Re-insert the media securely.
Microphone not working	Microphone not connected; Microphone volume too low.	Ensure microphone is securely plugged in; Increase microphone volume.

SPECIFICATIONS

Model	QS-1037B
Speaker Type	Amplified Subwoofer Speaker
Subwoofer Diameter	10 inches (25.4 cm)
PMPO Output Wattage	2000 Watts
RMS Power	120 Watts
Connectivity	Bluetooth, USB, SD Card, FM Radio, P2/P2 AUX
Special Features	Front LED Lights, LED Globe, Karaoke Function, Portable (Strap & Wheels)
Power Source	Internal Rechargeable Battery
Battery Charging Time	Approx. 3 hours
Dimensions (D x W x H)	32 cm x 34.5 cm x 61 cm (12.6 in x 13.6 in x 24 in)
Weight	10 kg (22 lbs)
Color	Black

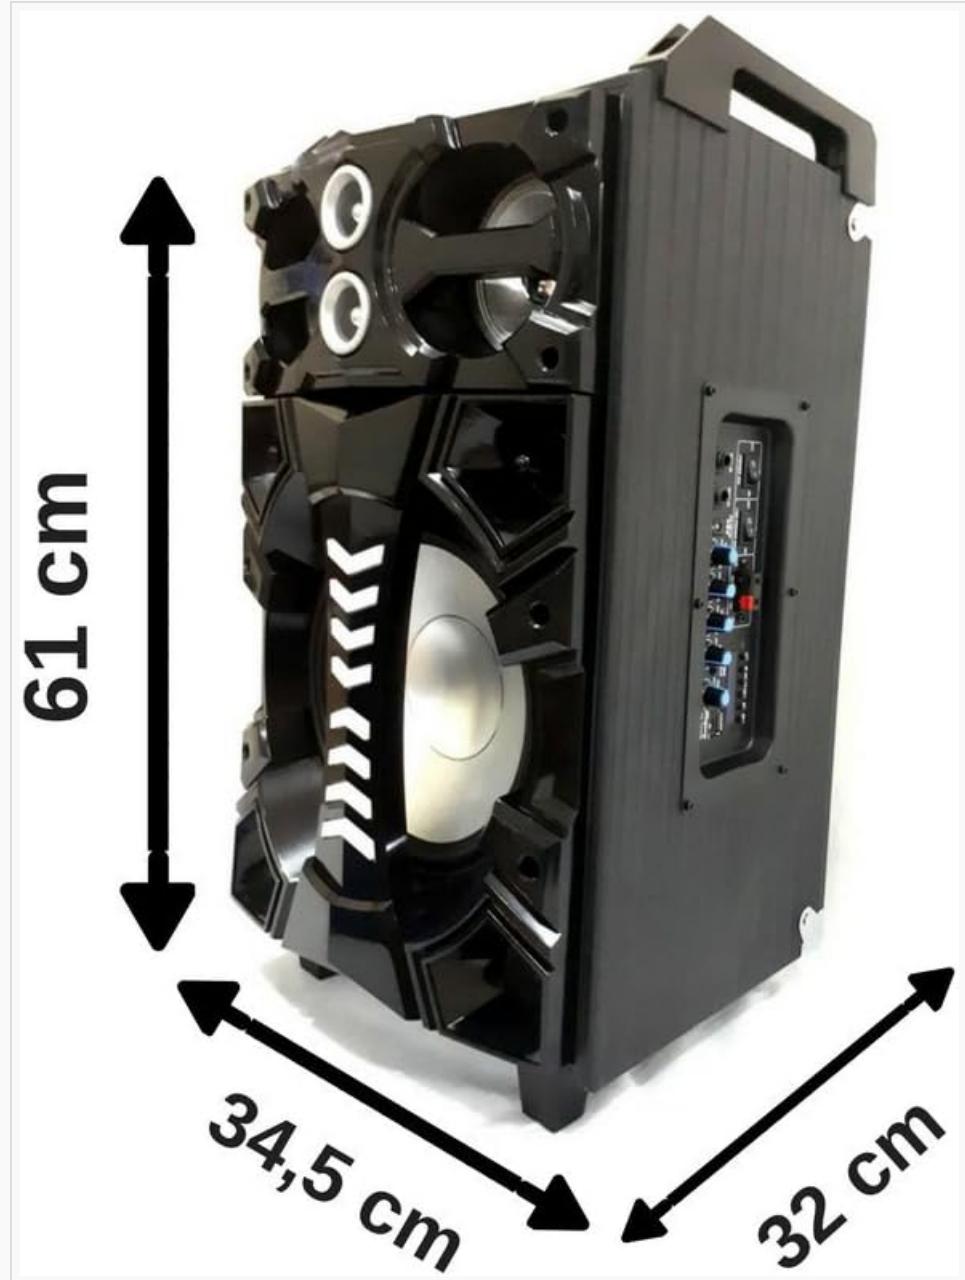


Figure 5: Dimensions of the Ridgeway QS-1037B speaker: 61 cm height, 34.5 cm width, and 32 cm depth.

WARRANTY INFORMATION

The Ridgeway QS-1037B Bluetooth Speaker comes with a **6-month factory warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims. For warranty service, contact Ridgeway customer support.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Ridgeway customer support through their official website or the contact information provided with your purchase documentation.

For more information, visit the official Ridgeway website: www.ridgeway.com (Note: This is a placeholder link as no specific support link was provided in the product data).

© 2024 Ridgeway. All rights reserved.