

[Manuals.plus](#) /

› [SanDisk](#) /

› SanDisk 256GB Ultra Fit USB 3.2 Flash Drive - Instruction Manual

SanDisk SDCZ430-256G-G46

SanDisk Ultra Fit USB 3.2 Flash Drive (256GB) - Instruction Manual

Model: SDCZ430-256G-G46

1. INTRODUCTION

This manual provides instructions for the SanDisk Ultra Fit USB 3.2 Flash Drive. This compact, high-speed USB drive is designed for adding extra storage to various compatible devices. Please read this manual thoroughly before using the product.



The SanDisk Ultra Fit USB 3.2 Flash Drive discreetly plugged into a laptop, demonstrating its low-profile "plug-and-stay" design.

2. KEY FEATURES

- **Compact Plug-and-Stay Design:** Ideal for adding storage to laptops, game consoles, in-car audio systems, and other devices without protruding excessively.
- **High Capacity:** Provides up to 256GB of storage for your files.
- **Fast Performance:** Features read speeds up to 130MB/s and write speeds up to 15X faster than

standard USB 2.0 drives. Requires a USB 3.2 Gen 1 or USB 3.0 port for optimal performance.

- **Efficient File Transfer:** Capable of transferring a full-length movie in less than 30 seconds when used with a compatible USB 3.2 Gen 1 or USB 3.0 host device.
- **Data Security:** Includes SanDisk SecureAccess software for password protection using 128-bit AES encryption. Supported by Windows 7, Windows 8, Windows 10, and macOS v10.9+.

3. SETUP

The SanDisk Ultra Fit USB 3.2 Flash Drive offers plug-and-play functionality, making it easy to use with compatible devices.

1. **Locate a USB Port:** Identify an available USB Type-A port on your computer, laptop, game console, car audio system, or other compatible device.
2. **Insert the Drive:** Carefully insert the SanDisk Ultra Fit USB Flash Drive into the USB port. Ensure it is fully seated.
3. **Automatic Detection:** Your device's operating system should automatically detect the drive. A new drive letter will typically appear in your file explorer (Windows) or on your desktop (macOS), indicating the drive is ready for use.

**Backwards compatible with USB 3.0
and 2.0 ports**



The SanDisk Ultra Fit USB 3.2 Flash Drive inserted into a laptop's USB port, demonstrating its compact, low-profile design.

4. OPERATING INSTRUCTIONS

4.1. Transferring Files

To transfer files to or from the drive:

1. Open your file explorer (Windows) or Finder (macOS).
2. Navigate to the SanDisk Ultra Fit drive, which will appear as a removable storage device.
3. Drag and drop files or folders to and from the drive as you would with any other storage device.

4.2. Using SanDisk SecureAccess Software

For password protection of your files:

1. The SanDisk SecureAccess software is pre-loaded on the drive. Double-click the application icon to launch it.
2. Follow the on-screen instructions to set up a password-protected vault.
3. Drag and drop files into the vault to encrypt them.

Note: Software download may be required for Mac users. Visit the official SanDisk website for SecureAccess details.



**Easy file recovery with RescuePRO
Deluxe Software**

A screenshot of a computer displaying the SanDisk SecureAccess software interface, indicating file protection features.



The SanDisk Ultra Fit USB 3.2 Flash Drive shown in use with various devices including a laptop, tablet, and car audio system, illustrating its versatility.

5. MAINTENANCE

- **Safe Ejection:** Always safely eject the drive from your computer or device before physically removing it. This prevents data corruption and ensures data integrity.
- **Keep Clean:** Keep the drive clean and free from dust, dirt, and moisture. Use a soft, dry cloth for cleaning.
- **Physical Protection:** Due to its small size, store the drive in a secure location to prevent loss or physical damage. Avoid exposing it to extreme temperatures or direct sunlight.

6. TROUBLESHOOTING

6.1. Drive Not Detected

- Ensure the drive is fully inserted into the USB port.
- Try a different USB port on your device.
- Restart your computer or device.
- Check your device's Device Manager (Windows) or Disk Utility (macOS) to see if the drive is

recognized but not assigned a drive letter or mounted.

6.2. Slow Transfer Speeds

- Ensure you are using a USB 3.0 or 3.2 Gen 1 compatible port for optimal performance. USB 2.0 ports will result in significantly slower speeds.
- Transferring a large number of small files can be slower than transferring a single large file of the same total size.
- Close other applications that might be using system resources during file transfers.

6.3. Drive Becomes Warm During Use

- It is normal for the drive to become warm during extended use or large file transfers. This is due to its compact design and high-speed operation and typically does not indicate a problem.

7. SPECIFICATIONS

Feature	Detail
Brand	SanDisk
Model Number	SDCZ430-256G-G46
Storage Capacity	256 GB
Read Speed	Up to 130 MB/s
Write Speed	Up to 90 MB/s <i>(Actual write speeds may vary)</i>
Connectivity Technology	USB
Hardware Interface	USB Type A
Hardware Platform	PC, Mac
Product Dimensions	1.17 x 0.56 x 0.2 inches
Item Weight	0.451 ounces
Special Feature	Compact

8. WARRANTY AND SUPPORT


This SanDisk Ultra Fit USB 3.2 Flash Drive comes with a 5-year limited warranty. For detailed warranty information, technical support, and software downloads (such as SanDisk SecureAccess), please visit the official SanDisk website or contact their customer service.

What's in the Box:

- SanDisk Ultra Fit USB 3.2 Flash Drive
- 5-year Warranty information

9. PRODUCT OVERVIEW (VISUALS)

9.1. Product Images

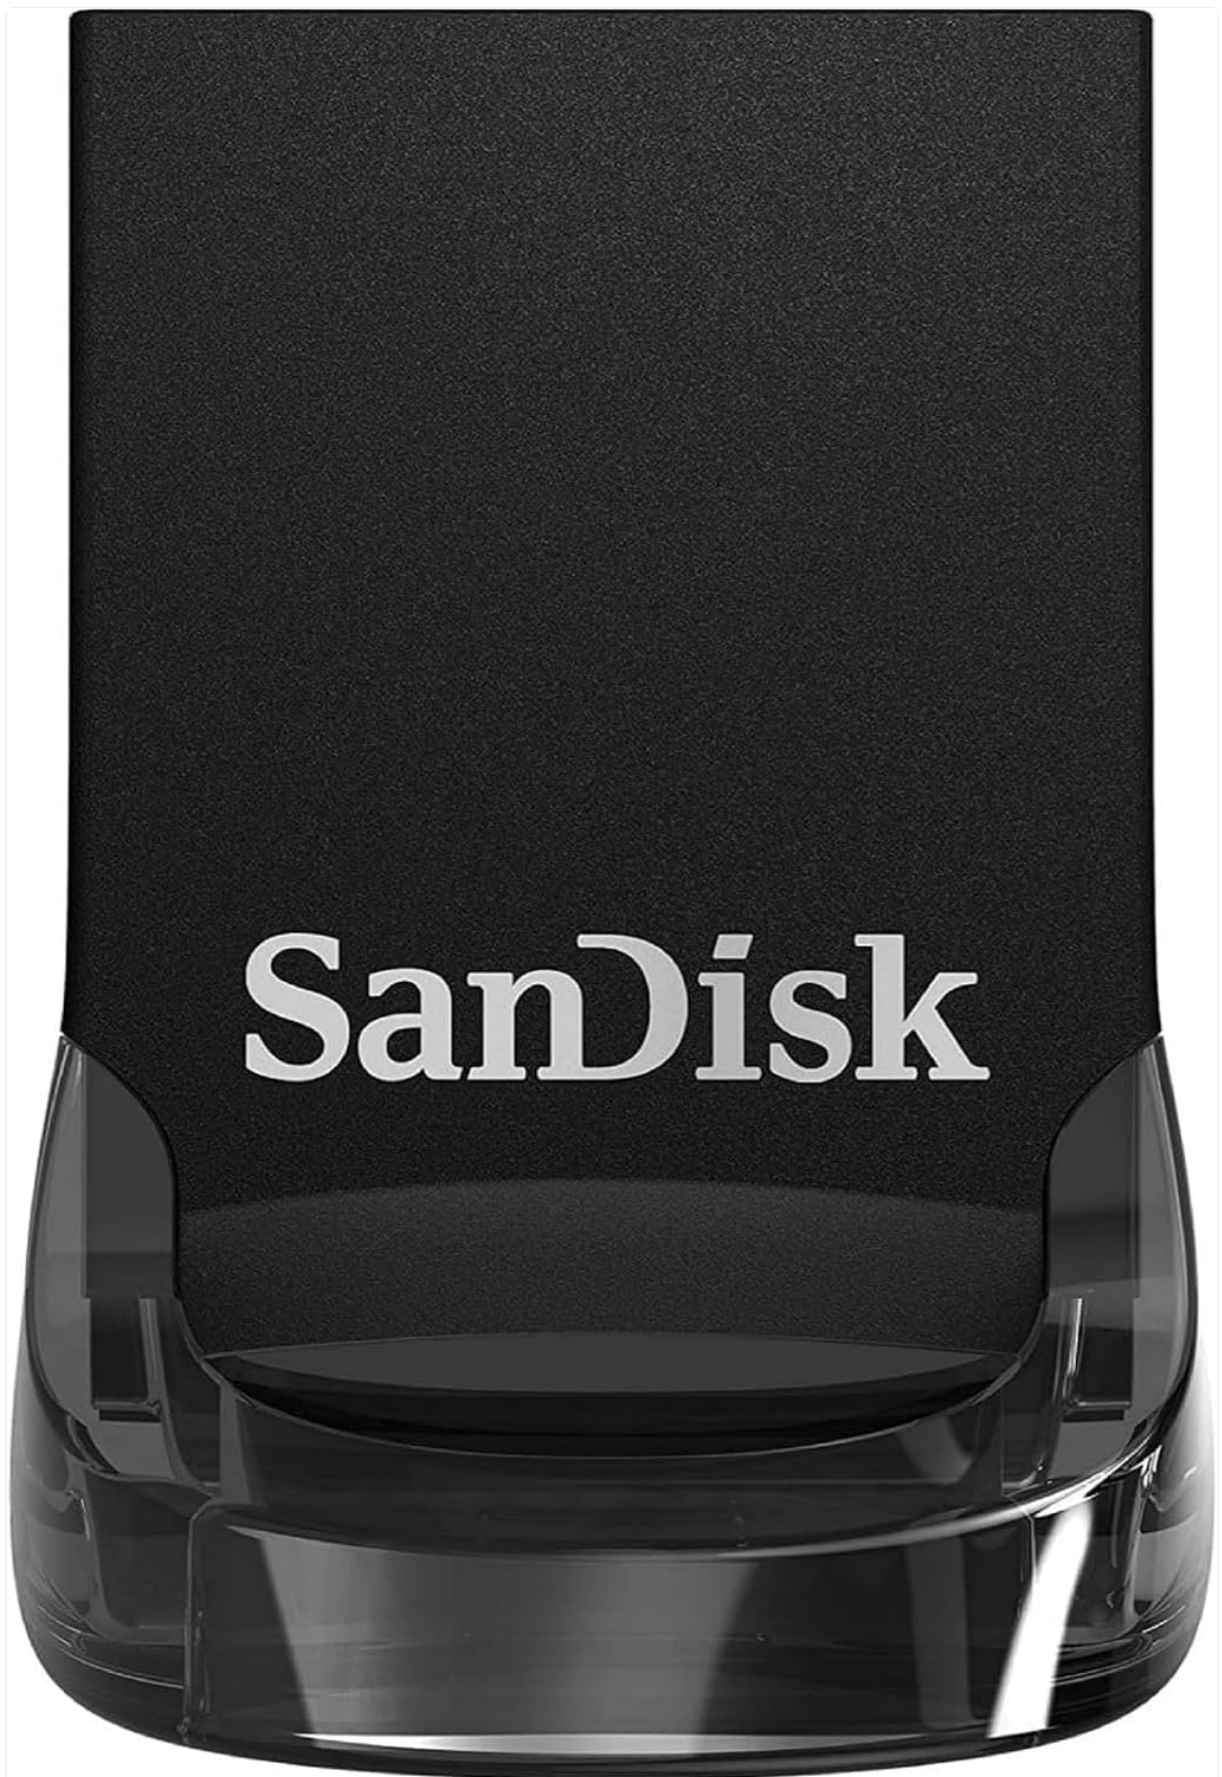

A close-up view of the SanDisk 256GB Ultra Fit USB 3.2 Flash Drive, highlighting its compact design and SanDisk branding.

Compact Plug-and-Stay Design



The SanDisk Ultra Fit USB 3.2 Flash Drive in its retail packaging, showing its small size and key features.



A detailed view of the SanDisk Ultra Fit USB 3.2 Flash Drive, emphasizing its small form factor.

9.2. Official Product Videos

No official seller videos are available for embedding based on the provided product data.