

Ravensburger 25042

Ravensburger Logi-Geister Educational Board Game Instruction Manual

Model: 25042

1. INTRODUCTION

The Ravensburger Logi-Geister (Logic Ghosts) game is an engaging educational board game designed to foster logical thinking, technical understanding, and fine motor skills in children aged 5 to 10 years. In this game, players work to connect gears on a ghost track, ensuring all spirits turn simultaneously. This manual provides detailed instructions for setting up and playing the game, along with important safety information and product specifications.

2. SAFETY WARNINGS

- **WARNING:** Not suitable for children under 36 months due to small parts. Choking hazard.
- Adult supervision is recommended during play.
- Keep all game components away from pets and infants.

3. COMPONENTS

Please ensure all the following components are present in your game box:

- 1 Game Board
- 1 Game Board Mat
- 32 Pins
- 12 Colored Gears (various colors)
- 4 Purple Gears with Rotary Knob
- 3 Ghost Figures
- 4 Player Pawns (or game markers)
- 16 Building Cards
- 1 Symbol Die



Image 1: The complete Ravensburger Logi-Geister game set, including the game box, the main game board with its purple frame, various colored gears (red, yellow, green, blue), white ghost figures, small colored pins, a symbol die, and several building cards. The game board features a track with holes for pins and gears, designed for logical puzzle-solving.

4. SETUP

1. Place the game board mat onto a flat playing surface.
2. Position the game board on top of the mat.
3. Distribute the 32 pins into the designated holes on the game board.
4. Place the 3 ghost figures onto their starting positions on the board.
5. Each player selects a player pawn and places it near the board.
6. Shuffle the 16 building cards and place them face down in a draw pile.
7. Keep the colored gears, purple gears with rotary knobs, and the symbol die accessible to all players.

5. OPERATING INSTRUCTIONS (HOW TO PLAY)

Game Objective:

The primary goal is to connect all the gears on the game board in such a way that when one gear is turned, all the ghost figures on the board also rotate simultaneously.

Basic Gameplay:

1. Players take turns drawing a building card.
2. The card will indicate which gears and pins need to be placed or moved on the board.
3. Players strategically place the colored gears and purple gears with rotary knobs onto the pins on the

game board.

- The challenge is to arrange the gears so that they interlock correctly.
- Once a player believes the gears are correctly connected, they can turn one of the purple gears with a rotary knob.
- If all ghost figures rotate, the player successfully completed the puzzle for that round.

Advanced Variant:

For a more challenging experience, each player receives their own building plan (card) and attempts to complete their gear arrangement independently. Players can compete to see who can solve their puzzle first or work collaboratively on more complex arrangements.

6. MAINTENANCE

- Store all game components in the original box to prevent loss or damage.
- Keep the game away from direct sunlight and extreme temperatures.
- Clean components with a dry, soft cloth if necessary. Do not use abrasive cleaners or liquids.
- Ensure all pieces are dry before storing to prevent warping or mold.

7. TROUBLESHOOTING

- Gears not turning smoothly:** Check for any misaligned pins or debris obstructing the gears. Ensure gears are properly interlocked.
- Missing components:** Refer to the 'Components' section (Section 3) to verify all pieces. If a component is missing, please contact Ravensburger customer support.
- Difficulty understanding rules:** Re-read the 'Operating Instructions' (Section 5). For further clarification, visit the official Ravensburger website for FAQs or video tutorials.

8. SPECIFICATIONS

Feature	Detail
Model Number	25042
Brand	Ravensburger
Recommended Age	5 - 10 years
Number of Players	2 - 4 players
Material	Cardboard, Plastic
Item Dimensions (L x W x H)	37 x 37 x 6 cm
Educational Objective	Logical thinking, fine motor skills, technical understanding

9. WARRANTY

This Ravensburger Logi-Geister game comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for any

warranty claims. The warranty does not cover damage resulting from misuse, accidents, or normal wear and tear.

10. SUPPORT

For further assistance, missing parts, or questions regarding the Ravensburger Logi-Geister game, please contact Ravensburger customer support through their official website or the contact information provided on the game box. When contacting support, please have your model number (25042) and proof of purchase available.