

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Satisfyer](#) /
- › Satisfyer Double Plus Remote Vibrator: User Manual

Satisfyer EE72-758-0617

Satisfyer Double Plus Remote Vibrator: User Manual

Model: EE72-758-0617

1. PRODUCT OVERVIEW

The Satisfyer Double Plus Remote is a U-shaped vibrator designed for simultaneous clitoral, vaginal, and penile stimulation. It features two powerful motors and is controlled via an intuitive panel on the device or a wireless remote control. The device is made from body-safe silicone and is waterproof for versatile use and easy cleaning.



Image 1.1: The Satisfyer Double Plus Remote vibrator and its accompanying wireless remote control.

2. SAFETY INFORMATION

- **Material Safety:** The device is constructed from medical-grade silicone. Ensure no allergic reactions occur upon initial contact.
- **Lubricant Compatibility:** Use only water-based lubricants with this device. Silicone-based lubricants can damage the silicone material.
- **Waterproof Rating:** The device is waterproof (IPX7), allowing for use in water and easy cleaning. Do not submerge the charging cable.
- **Charging Safety:** Use only the provided magnetic USB charging cable. Do not use the device while it is charging.

- **Storage:** Store the device in a clean, dry place away from direct sunlight and extreme temperatures.

3. GETTING STARTED (SETUP)

3.1 Initial Charging

1. Connect the magnetic USB charging cable to the charging points on the device.
2. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
3. The device's indicator light will illuminate during charging. A full charge typically takes approximately 2-3 hours.
4. Once fully charged, the indicator light will change or turn off, depending on the model. Disconnect the cable.



Image 3.1: The magnetic USB charging cable.

3.2 First Use Cleaning

Before the first use and after each subsequent use, clean the device thoroughly. Refer to Section 5 for detailed cleaning instructions.

4. OPERATION

4.1 Power On/Off

- To power on the device, press and hold the power button on the device or the remote control for 2 seconds. The device will vibrate briefly.
- To power off the device, press and hold the power button on the device or the remote control for 2 seconds. The device will stop vibrating.

4.2 Vibration Modes

The Satisfyer Double Plus Remote offers 10 distinct vibration programs.

- **Changing Modes:** Press the '+' or '-' buttons on the device or remote control to cycle through the available vibration programs.
- **Intensity Adjustment:** Some modes allow for intensity adjustment. Use the '+' and '-' buttons to increase or decrease the vibration strength within a mode.

4.3 Using the Remote Control

The wireless remote control allows for convenient operation of the device from a distance.

- Ensure the remote control is charged (if applicable, check product specifications for remote charging details).

- The remote control mirrors the functions of the buttons on the main device (Power, +, -).

Your browser does not support the video tag.

Video 4.1: An overview of the Satisfyer Double Plus Remote's features and controls.

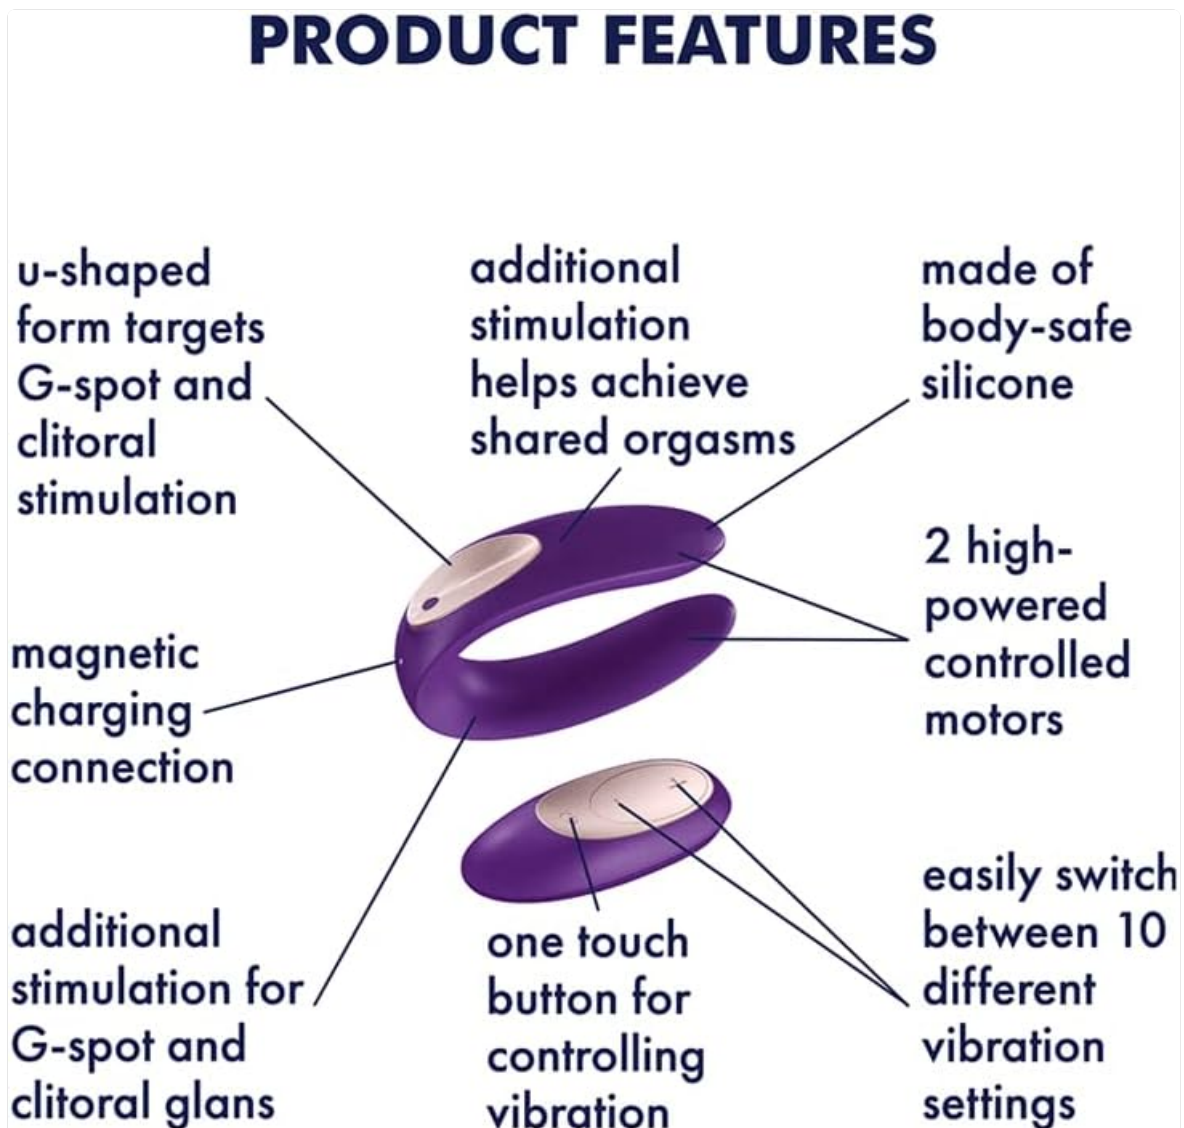


Image 4.2: Key features of the Satisfyer Double Plus Remote, including control options and material.



Image 4.3: Suggested placement for partner use.

5. CLEANING AND CARE (MAINTENANCE)

5.1 Daily Cleaning

- After each use, clean the device with warm water and a mild, toy-specific cleaner or antibacterial soap.

- Rinse thoroughly to remove all soap residue.
- Dry the device completely with a lint-free cloth before storing.

5.2 Storage

- Store the device in a clean, dry, and dust-free environment.
- Keep it away from direct sunlight, extreme temperatures, and other toys made of different materials to prevent damage or discoloration.



Image 5.1: The device is waterproof (IPX7) for easy cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully using the provided USB cable.
Device does not vibrate or vibrates weakly.	Low battery; incorrect mode selected.	Ensure device is fully charged. Cycle through vibration modes using the '+' button.
Remote control is unresponsive.	Remote battery low; out of range; interference.	Ensure remote is charged (if applicable). Bring remote closer to the device. Avoid sources of strong electromagnetic interference.
Charging cable does not connect properly.	Misalignment; debris on contacts.	Ensure the magnetic contacts are clean and properly aligned.

7. SPECIFICATIONS

- **Model Number:** EE72-758-0617
- **Material:** Medical-grade Silicone
- **Dimensions:** 3 x 0.75 x 2 inches (L x W x H)
- **Weight:** 6.3 ounces
- **Battery:** 1 Lithium Ion battery (included)
- **Charging:** Magnetic USB charging cable
- **Vibration Programs:** 10
- **Waterproof Rating:** IPX7

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Satisfyer Double Plus Remote comes with a **15-year product protection guarantee**. This warranty covers manufacturing defects and ensures long-lasting satisfaction. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please visit the official Satisfyer website or contact their customer support directly. Contact information can typically be found on the product packaging or the brand's official online presence.