

[Manuals.plus](#) /

> [Beko](#) /

> Beko DIN 14212 Fully Integrated Dishwasher User Manual

Beko DIN 14212

Beko DIN 14212 Fully Integrated Dishwasher User Manual

Model: DIN 14212 | Brand: Beko

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Beko DIN 14212 fully integrated dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference. Proper use and care will ensure optimal performance and longevity of your dishwasher.

1. SETUP AND INSTALLATION

The Beko DIN 14212 is a fully integrated dishwasher designed to be seamlessly built into your kitchen cabinetry. Professional installation is recommended to ensure correct fitting and connection to water and power supplies.

1.1 Dimensions and Components

- **Product Dimensions:** 59.8 cm (width) x 57 cm (depth) x 81.8 cm (height)
- **Included Components:** Power cable, Drain hose

1.2 Installation Guidelines

1. Ensure the installation area is level and stable.
2. Connect the water inlet hose to a cold water supply.
3. Securely connect the drain hose to a suitable drainage point.
4. Plug the power cable into a grounded electrical outlet.
5. Adjust the appliance's feet to ensure it is level and stable within the cabinet opening.
6. Attach the custom cabinet door panel according to the provided template (not included in this manual).

For detailed plumbing and electrical connections, consult a qualified technician.

2. OPERATING INSTRUCTIONS

Your Beko DIN 14212 dishwasher offers efficient cleaning for up to 12 place settings. The controls are located on the top edge of the door, visible when the door is slightly ajar.



Image: The Beko DIN 14212 dishwasher with its door partially open, revealing the control panel and the upper and lower racks.

2.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller, more delicate items in the upper basket.
- Ensure that spray arms can rotate freely and are not blocked by dishes.
- Utilize the upper basket adjustment feature for taller items if needed.

2.2 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the **Rinse Aid Indicator Light** and refill the rinse aid dispenser when necessary.
- Monitor the **Salt Indicator** and add dishwasher salt to the softener unit if the light illuminates.

2.3 Selecting a Wash Program

The dishwasher features **7 wash programs** and **4 optional cycles** to suit various cleaning needs. Use the built-in display to navigate and select your desired program.

- **Normal:** Standard program for daily soiled dishes.
- **Quick:** For lightly soiled dishes requiring a faster wash.
- **Delayed Start:** Allows you to postpone the start of a wash cycle.
- **Half Load:** For smaller loads, saving water and energy.

2.4 Starting a Cycle

1. Close the dishwasher door firmly.

2. Select the desired wash program using the control panel.
3. Press the Start button to begin the cycle.

3. MAINTENANCE AND CARE

Regular maintenance ensures the efficient operation and extends the lifespan of your dishwasher.

3.1 Cleaning the Filters

Your dishwasher is equipped with a **Self-Cleaning Filter** system. However, periodic manual inspection and cleaning of the filter assembly are recommended to prevent blockages and ensure optimal washing performance. Refer to the detailed instructions in your full product manual for filter removal and cleaning.

3.2 Exterior and Interior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- Clean the interior periodically to remove any food residue or mineral deposits.
- Ensure the spray arms are free from blockages.

3.3 Salt and Rinse Aid Levels

Always ensure that dishwasher salt and rinse aid levels are maintained as indicated by the respective indicator lights to prevent limescale buildup and ensure streak-free drying.

4. TROUBLESHOOTING

If you encounter any issues with your dishwasher, consult the following general troubleshooting tips. For more specific problems, refer to the comprehensive troubleshooting guide in your full product manual.

4.1 Common Issues

- **Dishwasher not starting:** Check if the door is fully closed, the power cable is connected, and the circuit breaker has not tripped.
- **Dishes not clean:** Ensure proper loading, sufficient detergent, clean filters, and unobstructed spray arms.
- **Water not draining:** Check the drain hose for kinks or blockages, and ensure the filter is clean.
- **Excessive noise:** Verify that dishes are not interfering with spray arms or other internal components.

If the problem persists, contact Beko customer service or a qualified technician.

5. SPECIFICATIONS

Feature	Specification
Model Name	DIN 14212
Brand	Beko
Installation Type	Fully Integrated
Capacity	12 Place Settings

Feature	Specification
Product Dimensions (WxDxH)	59.8 x 57 x 81.8 cm
Material	Stainless Steel (interior)
Color	White (panel ready)
Control Type	Fully Integrated Controls
Number of Wash Programs	7
Optional Cycles	4 (e.g., Delayed Start, Half Load, Normal, Quick)
Water Consumption	10 Liters (per cycle)
Noise Level	52 dB
Voltage	220 Volts
Special Features	Built-in Display, Self-cleaning Filter, Salt Indicator, Half Load, Delayed Start, Adjustable Feet, Upper Basket Adjustment, Rinse Aid Indicator Light
Components Included	Power cable, Drain hose
ASIN	B0785XJMZX
First Available Date	December 8, 2017

6. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Beko website or the documentation provided with your purchase.

6.1 Returns and Defects

If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the retailer's help page on returns. If you have received a defective or damaged product, please consult the retailer's help page on defective or damaged items. For specific information on purchases made through a marketplace, consult the relevant marketplace help page.

For direct assistance with product defects or operational issues, please contact Beko customer service.

