

- Manuals.plus /
- › Young Living /
- › Young Living Dewdrop Diffuser Ultrasonic Essential Oil Diffuser User Manual (Model sqsqsq-t103)

Young Living sqsqsq-t103

Young Living Dewdrop Diffuser User Manual

Model: sqsqsq-t103

1. INTRODUCTION

The Young Living Dewdrop Diffuser is an ultrasonic device designed to disperse essential oils into the air. It functions as a humidifier, atomizer, and essential oil vaporizer, creating an aromatic environment in your home or office. This manual provides instructions for safe setup, operation, and maintenance of your diffuser.

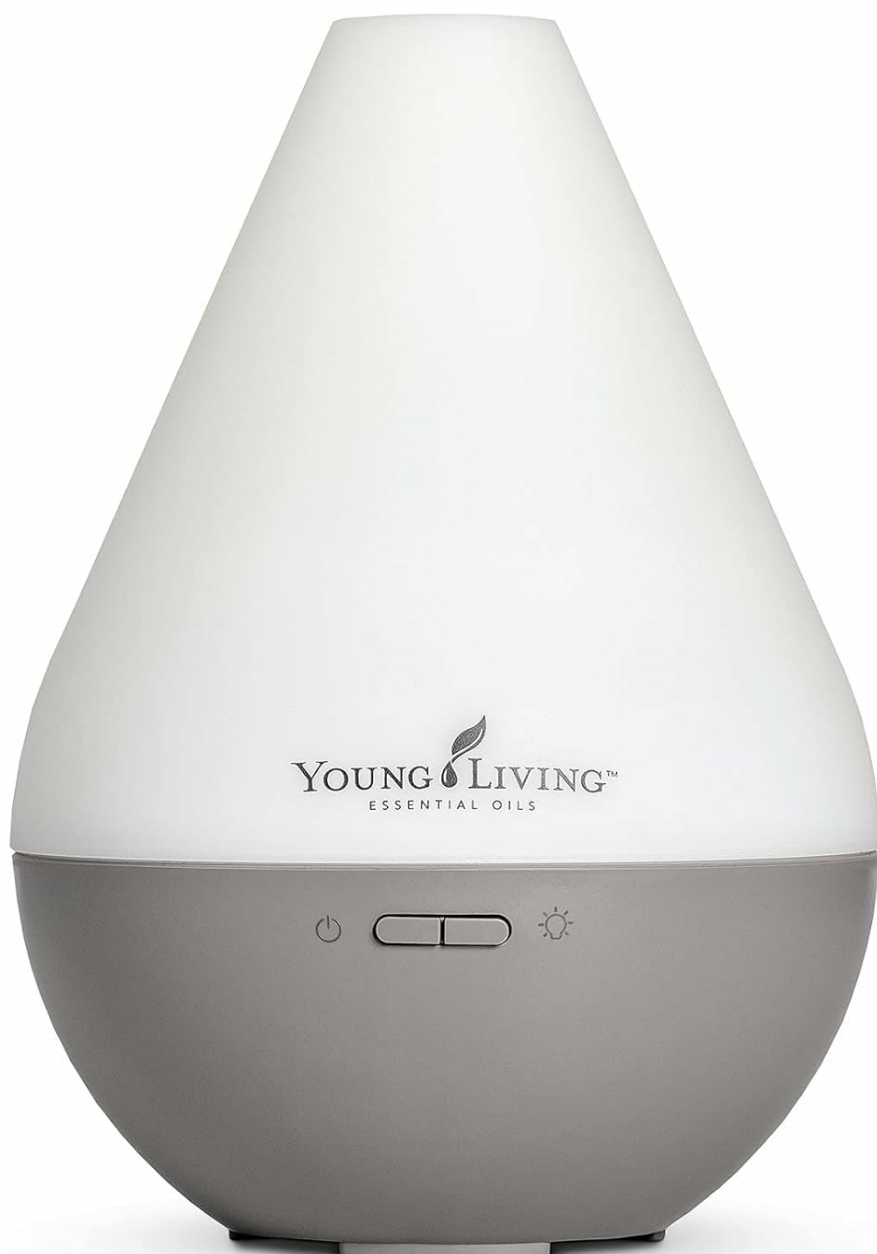


Image 1.1: Front view of the Young Living Dewdrop Diffuser.

2. SAFETY INFORMATION

Please read all safety instructions before operating the diffuser.

- Keep the diffuser out of reach of children and pets.
- Avoid direct contact of essential oils with skin and eyes. In case of contact, rinse thoroughly with water.
- If essential oil is ingested, seek medical help immediately.
- Use only clean tap water or distilled water. Do not use hot water.
- Do not exceed the maximum water fill line.
- Ensure the diffuser is placed on a stable, flat surface away from direct sunlight, heat sources, and air conditioning vents.
- Unplug the diffuser from the power outlet before cleaning or when not in use.

- Do not attempt to disassemble or repair the diffuser yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Young Living Dewdrop Diffuser Unit
- Power Adapter
- Operating Manual

4. PRODUCT OVERVIEW


Familiarize yourself with the main components of your Dewdrop Diffuser:

- **Outer Cover:** The decorative top part of the diffuser.
- **Inner Cover:** Sits below the outer cover, protecting the mist outlet.
- **Water Reservoir:** The basin where water and essential oils are added. Includes a maximum fill line.
- **Ultrasonic Plate:** Located at the bottom of the water reservoir, responsible for creating mist.
- **Air Outlet:** Where the mist is released.
- **Power Button:** Controls power and diffusion settings.
- **Light Button:** Controls the LED light settings.
- **Power Inlet:** Located at the base for connecting the power adapter.

5. SETUP INSTRUCTIONS

Follow these steps to set up your Dewdrop Diffuser for first use:

1. **Unpack:** Carefully remove the diffuser and all components from its packaging.
2. **Placement:** Place the diffuser on a flat, stable, and water-resistant surface.
3. **Remove Covers:** Gently remove the outer cover, then the inner cover, to access the water reservoir.
4. **Fill Water:** Fill the water reservoir with clean tap water or distilled water up to the red maximum fill line. Do not overfill.
5. **Add Essential Oil:** Add 5-10 drops of your preferred Young Living essential oil directly into the water reservoir. Adjust the number of drops based on personal preference and room size.

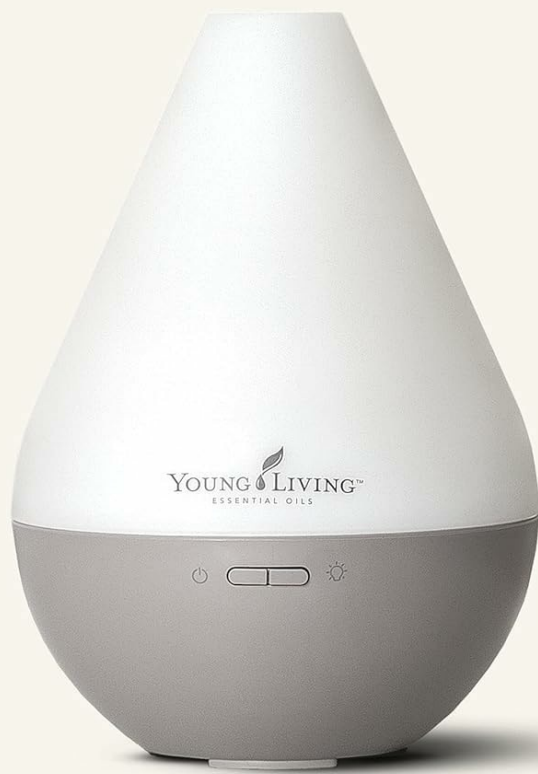

Scents-ible style

Add a little ambiance to any space with this sleek, modern diffuser.

Image 5.1: Illustrates the process of adding water and essential oil to the diffuser.

6. **Replace Covers:** Place the inner cover back onto the diffuser, ensuring it is properly seated. Then, replace the outer cover.
7. **Connect Power:** Plug the power adapter into the power inlet at the base of the diffuser, then plug the adapter into a wall outlet.

6. OPERATING INSTRUCTIONS

Once set up, operate your diffuser using the control buttons:

6.1. Diffusion Settings

- **Power Button (I):** Press the power button to cycle through diffusion modes:
 - **First Press:** High diffusion mode (up to 5 hours continuous operation).
 - **Second Press:** Low diffusion mode (up to 8 hours continuous operation).

- **Third Press:** Intermittent diffusion mode (1 minute on, 1 minute off, up to 10 hours operation).
- **Fourth Press:** Turn off diffusion.

10 Hours of Diffusion

Transforms any space into an inviting, aroma-filled atmosphere.



Image 6.1: The diffuser operating, providing up to 10 hours of aromatic diffusion.

6.2. Light Settings

- **Light Button (*):** Press the light button to cycle through light options:
 - **First Press:** Cycles through 11 LED light options.
 - **Second Press:** Activates a romantic candle-like flicker mode.
 - **Third Press:** Activates a gentle color cycle mode.
 - **Subsequent Presses:** Selects a specific color or turns off the light.

The diffuser operates quietly, with a noise level of less than 44 dB, making it suitable for bedrooms, offices, or other quiet spaces.

7. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the diffuser's performance and extends its lifespan.

7.1. Daily Cleaning

1. **Unplug:** Always unplug the diffuser from the power outlet before cleaning.
2. **Empty Water:** Remove the covers and carefully empty any remaining water from the reservoir, avoiding the air outlet side.
3. **Wipe Reservoir:** Wipe the inside of the water reservoir with a clean, soft cloth or paper towel.

7.2. Weekly Cleaning (or as needed)

1. **Deep Clean Reservoir:** If there is essential oil residue, add a small amount of rubbing alcohol or white vinegar to the reservoir and let it sit for 10-15 minutes.
2. **Clean Ultrasonic Plate:** Gently wipe the ultrasonic plate with a cotton swab dipped in rubbing alcohol or white vinegar. Do not scrub or use abrasive materials.
3. **Rinse and Dry:** Rinse the reservoir with clean water (avoiding the air outlet) and wipe dry with a soft cloth. Ensure all parts are completely dry before reassembling.

Note: Do not immerse the diffuser base in water. Do not use harsh detergents or solvents, as they may damage the unit.

8. TROUBLESHOOTING

If you encounter issues with your Dewdrop Diffuser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No mist or weak mist	Insufficient water	Add water to the max fill line.
	Water level too high	Reduce water to below the max fill line.
	Ultrasonic plate dirty	Clean the ultrasonic plate as per maintenance instructions.
	Air inlet/outlet blocked	Ensure the diffuser is on a flat surface and air vents are clear.
No power/lights	Power adapter not connected	Ensure power adapter is securely plugged into the diffuser and wall outlet.
	No power from outlet	Test the outlet with another device.
Unusual noise	Insufficient water	Add water to the max fill line.
	Diffuser not on a flat surface	Place the diffuser on a stable, flat surface.

9. SPECIFICATIONS

Feature	Detail
Brand	Young Living
Model Number	sqsqsq-t103

Feature	Detail
Product Dimensions	6.3 x 9.8 x 6.3 inches
Item Weight	1.65 Pounds
Diffusion Technology	Ultrasonic
Runtime	Up to 10 hours (intermittent mode)
Lighting Options	11 LED light options, candle flicker, color cycle
Noise Level	Less than 44 dB
Coverage Area	Up to 323 sq. ft.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Young Living customer service directly. Refer to the product packaging or the official Young Living website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07868881S>

More documents and user manuals: <https://manuals.plus/>