

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SKMEI](#) /

› [SKMEI 1219 Digital Watch User Manual](#)

SKMEI 1219

SKMEI 1219 Digital Watch User Manual

Model: 1219

INTRODUCTION

This manual provides detailed instructions for the SKMEI 1219 Digital Watch. It covers essential information regarding the watch's features, setup, operation, maintenance, and troubleshooting. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



Front view of the SKMEI 1219 Digital Watch, showing the digital display and button layout.

BUTTON FUNCTIONS

The SKMEI 1219 Digital Watch features four primary buttons for various functions. Refer to the diagram below for their locations and primary roles:



This diagram identifies the functions of each button and display area on the SKMEI 1219 Digital Watch, including LIGHT, MODE, START/STOP, RESET buttons, and display indicators for WEEK, DATE, TIME, PM, ALARM ON, and SNZ (Snooze).

- **LIGHT Button (Top Left):** Activates the backlight for improved visibility in low-light conditions.
- **MODE Button (Bottom Left):** Cycles through different modes: Time Display, Stopwatch, and Alarm Setting.
- **START/STOP Button (Top Right):** Used to start and stop the stopwatch, and to adjust settings in various modes.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, confirm settings, or clear values.

SETUP

Setting Time and Date

1. From the normal time display mode, press the **MODE** button three times to enter the time setting mode. The seconds digits will begin to flash.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hours → Minutes → Month → Date → Day of the Week.
3. While a digit is flashing, use the **START/STOP** button to adjust the value. Hold the button to increase the value rapidly.
4. Once all settings are adjusted, press the **MODE** button to return to the normal time display.

OPERATING INSTRUCTIONS

Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show '00:00:00'.
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. While paused, press the **RESET** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to exit Stopwatch mode.

Setting and Using the Alarm

1. From the normal time display, press the **MODE** button twice to enter Alarm setting mode. The hour digits will flash.
2. Press the **START/STOP** button to adjust the hour.
3. Press the **RESET** button to switch to minute setting. The minute digits will flash.
4. Press the **START/STOP** button to adjust the minutes.
5. Press the **MODE** button to exit Alarm setting mode.
6. To turn the alarm ON/OFF, in normal time display, press and hold the **RESET** button, then press the **START/STOP** button. An alarm icon will appear/disappear on the display.

Using the Backlight

Press the **LIGHT** button (top left) to illuminate the display for a few seconds. This feature is useful in dark environments.

MAINTENANCE

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and components.

Water Resistance

This watch has a water resistance depth of 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** recommended for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged, as this can compromise the water seal.

Battery Replacement

When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained. Attempting to replace the battery yourself may void the warranty or damage the watch.



Rear view of the SKMEI 1219 Digital Watch, highlighting the stainless steel case back and the secure buckle clasp on the plastic band.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the battery. Consult a professional watch technician.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons firmly. If issue persists, contact support.
Time is incorrect.	Time was not set correctly or accidental adjustment.	Re-set the time and date following the 'Setting Time and Date' instructions.
Water inside the watch.	Water resistance compromised due to button operation underwater or excessive depth.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

- **Model Number:** 1219
- **Display Type:** Digital
- **Movement Type:** Quartz
- **Case Material:** Plastic
- **Case Diameter:** 50 millimeters
- **Dial Glass Material:** Mineral
- **Band Material:** Plastic
- **Band Color:** Black
- **Clasp Type:** Buckle
- **Water Resistance Depth:** 50 meters (5 ATM)
- **Functions:** Time, Date, Day, Alarm, Stopwatch, Backlight
- **Item Weight:** 70 grams
- **Manufacturer:** Guangzhou Skmei Watch Co.,LTD

WARRANTY INFORMATION

This SKMEI 1219 Digital Watch comes with a manufacturer's warranty. For specific details regarding the warranty period, coverage, and terms, please refer to the warranty card included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact your retailer or the SKMEI customer support. You may find contact information on the product packaging or the official SKMEI website.