



[Manuals.plus](#) /

› [Landmann](#) /

› LANDMANN Pantera 1.0 Compact Gas Barbecue User Manual

Landmann 12338

LANDMANN Pantera 1.0 Compact Gas Barbecue User Manual

Model: 12338 | Brand: Landmann

1. INTRODUCTION

Thank you for choosing the LANDMANN Pantera 1.0 Compact Gas Barbecue. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new gas grill. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The LANDMANN Pantera 1.0 Compact Gas Barbecue in its assembled state, showcasing its portable design.

Key Features:

- Compact gas barbecue with a temperature display on the cast aluminum lid (readable in the dark).
- Cooking surface of 48x37 cm, suitable for up to 6 people.
- Equipped with 1 continuously adjustable stainless steel burner (3 kW).
- Electronic ignition for easy startup.
- Enameled cast iron cooking grate for even heat distribution and durability.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in serious personal injury or property damage.

- **For Outdoor Use Only:** Never operate this appliance indoors or in an enclosed area.
- **Gas Leak Check:** Always perform a leak test on all gas connections before initial use and after any gas cylinder change. Use a soapy water solution; bubbles indicate a leak.
- **Ventilation:** Ensure adequate ventilation. Do not obstruct the flow of combustion and ventilation air.

- **Clearance:** Maintain a minimum distance of 1 meter (3 feet) from combustible materials to the sides and rear of the appliance.
- **Hot Surfaces:** The barbecue surfaces become very hot during operation. Use heat-resistant gloves and avoid direct contact.
- **Children and Pets:** Keep children and pets away from the barbecue at all times.
- **Fuel Type:** Use only the specified type of gas (e.g., propane or butane, depending on your region and regulator).
- **Regulator and Hose:** Use only the pressure regulator and hose assembly supplied with the appliance. If replacement is necessary, contact the manufacturer for approved parts.
- **Never Leave Unattended:** Do not leave the barbecue unattended while in use.
- **Grease Fires:** In case of a grease fire, turn off the gas supply immediately. Do not use water to extinguish a grease fire.

3. ASSEMBLY INSTRUCTIONS

The LANDMANN Pantera 1.0 barbecue requires some assembly. It is recommended to have two people for assembly. Ensure all parts are present before beginning.

Required Tools:

- Screwdriver (Phillips head)
- Adjustable wrench

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Check against the parts list (not provided in this manual, refer to your product's packaging for a complete list).
2. **Attach Side Shelves:** Secure the side shelves to the main body of the barbecue using the provided screws and hardware.
3. **Install Burner:** Place the stainless steel burner into its designated position within the firebox. Ensure it is seated correctly over the gas inlet.



Image 3.1: Interior view of the barbecue with the stainless steel burner installed, ready for the cooking grate.

- 4. Place Cooking Grate:** Position the enameled cast iron cooking grate onto the supports above the burner.



Image 3.2: The enameled cast iron cooking grate placed inside the barbecue, providing the cooking surface.

5. **Connect Gas Supply:** Connect the gas hose and regulator to the barbecue's gas inlet and then to your gas cylinder. Ensure all connections are tight. Perform a leak test as described in the Safety Information section.

4. OPERATING INSTRUCTIONS

4.1. Connecting the Gas Cylinder

1. Ensure the burner control knob is in the "OFF" position.
2. Connect the regulator to the gas cylinder valve. Hand-tighten firmly.
3. Open the gas cylinder valve slowly.
4. Perform a leak test on all connections using a soapy water solution. If bubbles appear, tighten connections or replace faulty parts. Do not use the barbecue if a leak is detected.

4.2. Lighting the Burner

1. Open the gas cylinder valve.
2. Push in and turn the control knob to the "HIGH" position.
3. Press and hold the electronic ignition button until the burner ignites. You should hear a clicking sound and see a flame.
4. If the burner does not ignite within 5 seconds, turn the control knob to "OFF", wait 5 minutes for gas to dissipate, and repeat the lighting procedure.
5. Once lit, adjust the flame to the desired cooking temperature using the control knob.

4.3. Temperature Control

The LANDMANN Pantera 1.0 features a temperature display integrated into the lid, allowing you to monitor the internal temperature of the barbecue. This display is designed to be readable even in low light conditions.



Image 4.1: The integrated temperature gauge on the barbecue lid, featuring a glow-in-the-dark function for visibility in various lighting conditions.

- Adjust the control knob to increase or decrease the flame size, thereby controlling the cooking temperature.
- Close the lid to allow the barbecue to preheat and maintain a consistent temperature.
- Monitor the temperature gauge to achieve optimal cooking conditions for your food.

4.4. Shutting Down the Barbecue

1. Turn the burner control knob to the "OFF" position.
2. Close the valve on the gas cylinder.
3. Allow the barbecue to cool completely before moving or cleaning.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and safe operation of your barbecue.

5.1. After Each Use:

- **Cooking Grate:** Once the grate has cooled slightly but is still warm, use a grill brush to remove food residue. For stubborn residue, wash with warm soapy water and rinse thoroughly.
- **Grease Tray:** Empty and clean the grease tray regularly to prevent grease fires.

5.2. Periodic Maintenance:

- **Burner Cleaning:** Periodically inspect the burner ports for blockages (e.g., from insects). Use a wire brush or a stiff wire to clear any obstructions.
- **Exterior Cleaning:** Clean exterior surfaces with a mild detergent and a soft cloth. Avoid abrasive cleaners.
- **Gas Hose and Regulator:** Inspect the gas hose and regulator for cracks, cuts, or damage. Replace immediately if any damage is found.
- **Storage:** When not in use for extended periods, disconnect the gas cylinder and store the barbecue in a dry, protected area.

6. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Burner does not light with electronic ignition.	<ul style="list-style-type: none">• No gas flow.• Igniter electrode dirty or damaged.• Low battery in igniter (if applicable).	<ul style="list-style-type: none">• Check gas cylinder valve is open and gas is flowing.• Clean or adjust the igniter electrode.• Replace igniter battery.
Uneven heat or low flame.	<ul style="list-style-type: none">• Burner ports clogged.• Low gas pressure.	<ul style="list-style-type: none">• Clean burner ports.• Check gas cylinder level.
Gas leak detected (smell of gas, bubbling with soapy water).	<ul style="list-style-type: none">• Loose connections.• Damaged hose or regulator.	<ul style="list-style-type: none">• Immediately turn off gas supply.• Tighten all connections.• Replace damaged hose or regulator. Do not operate until leak is resolved.

7. SPECIFICATIONS

Feature	Detail
Model Number	12338
Brand	Landmann

Feature	Detail
Product Dimensions (L x W x H)	101 x 52.5 x 42 cm
Item Weight	12.57 Kilograms
Cooking Surface	48 x 37 cm
Burner Type	1 x Stainless Steel Burner
Burner Power	3 kW
Fuel Type	Gas
Ignition Type	Electronic
Grill Grate Material	Enameled Cast Iron
Lid Material	Cast Aluminum
Handle Material	Stainless Steel
Assembly Required	Yes
Special Feature	Compact, Temperature Display (readable in dark)
ASIN	B0787GLJHS
UPC/EAN	04000810123384

8. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact Landmann customer service. Refer to the contact details provided with your product packaging or visit the official Landmann website.

Website: www.landmann.com (Please verify the correct regional website for support)