

[manuals.plus](#) /

- › [Wahl Professional](#) /
- › [Wahl Professional Beret Lithium-Ion Cord/Cordless Trimmer Instruction Manual](#)

Wahl Professional WA-8841

Wahl Professional Beret Lithium-Ion Cord/Cordless Trimmer

Model: WA-8841

INTRODUCTION

The Wahl Professional Beret Trimmer is engineered for high-precision trimming with ultra-quiet operation. This versatile tool supports both corded and cordless use, powered by a long-lasting lithium-ion battery. Its ergonomic design and snap-on blades make it suitable for professional use and detailed grooming tasks.



SUPER SLIM & LIGHTWEIGHT

Beret

CORD/CORDLESS
TRIMMER

Ultra-quiet so it is ideal for use on children or those with sensory challenges.



Image: The Wahl Beret Trimmer, highlighting its super slim and lightweight design, ideal for precise control.

Key Features:

- **Professional Precision:** Designed for high-precision trimming with ultra-quiet operation.
- **Cord/Cordless Versatility:** Operates both with and without the cord for flexible use.
- **Long Battery Life:** Lithium-ion battery provides over 120 minutes of runtime on a full charge.
- **High Precision Blades:** Features snap-on blades for easy maintenance and precise cutting.

WHAT'S IN THE BOX

Your Wahl Professional Beret Trimmer package includes all necessary components for immediate use and maintenance:

What's in The Box



Lithium-Ion Cord/Cordless Trimmer

4 Cutting Guides (1/8" – 1/2")

Recharge Stand

Accessory Storage Well

Recharge Transformer

Styling Comb

Oil

Cleaning Brush

Operating Instructions

Red Blade Guard

Image: All items included in the Wahl Beret Trimmer kit, neatly arranged.

- Wahl Beret Lithium-Ion Cord/Cordless Trimmer
- 4 Attachment Combs (1/8", 1/4", 3/8", 1/2")
- Recharging Stand
- Recharging Transformer (Power Adapter)
- Styling Comb
- Cleaning Brush
- Blade Oil
- Red Blade Guard
- Operating Instructions Manual

SETUP

Initial Charging:

1. Before first use, ensure the trimmer is fully charged.

2. Connect the recharging transformer to the recharging stand.
3. Place the trimmer into the recharging stand. The indicator light on the trimmer will illuminate to show it is charging.
4. Allow the trimmer to charge for approximately 2 hours for a full charge. A full charge provides over 120 minutes of cordless operation.

Attaching Guide Combs:

To achieve desired hair lengths, select one of the four provided attachment combs. Align the comb with the trimmer blade and snap it securely into place. Ensure it is firmly attached before use.

OPERATING INSTRUCTIONS

Powering On/Off:

To turn the trimmer on, slide the power switch located on the side of the unit upwards. To turn it off, slide the switch downwards.

Corded and Cordless Operation:

- **Cordless:** For maximum flexibility, use the trimmer on battery power after a full charge.
- **Corded:** If the battery runs low during use, or if you prefer continuous power, plug the recharging transformer directly into the trimmer.

Trimming Techniques:

The Beret Trimmer is ideal for outlining, detailing, and facial hair design. Use a feather-light touch for best results, especially when working on sensitive areas or creating sharp lines.

High Precision Accuracy

Creates a clean line and cut!



Image: A close-up view of the Wahl Beret Trimmer being used to create a precise hairline.

- **Outlining:** Hold the trimmer with the blade flat against the skin and gently move it along the desired outline (e.g., neckline, sideburns).
- **Detailing:** For intricate work, use the edge of the blade to create sharp lines and designs.
- **Facial Hair:** Use with or without a guide comb to trim beards, mustaches, and goatees to your preferred length and style.

Video: Official demonstration of the Wahl Professional Beret Trimmer, showcasing its use for various trimming and outlining tasks, including facial hair and necklines.

MAINTENANCE

Regular cleaning and oiling will ensure the longevity and optimal performance of your trimmer.

Cleaning the Blades:

1. Turn off the trimmer.

2. The snap-on blades can be easily removed for cleaning. Gently push the blade assembly forward to detach it from the trimmer body.
3. Use the provided cleaning brush to remove any loose hair from the blades and the trimmer head.
4. Reattach the blade assembly by aligning it and snapping it back into place.

Oiling the Blades:

After each use, or at least once a week, apply a few drops of the included blade oil to the teeth of the blades. Turn the trimmer on for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and prevents rust.

TROUBLESHOOTING

If you encounter any issues with your Wahl Professional Beret Trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the battery is charged. If using corded, check the power connection.
- **Blades pulling hair:** Clean and oil the blades. Ensure the blades are properly aligned and not damaged.
- **Reduced cutting performance:** Clean the blades thoroughly and apply oil. If performance does not improve, blades may need replacement.

For further assistance, please contact Wahl Professional customer support.

SPECIFICATIONS

Feature	Detail
Model Name	8841
Item Model Number	WA-8841
Power Source	Battery Powered (Lithium Ion)
Battery Life	120+ minutes on full charge
Operation	Corded and Cordless
Blade Material	Stainless Steel
Included Guide Combs	4 (1/8", 1/4", 3/8", 1/2")
Item Weight	16 ounces
Product Dimensions	1 x 1 x 1 inches
UPC	043917103402

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Wahl Professional website or contact their customer service department. Keep your purchase receipt for warranty claims.

Wahl Professional Contact Information:

Website: wahlpro.com

(Please check the official website for the most current contact details and support options.)

© 2026 Wahl Professional. All rights reserved.