

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY RC-1115 Replacement Remote Control User Manual for DENON AV Surround Receivers

## VINABTY RC-1115

# VINABTY RC-1115 Replacement Remote Control User Manual for DENON AV Surround Receivers

Model: RC-1115

## 1. INTRODUCTION

This manual provides instructions for the VINABTY RC-1115 replacement remote control, designed for use with various DENON AV Surround Receivers. This remote functions as a direct replacement and does not require programming for compatible models.





**Figure 1:** Front view of the VINABTY RC-1115 Replacement Remote Control, showing all buttons and layout.


## 2. SETUP: BATTERY INSTALLATION

The RC-1115 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No additional programming is required for this replacement remote control. It is ready for use with

compatible DENON receivers once batteries are installed.

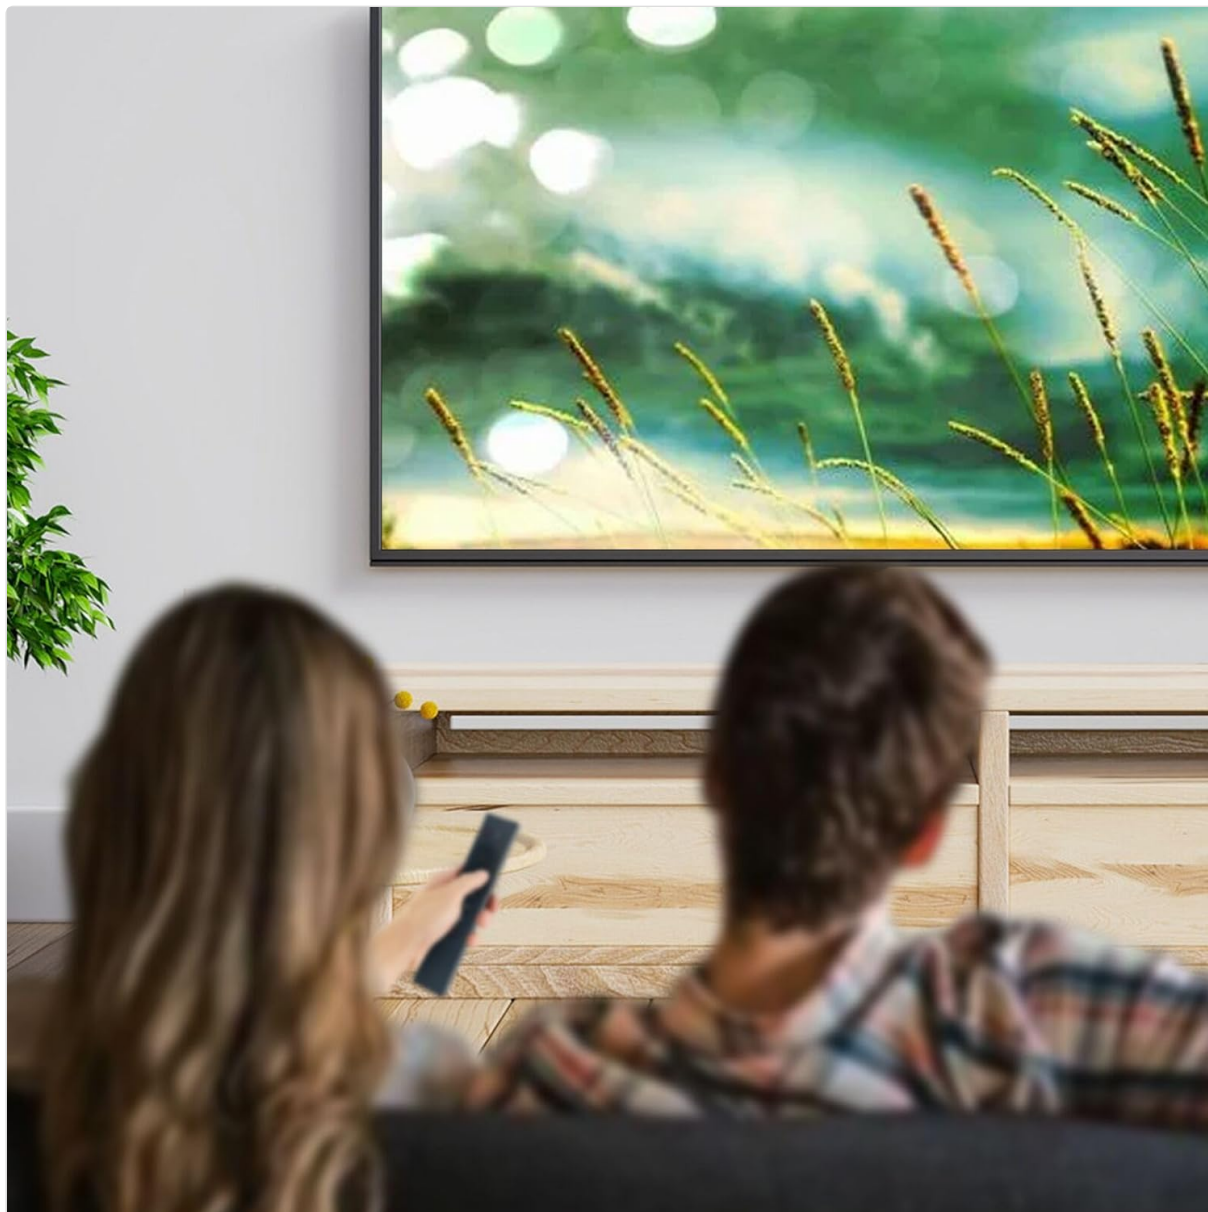

**Figure 2:** Rear view of the remote control with the battery compartment open, showing where to insert two AAA batteries.

Your browser does not support the video tag.

**Video 1:** Demonstration of battery installation for a similar remote control (RC-1228). This video illustrates the process of opening the battery compartment and inserting batteries.

### 3. OPERATING INSTRUCTIONS

The RC-1115 remote control provides full functionality for your compatible DENON AV Surround Receiver. Below are common functions and their corresponding buttons:

- **Power ON/OFF:** Use the **ON** and **OFF** buttons at the top right and left corners, respectively, to power the receiver on or off.
- **Input Selection:** Select your desired audio/video source using buttons like **DVD**, **VCR(iPod)**, **V.AUX**, **EXT.IN**, **CD**, **CD-R/TAPE**, **AUX**, **TUNER**, and **D.INPUTS**.
- **Volume Control:** Adjust the volume using the **VOLUME UP** (▲) and **VOLUME DOWN** (▼) buttons located on the right side.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.

- **Navigation and Enter:** Use the directional arrow buttons (▲, ▼, ◀, ▶) around the central **MEMO/ENTER** button to confirm selections.
- **Menu and Setup:** Access receiver settings with the **SETUP** button.
- **Sound Modes:** Utilize buttons like **SURROUND**, **NIGHT**, and **STEREO** to select different audio processing modes.
- **Channel/Track Control:** Use the **CHANNEL +/-** buttons for tuning or track selection. Playback controls for iPod/media include **PLAY/PAUSE**, **STOP**, **SKIP**, **REPEAT**, and **RANDOM**.
- **Other Functions:** Additional buttons include **PRESETS**, **BAND**, **TEST**, **STATUS**, **DIMMER**, **SURROUND PARAMETER**, **CH SEL**, **TONE**, and **SEARCH**. Refer to your DENON receiver's manual for specific functions of these buttons.

## 4. COMPATIBILITY

The VINABTY RC-1115 replacement remote control is compatible with the following DENON AV Surround Receiver models:

- AVR-390
- AVR-2807
- AVR-2808
- AVR-2809
- AVR-3803
- AVR-1610
- AVR-1705
- AVR-1804
- AVR-2105
- AVR-590
- DHT590BA
- AVR-1610b
- AVR-591
- AVR-391

This remote also serves as a backup or replacement for the DENON RC-977 remote control and the sub remote control RC-1120.

## 5. SPECIFICATIONS

<b>Model Number</b>	RC-1115
<b>Brand</b>	VINABTY
<b>Product Dimensions</b>	5 x 1.9 x 0.5 inches (12.7 x 4.8 x 1.3 cm)
<b>Item Weight</b>	3 ounces (85 grams)
<b>Batteries Required</b>	2 AAA batteries (not included)
<b>Color</b>	BLACK
<b>Special Feature</b>	Ergonomic design

<b>Max Number of Supported Devices</b>	18 (referring to the range of compatible DENON models)
<b>Compatible Devices</b>	Home Theater AV Receivers (DENON)

## 6. TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure fresh AAA batteries are correctly installed with proper polarity (+/-).
  - Check for any obstructions between the remote control and the receiver's infrared sensor.
  - Ensure you are within the effective range and pointing the remote directly at the receiver.
- **Specific buttons not working:**
  - Verify that your DENON receiver model is listed in the compatibility section.
  - Some advanced functions may require specific receiver settings; consult your DENON receiver's original manual.

## 7. MANUFACTURER INFORMATION

---

**Manufacturer:** VINABTY factory

For further assistance or inquiries, please refer to the seller's contact information on your purchase platform.