

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [X Rocker](#) /

> [X Rocker 5127101 XPro 200 Audio Gaming Chair Instruction Manual](#)

X Rocker 5127101

X Rocker 5127101 XPro 200 Audio Gaming Chair Instruction Manual

Model: 5127101 | UPC: 094338512717

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your X Rocker 5127101 XPro 200 Audio Gaming Chair. Please read this manual thoroughly before use and retain it for future reference to ensure optimal performance and longevity of your product.

SAFETY INFORMATION

Adhere to the following safety guidelines to prevent injury or damage to the chair:

- Ensure all components are securely fastened before and during use. Periodically check connections for tightness.
- Do not stand on the chair or use it as a step stool.
- Keep liquids and moisture away from electronic components and power connections to prevent electrical hazards.
- Use only the power adapter supplied with this product. Using an incorrect adapter may cause damage or fire.
- Adult assembly is required. Keep small parts away from children during assembly.
- Do not attempt to modify or repair the chair's electronic components yourself. Refer to qualified service personnel.

PACKAGE CONTENTS

Please check the contents of your package against the list below. If any items are missing or damaged, contact customer support immediately.

- X Rocker 5127101 XPro 200 Audio Gaming Chair (Main Unit)
- Armrests (2 pieces)
- Power Adapter
- Audio Cables (e.g., 3.5mm to 3.5mm, RCA to 3.5mm)

- Assembly Hardware (screws, Allen key)

SETUP AND ASSEMBLY

Follow these steps to assemble your X Rocker gaming chair. It is recommended to have a clear, flat workspace.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Attach Armrests:** Align each armrest with the designated mounting points on the sides of the chair. Secure them using the provided screws and the Allen key. Ensure both armrests are firmly attached and do not wobble.
3. **Position Chair:** Once assembled, place the chair in your desired gaming or entertainment area. Ensure there is adequate space around the chair for comfortable use.
4. **Connect Power:** Insert the small end of the power adapter into the chair's power input port, typically located near the control panel. Plug the other end of the power adapter into a standard wall outlet.



Image: The X Rocker 5127101 XPro 200 Audio Gaming Chair, presented in a grey and black mesh fabric design. The image highlights the chair's overall dimensions: approximately 27 inches deep, 22 inches wide, and 17 inches high. Integrated armrests and a side-mounted control panel are visible, indicating its audio capabilities.

OPERATING INSTRUCTIONS

The XPro 200 chair features a 2.1 audio system with an integrated subwoofer for an immersive sound

experience. Follow these steps to connect your audio source and adjust sound settings.

Audio Connection

- **3.5mm Audio Jack:** For devices with a standard headphone jack (e.g., smartphones, tablets, some gaming controllers), connect one end of the 3.5mm audio cable to your device's audio output and the other end to the chair's 3.5mm audio input port.
- **RCA Audio Cables:** For devices with RCA audio outputs (e.g., TVs, older gaming consoles), connect the red and white RCA plugs to the corresponding ports on your device. Connect the other end of the RCA cable (or an RCA to 3.5mm adapter cable) to the chair's audio input.
- **Wireless Connection (if applicable):** If your specific model includes a wireless transmitter (sold separately or as part of a bundle), refer to the separate instructions provided with the transmitter for pairing and connection procedures.

Sound Adjustment

Use the control panel, typically located on the side of the chair, to manage your audio experience.

- **Volume Control:** Rotate the volume knob clockwise to increase the overall sound level and counter-clockwise to decrease it.
- **Bass Control:** Adjust the bass knob to fine-tune the subwoofer's output. Turn it clockwise for more pronounced bass and counter-clockwise for less.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your gaming chair.

- **Cleaning Surfaces:** Wipe the chair's surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the material. For fabric areas, spot clean with a mild detergent solution and a clean cloth, then blot dry.
- **Storage:** When not in use for extended periods, store the chair in a cool, dry place away from direct sunlight and extreme temperatures.
- **Component Inspection:** Periodically inspect all screws, bolts, and connections to ensure they remain tight. Re-tighten if necessary to maintain stability and safety.

TROUBLESHOOTING

If you encounter issues with your X Rocker gaming chair, refer to the following common problems and solutions:

No Sound or Low Volume:

- Ensure the power adapter is securely connected to both the chair and a working wall outlet, and that the chair is powered on.
- Verify all audio cables are correctly and fully plugged into both the chair's input and your audio source's output.
- Check that the volume knob on the chair and the volume setting on your audio source are turned up.
- Test with a different audio source or a different audio cable to rule out faulty equipment.

Distorted Sound:

Reduce the volume on both the chair and your audio source. Overdriving the speakers can cause

- Reduce the volume on both the chair and your audio source. Overdriving the speakers can cause distortion.
- Check for loose or damaged audio connections.
- Ensure the audio source is not outputting a signal that is too strong for the chair's input.

Chair is Unstable or Wobbles:

- Check all assembly screws, especially those for the armrests, and tighten them securely using the provided Allen key.
- Ensure the chair is placed on a flat, even surface.

SPECIFICATIONS

Feature	Detail
Model Number	5127101
UPC	094338512717
Brand	X Rocker
Audio System	2.1 Audio with Subwoofer
Color	Grey
Material	Metal, Plastic, Foam/Polyester batting
Product Dimensions (D x W x H)	27"D x 22"W x 17"H
Item Weight	29 Pounds
Recommended Use	Gaming

WARRANTY AND SUPPORT

For detailed warranty information, terms, and conditions, please refer to the warranty card included with your product packaging. Keep your proof of purchase (receipt or invoice) as it will be required for any warranty claims.

For customer support, technical assistance, or to inquire about replacement parts, please visit the official X Rocker website or contact their customer service department. You can also find additional resources and contact information through the X Rocker Store on Amazon:

Online Support: [Visit the X Rocker Store on Amazon](#)