

BUSH B0788D12KB**BUSH 15-inch HD LED Monitor Television User Manual**

Model: B0788D12KB

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your BUSH 15-inch HD LED Monitor Television. Please read this manual thoroughly before using the product to ensure proper and safe operation. Keep this manual for future reference.

The BUSH 15-inch LED TV offers versatile connectivity with HDMI, USB, VGA, AV, and RF ports, supporting a range of peripheral devices for easy content sharing. It features a 1280 x 720p resolution, dynamic color control, and surround audio output.

PACKAGE CONTENTS

- BUSH 15-inch HD LED Monitor Television Unit
- TV Stand
- Power Cable
- Remote Control
- User Manual (this document)

SETUP**1. Attaching the Stand**

Carefully place the television screen-down on a soft, clean surface to prevent scratches. Align the TV stand with the mounting holes on the bottom of the television unit. Secure the stand using the provided screws. Ensure the stand is firmly attached before placing the TV upright.



Figure 1: Front view of the BUSH 15-inch HD LED Monitor Television with its stand attached, showing the screen and integrated speakers.



Figure 2: Side view of the BUSH 15-inch HD LED Monitor Television, illustrating its slim profile and the attached stand.

2. Wall Mounting (Optional)

If you prefer to wall mount the television, ensure you use a compatible VESA wall mount kit (not included). Refer to the wall mount kit's instructions for proper installation. The television's mounting points are located on the rear panel.



Figure 3: Rear view of the BUSH 15-inch HD LED Monitor Television, highlighting the VESA mounting points and the central area for connections.

3. Connecting Devices

The BUSH 15-inch LED TV provides multiple connectivity options:

- **HDMI:** Connect set-top boxes, gaming consoles, or Blu-ray players.
- **USB:** Connect USB drives for media playback.
- **VGA:** Connect a computer or laptop.
- **AV (Composite):** Connect older devices like DVD players or VCRs.
- **RF:** Connect an antenna for terrestrial broadcast reception.
- **PC Audio In & Earphone Out:** For audio connections.

Locate the appropriate ports on the rear or side of the television and connect your devices securely.



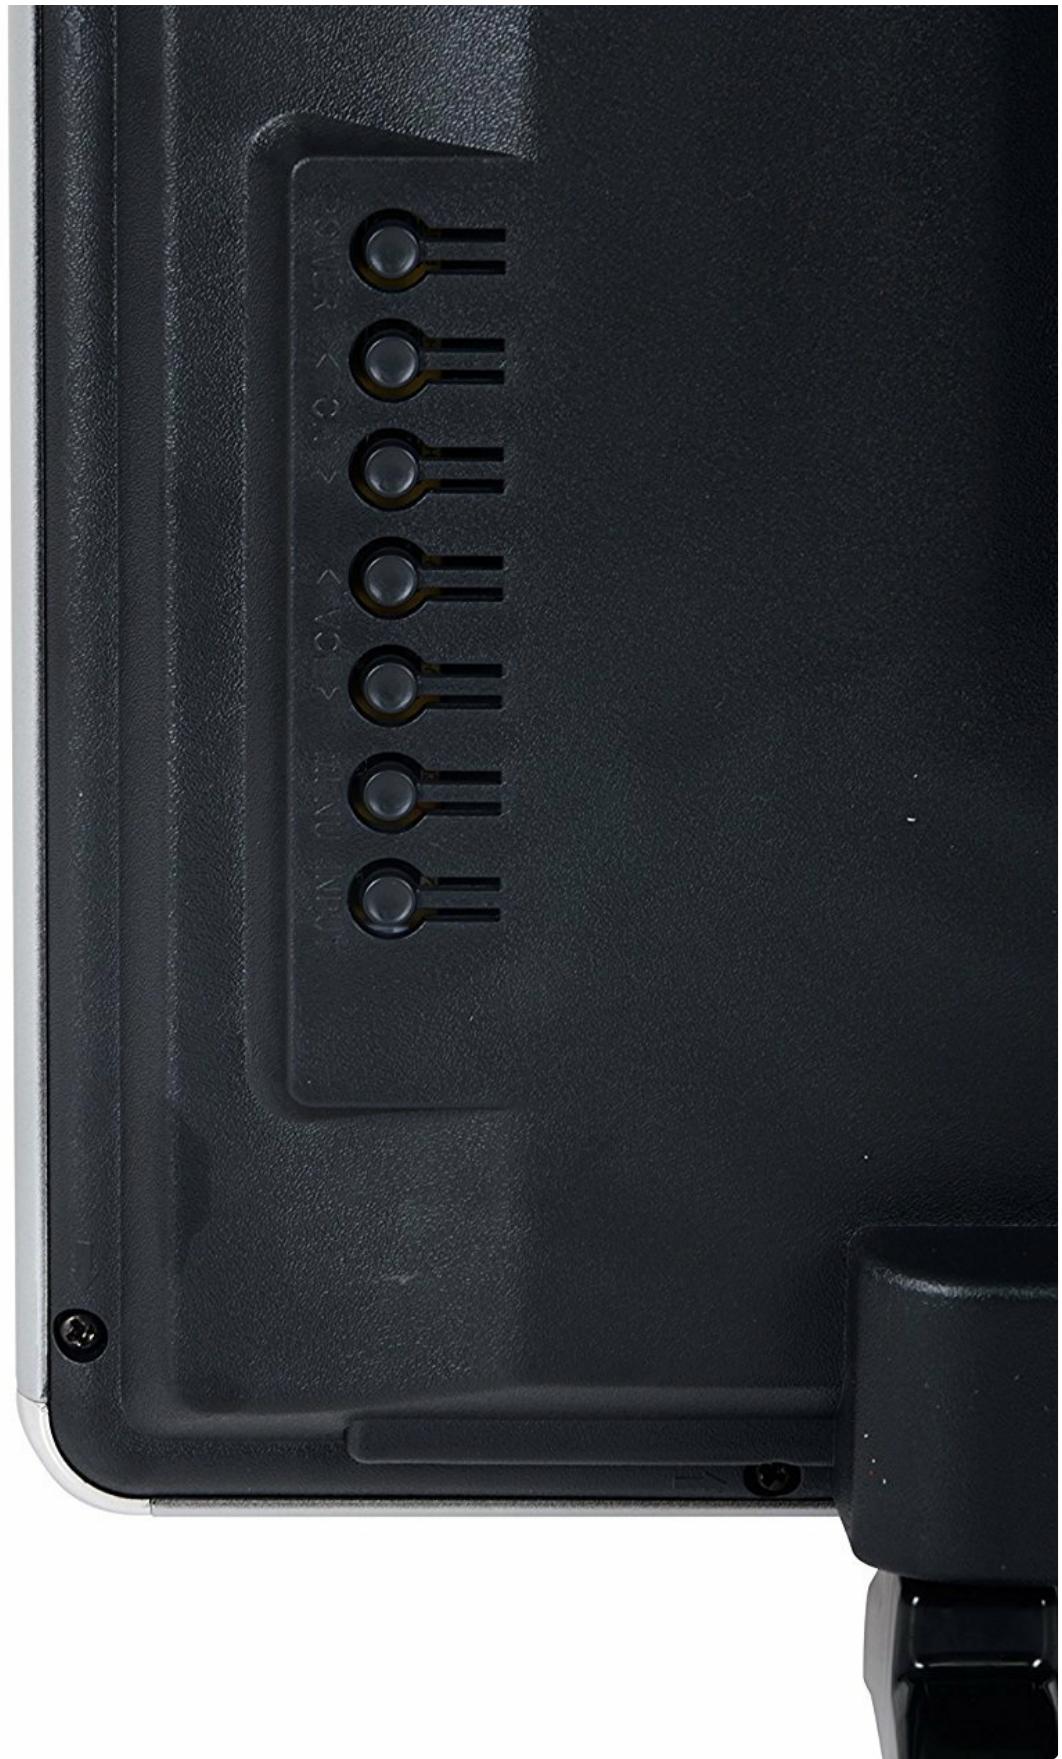


Figure 4: Close-up view of the side control buttons on the BUSH 15-inch HD LED Monitor Television, typically including power, volume, and channel controls.



Figure 5: Detailed view of the rear input ports on the BUSH 15-inch HD LED Monitor Television, showing HDMI, USB, VGA, AV, and RF connections.

4. Power Connection

Connect the power cable to the AC input on the television and then plug the other end into a standard electrical outlet. The television will enter standby mode.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **Power** button on the remote control or the side panel of the TV to turn the unit on or off (standby mode).

2. Initial Setup Wizard

Upon first power-on, the TV may guide you through an initial setup wizard. Follow the on-screen prompts to select language, country, and perform channel scanning (if connecting an antenna).

3. Input Source Selection

Press the **Source** or **Input** button on the remote control to cycle through available input sources (HDMI1, USB, VGA, AV, TV). Select the input corresponding to your connected device.

4. Volume Control

Use the **Volume Up (+)** and **Volume Down (-)** buttons on the remote control or side panel to adjust the audio level. Press the **Mute** button to temporarily silence the audio.

5. Channel Navigation (TV Mode)

In TV mode, use the **Channel Up (CH+)** and **Channel Down (CH-)** buttons to change channels. You can also enter

channel numbers directly using the numeric keypad on the remote.

6. Menu Navigation

Press the **Menu** button to access the TV's settings. Use the arrow keys **Up/Down/Left/Right** to navigate through options and the **OK/Enter** button to confirm selections. Common menu options include:

- **Picture Settings:** Adjust brightness, contrast, color, sharpness, and picture mode.
- **Sound Settings:** Adjust bass, treble, balance, and sound mode.
- **Channel Settings:** Auto scan, manual scan, channel list.
- **Time Settings:** Set time, sleep timer, auto power off.
- **System Settings:** Language, factory reset, software update.

MAINTENANCE

1. Cleaning the Screen

Before cleaning, unplug the television from the power outlet. Use a soft, lint-free cloth (microfiber is recommended) to gently wipe the screen. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. **Do not use harsh chemicals, abrasive cleaners, or spray liquid directly onto the screen.**

2. Cleaning the Cabinet

Wipe the television cabinet with a soft, dry cloth. If necessary, a slightly damp cloth can be used, followed by a dry cloth. Ensure no moisture enters the ventilation openings.

3. Ventilation

Ensure adequate ventilation around the television. Do not block the ventilation slots on the rear or sides of the unit. Avoid placing the TV in enclosed spaces without proper airflow, as this can lead to overheating.

4. Power Cord Care

Regularly check the power cord for any signs of damage. Do not place heavy objects on the cord or expose it to sharp edges. Always grasp the plug, not the cord, when disconnecting from the power outlet.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet not working; TV in standby mode.	Ensure power cord is securely plugged in. Test the outlet with another device. Press the Power button on the remote or TV.
No Picture, but Sound is Present	Incorrect input source selected; Loose video cable connection.	Press the Source/Input button to select the correct input. Check and secure video cable connections (HDMI, VGA, AV).
No Sound, but Picture is Present	Volume is muted or too low; Incorrect audio settings; Loose audio cable connection.	Press the Mute button or increase volume. Check audio settings in the menu. Ensure audio cables are securely connected.

Problem	Possible Cause	Solution
Remote Control Not Working	Batteries are dead or incorrectly inserted; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure the TV's remote sensor is clear.
Poor Picture Quality (Fuzzy/Distorted)	Weak antenna signal; Incorrect picture settings; Damaged cable.	Adjust antenna position or check signal strength. Reset picture settings to default. Try a different cable.

SPECIFICATIONS

Feature	Detail
Brand	BUSH
Model	B0788D12KB
Display Technology	LED
Screen Size	15 Inches (39 cm visible diagonal)
Resolution	1280 x 720p (HD Ready)
Screen Ratio	5:4
Refresh Rate	60 Hz
Contrast Ratio	1000:1
Viewing Angle	170°H / 60°V
Colors Supported	16.7 million colors
Audio Output	2x5W Max Audio Output (Surround Effect)
Connectivity	1 x HDMI, 1 x USB, 1 x VGA, 1 x AV, 1 x RF, PC Audio In, Earphone Out
Product Dimensions (LxWxH)	46.9 x 12.5 x 38.4 cm
Item Weight	2.14 kg
Mounting Type	Wall Mount (VESA compatible) / Stand
Special Features	Flat screen, Smart energy saving

WARRANTY AND SUPPORT

This BUSH television comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or service inquiries, please contact BUSH customer service. Keep your purchase receipt as proof of purchase.

Please note: The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or acts of nature. For detailed warranty terms and conditions, refer to the warranty card included with your product or visit the official BUSH website.

© 2023 BUSH. All rights reserved.

Information in this manual is subject to change without notice.