

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [continuus](#) /

› [Continu.us R130K1 Guest TV Remote Control User Manual for RCA and CT Series TVs](#)

## continuus R130K1

# Continu.us R130K1 Guest TV Remote Control User Manual

For RCA and Continu.us CT Series Televisions

## INTRODUCTION

---

This manual provides instructions for the proper use and maintenance of your Continu.us R130K1 Guest TV Remote Control. This remote is designed as a standard replacement for RCA and Continu.us CT Series televisions, including models CT-XX10, CT-XX20, CT-XX30, CT-XX40, and CT-XX50 (excluding DVD combo units). It offers essential functions for controlling your television.



Image: Front view of the Continu.us R130K1 Guest TV Remote Control, showing its ergonomic design and button layout.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

The remote control does not require programming for compatible RCA and Continu.us CT Series TVs. It is ready for use once batteries are installed.

## OPERATING INSTRUCTIONS

The R130K1 remote control provides direct access to common television functions.

Button	Function
<b>ON/OFF</b>	Powers the television on or off.
<b>VOL+ / VOL-</b>	Increases or decreases the volume level.
<b>CH+ / CH-</b>	Changes the television channel up or down.
<b>MUTE</b>	Mutes or unmutes the television audio.
<b>INPUT</b>	Cycles through available input sources (e.g., HDMI, AV).
<b>MENU</b>	Opens the television's on-screen menu.
<b>ANTENNA</b>	Switches to antenna/air input.
<b>INFO</b>	Displays program information.
<b>CC</b>	Activates or deactivates Closed Captions.
<b>SLEEP</b>	Sets a timer for the television to automatically turn off.
<b>Numbers (0-9)</b>	Direct channel selection.
<b>CLEAR</b>	Clears numerical input or exits certain menus.

## MAINTENANCE

### Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote.
- Avoid using harsh chemicals or abrasive cleaning materials.

### Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none"> <li>• <b>Batteries:</b> Check if batteries are inserted correctly. Replace with fresh AA batteries.</li> <li>• <b>Line of Sight:</b> Ensure there is a clear path between the remote and the TV's infrared sensor. Obstructions can block the signal.</li> <li>• <b>Distance:</b> Operate the remote within a reasonable distance from the TV.</li> </ul>

Problem	Possible Cause / Solution
Specific buttons not working.	<ul style="list-style-type: none"> <li>• <b>Dirt/Debris:</b> Clean the remote, especially around the unresponsive buttons, to ensure no debris is interfering.</li> <li>• <b>Compatibility:</b> Verify your TV model is listed as compatible (RCA or Continu.us CT Series, non-DVD combo).</li> </ul>
TV not turning on/off.	<ul style="list-style-type: none"> <li>• <b>TV Power:</b> Ensure the TV is plugged into a working power outlet and is not in a standby mode that prevents remote power-on.</li> <li>• <b>Remote Functionality:</b> Test other remote functions (e.g., volume) to confirm the remote is generally working.</li> </ul>

## SPECIFICATIONS

- **Model Name:** R130K1
- **Brand:** Continu.us
- **Compatibility:** RCA and Continu.us CT Series TVs (CT-XX10, CT-XX20, CT-XX30, CT-XX40, CT-XX50, excluding DVD combo)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Button Quantity:** 33
- **Special Feature:** Ergonomic design
- **Battery Type:** 2 x AA batteries (not included)
- **Item Weight:** Approximately 0.01 Ounces (without batteries)
- **Color:** Grey, White

## SUPPORT

For any questions, issues, or technical assistance regarding your Continu.us R130K1 remote control, please contact our support team. We are dedicated to providing the best possible support and will give immediate attention to your inquiries.

You can reach us via phone or email. Please refer to the contact information provided with your product packaging or visit the official Continu.us website for current support details.