

[Manuals.plus](#) /

› [Tekswamp](#) /

› Tekswamp Replacement Remote Control for Kenwood RC-R0712 User Manual

Tekswamp TeK-313529

Tekswamp Replacement Remote Control User Manual

Model: TeK-313529 (Compatible with Kenwood RC-R0712)

1. PRODUCT OVERVIEW

The Tekswamp Replacement Remote Control, model TeK-313529, is designed to provide essential control functions for your Kenwood RC-R0712 device. This remote offers a user-friendly experience with comfortable buttons and a durable design, ensuring reliable performance for everyday use.



Image 1.1: Front view of the Tekswamp Replacement Remote Control. This image shows the overall layout of the buttons,

Key Features:

- **Compatibility:** Specifically designed for use with Kenwood RC-R0712 devices.
- **No Programming Required:** Ready to use out of the box; no complex setup needed.
- **Essential Functions:** Provides core controls such as power on/off, menu navigation, and input signal selection.
- **Durable Construction:** Manufactured from strong, durable plastic for longevity.
- **Low Power Consumption:** Efficient electrical circuit allows operation even with low battery levels.
- **ON Indicator:** A light illuminates when any button is pressed, confirming signal transmission.
- **Security Screw:** Childproofing feature to prevent unauthorized access to the battery compartment.

While this remote provides most original commands, some specific functions like page flip, keystone correction, video adjustment, and certain number functions may not work identically with all devices. This remote does not include a laser pointer function.

2. SETUP AND BATTERY INSTALLATION

The Tekswamp Replacement Remote Control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries correctly.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Using a small Phillips head screwdriver, carefully loosen the security screw on the battery compartment cover.
3. Remove the battery compartment cover by sliding it downwards or lifting it off.



Image 2.1: Back view of the remote control, highlighting the battery compartment and security screw.

4. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.



Image 2.2: The battery compartment with two AAA batteries inserted, showing correct polarity alignment.

5. Replace the battery compartment cover and tighten the security screw to secure it.

The remote control is now ready for use. No additional programming is required for compatibility with your Kenwood RC-R0712 device.

3. OPERATING INSTRUCTIONS

This section outlines the general functions of the buttons on your Tekswamp Replacement Remote Control.



Image 3.1: Top-down view of the remote control, illustrating the layout of all buttons for easy identification.

3.1 Basic Functions

- **Power Button ():** Turns your Kenwood RC-R0712 device on or off.
- **Menu Button:** Accesses the device's main menu.
- **Directional Pad (Up, Down, Left, Right) & OK Button:** Navigates through menus and confirms selections.
- **Input/Source Button (SRC):** Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV).
- **Volume Up/Down (V+/V-):** Adjusts the audio volume.
- **Channel Up/Down (CH+/CH-):** Changes channels (if applicable to your device).
- **Number Buttons (0-9):** For direct channel entry or other numerical inputs.
- **Exit Button:** Exits the current menu or function.

3.2 Advanced Functions

The remote includes additional buttons for various functions. Please note that the functionality of these buttons may vary or be unavailable depending on your specific Kenwood RC-R0712 device model and its capabilities.

- **MODE:** May switch between different operational modes.
- **AUDIO:** Controls audio settings or tracks.

- **SUBT (Subtitle):** Toggles subtitles on/off.
- **DISP (Display):** Shows on-screen display information.
- **ZOOM:** Adjusts screen zoom levels.
- **RANDOM:** For random playback functions.
- **STEP/SLOW:** Controls playback speed.
- **SHIFT/GOTO:** May provide access to secondary functions or specific time points.

Point the remote control directly at the infrared receiver on your Kenwood RC-R0712 device. Ensure there are no obstructions between the remote and the device.

4. MAINTENANCE AND CARE

Proper care and maintenance will extend the life of your remote control.

4.1 Battery Replacement

Replace batteries when the remote's ON indicator light becomes dim or the remote becomes unresponsive. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions.

- **Remote is unresponsive:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the device's receiver. Remove any obstructions.
 - Confirm that the remote's ON indicator light illuminates when a button is pressed. If not, batteries may be dead or incorrectly installed.
- **Certain functions do not work:**
 - As noted in the Product Overview, some specific functions (e.g., page flip, keystone correction, video adjustment, certain number functions) may not be fully supported by all Kenwood RC-R0712 device models. This is normal and not an indication of a faulty remote.
 - Refer to your Kenwood RC-R0712 device's original manual to confirm if the desired function is supported by the device itself.

- **Short operating range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

6. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Tekswamp
Model Number	TeK-313529
Compatible Device Model	Kenwood RC-R0712
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Maximum Range	8 Meters (approx. 26 feet)
Button Quantity	31
Color	Black
Item Weight	2 Ounces (approx. 57 grams)

7. WARRANTY AND SUPPORT

For warranty information, returns, or technical support regarding your Tekswamp Replacement Remote Control, please contact the seller directly through your purchase platform. Keep your purchase receipt or order number handy for faster service.

You can visit the Tekswamp Store for more information on their products:[Tekswamp Store](#)