

UBay UBay XRT300

UBay XRT300 QWERTY Keyboard Remote Control for Vizio Smart TVs - User Manual

Model: UBay XRT300

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your UBay XRT300 QWERTY Keyboard Remote Control. This remote is designed as a universal replacement for a wide range of Vizio Smart TVs, offering immediate functionality without complex programming.

Key Features:

- Universal compatibility with many Vizio Smart TV models.
- No programming required; ready to use after battery insertion.
- Integrated QWERTY keyboard for easy text input.

Compatibility:

The UBay XRT300 remote control is compatible with numerous Vizio Smart TV models, including but not limited to:

- **M-Series:** M322I-B2, M422I-B2, M492I-B2, M502I-B2, M552I-B2, M602I-B2, M652I-B2, M321i-A0, M371i-A0, M421i-A0, M471i-A0, M501i-A0, M551i-A0, M601i-A0, M651i-A0, M701i-A0, M421D-A2, M471D-A2, M501D-A2, M551D-A2, M601D-A2, M651D-A2, M801D-A2, M320SL, M370SL, M420SL, M470SL, M550SL, M3D470KD, M3D470KDE, M3D550KD, M3D550KDE, M420SV, M470SV, M550SV, M320SR, M420SR, M470NV, M550NV, M470VSE, M650VSE, M550VSE, M3D460SR.
- **E-Series:** E320i-A0, E370i-A0, E420i-A0, E470i-A0, E500i-A0, E550i-A0, E600i-A0, E650i-A0, E700i-A0, E322VL, E422VL, E472VL, E472VLE, E552VL, E552VLE, E280I-B1, E291I-A1, E280I-A1, E291I-A1, E320FI-B0, E320FI-B2, E320I-A0, E320I-A2, E320I-B0, E320I-B1, E320I-B2, E390I-A1, E390I-B0, E390I-B1, E400I-B2, E401I-A2, E420I-A1, E420I-A0, E420I-B0, E420D-A0, E480I-B2, E500D-A0, E500I-A1, E500I-B1, E500I-B1E, E502AR, E550I-A0, E550I-A0E, E550I-B2, E550I-B2E, E551I-A2, E600I-B3, E601I-A3E, E650I-B2, E700I-B3, E231I-B1, E241I-A1, E241I-A1W, E241I-B1.

- **Other Series:** E3D320VX, E3D420VX, E3D470VX, SV422XVT, SV472XVT, VF552XVT, VT3D650SV, D500I-B1, D650I-B2.

SETUP

1. Battery Installation

The UBay XRT300 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Ensure batteries are inserted correctly to prevent damage to the remote control.

2. Initial Use

This remote control is designed for immediate use with compatible Vizio Smart TVs. No programming or pairing steps are typically required. After installing the batteries, point the remote at your Vizio TV and begin using it.



An image showing the UBay XRT300 QWERTY Keyboard Remote Control, highlighting its main buttons and the QWERTY keyboard on the reverse side.

OPERATING INSTRUCTIONS

The UBay XRT300 remote features standard TV control buttons on the front and a full QWERTY keyboard on the reverse side for convenient text input.

Front Side Controls:

- **Power Button:** Turns the TV on or off.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Up/Down/Left/Right/OK):** Used to navigate menus and select items.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Menu/Guide/Info:** Accesses TV menus, program guides, or displays information.
- **Number Pad (0-9):** Direct channel entry.
- **Dedicated App Buttons:** Quick access to streaming services like Amazon and Netflix (if present on your specific remote version).

Rear Side QWERTY Keyboard:

Flip the remote over to access the full QWERTY keyboard. This is useful for entering text in smart TV applications, search bars, or web browsers.

- Simply type as you would on a standard keyboard.
- Use the directional keys (if present on the keyboard side) or the main navigation pad to move the cursor.
- The keyboard typically activates automatically when the remote is flipped.

MAINTENANCE

Cleaning the Remote

To maintain the remote's performance and appearance:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals or abrasive cleaning materials.
- Avoid getting moisture into the battery compartment or any openings.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Refer to the "Battery Installation" section under Setup for instructions.

- Always replace both batteries at the same time.
- Use new AAA batteries of the same type.
- Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

If you encounter issues with your UBay XRT300 remote control, try the following troubleshooting steps:

- **Remote is not responding:**
 - Ensure the batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared (IR) receiver.
 - Make sure you are within the effective range of the TV's IR receiver.

- **Some buttons are not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with their function.
 - If only specific app buttons (e.g., Netflix, Amazon) are not working, ensure your TV's smart features are active and the apps are installed and updated.
- **QWERTY keyboard is not working:**
 - Ensure the remote is flipped to the keyboard side. Some TVs or applications may require the remote to be oriented correctly for the keyboard to function.
 - Verify that the application you are using supports text input via a remote keyboard.
- **TV is not responding to any remote commands:**
 - Unplug the TV from the power outlet for a few minutes, then plug it back in. This can reset the TV's IR receiver.
 - If possible, test the remote with another compatible Vizio TV to determine if the issue is with the remote or the TV.

If these steps do not resolve the issue, please refer to your Vizio TV's user manual for TV-specific troubleshooting or contact UBay customer support.

SPECIFICATIONS

Feature	Detail
Brand	UBay
Model Number	UBay XRT300
Compatible Devices	Television (Vizio Smart TVs)
Special Feature	Universal, QWERTY Keyboard
Color	Black
Max Number of Supported Devices	1
Item Weight	2.89 ounces
Package Dimensions	6.3 x 2.17 x 0.91 inches
Manufacturer	UBay Factory
Date First Available	December 15, 2017