

Tormatic 798003655289

Tormatic Novoferm Wireless Keypad Digicode 433 Instruction Manual

Model: 798003655289

1. PRODUCT OVERVIEW

The Tormatic Novoferm Wireless Keypad Digicode 433 is designed to provide secure and convenient access control for your garage door opener or other compatible devices. This wireless code modulator allows you to operate up to 10 different target drives using a personalized numeric code.

Key Features:

- Compatible with Tor Matic and Novoferm 433 MHz door openers (Keeloq).
- Wireless radio frequency transmission.
- Supports up to 10 channels for controlling multiple devices.
- Numeric code entry (2 to 6 digits).
- Illuminated buttons for visibility in low light conditions.
- Panic function: Locks out after 5 incorrect code entries for 20 seconds.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Tormatic Novoferm Wireless Keypad
- Batteries (2x CR 2032) - *Note: While the product description mentions batteries, specifications indicate they are not included. Please refer to your product packaging.*
- Mounting material (screws, wall plugs)
- Mounting instructions

3. SETUP AND INSTALLATION

3.1. Mounting the Keypad

The keypad is designed for outdoor use. Choose a suitable location near your garage door or access point, ensuring it is within range of your receiver.

1. Carefully separate the front panel of the keypad from its back casing.
2. Position the back casing on the desired mounting surface and mark the drilling points for the screws.
3. Drill holes at the marked points and insert the wall plugs (if necessary for your mounting surface).
4. Secure the back casing to the surface using the provided screws.
5. Reattach the front panel to the secured back casing.

3.2. Battery Installation

The keypad operates on 2x CR 2032 lithium batteries. Ensure correct polarity when inserting the batteries.

3.3. Pairing with your Garage Door Opener

Refer to the specific instructions for your Tor Matic or Novoferm garage door opener to initiate the pairing process. Generally, this involves:

1. Activating the learning mode on your garage door opener receiver.
2. Entering a desired PIN code on the wireless keypad.
3. Pressing a confirmation button on the keypad to transmit the signal.
4. Confirming successful pairing on your garage door opener.

For detailed pairing instructions, consult the manual of your specific garage door opener model.

4. OPERATING INSTRUCTIONS

4.1. Entering Your Code

To operate your garage door or other connected device:

1. Press the illuminated buttons to enter your 2 to 6-digit PIN code.
2. After entering the correct code, the keypad will transmit a signal to your receiver, activating the connected device (e.g., opening/closing the garage door).



Image: User interacting with the Tormatic Novoferm Wireless Keypad.

4.2. Panic Function

For security, the keypad features a panic function. If 5 incorrect access codes are entered consecutively, the keypad will temporarily lock out. During this 20-second waiting period, pressing any button will not register, preventing further attempts until the lockout period expires.

4.3. Controlling Multiple Devices (10 Channels)

The keypad supports up to 10 channels, allowing you to program different codes for different devices or functions. Consult your garage door opener's manual for programming multiple channels or specific functions like controlling switches or gongs.

5. MAINTENANCE

5.1. Battery Replacement

When the keypad's performance degrades or the indicator light dims, it's time to replace the batteries. Use 2x CR 2032 lithium batteries. To replace, carefully remove the front panel, replace the old batteries with new ones, ensuring correct polarity, and reattach the front panel.

5.2. Cleaning

Clean the keypad surface with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the keypad's finish or electronics.

6. TROUBLESHOOTING

- **Keypad unresponsive:** Check if the batteries need replacement. Ensure the keypad is within range of the receiver.
- **Code not working:** Verify that you are entering the correct 2 to 6-digit PIN. If you have entered 5 incorrect codes, the panic function will activate, locking the keypad for 20 seconds. Wait for the lockout period to expire before trying again.
- **Interference:** If you experience intermittent issues, check for potential sources of radio frequency interference near the keypad or receiver.
- **Compatibility:** Ensure your garage door opener is a Tor Matic or Novoferm 433 MHz model (Keeloq). This keypad is not compatible with other brands or frequencies.

7. SPECIFICATIONS

Feature	Specification
Brand	Tormatic
Manufacturer	Tormatic-Novoferm
Model Number	798003655289
Model Name	Novoferm
Compatible Devices	Tor Matic, Novoferm (433 MHz, Keeloq)
Special Feature	Wireless
Battery Type	2 x CR 2032 Lithium (not always included)

Feature	Specification
Connectivity Technology	Radio Frequency
Product Dimensions (W x H x D)	74 x 82 x 18 mm (approx.)
Maximum Number of Supported Units	10
Number of Buttons	10
Controller Type	Button Control
Maximum Range	10 Meters

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact your retailer. For technical support or further assistance, please reach out to the manufacturer or your product supplier.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question