

[Manuals.plus](#) /

> [Delaman](#) /

> Delaman Adjustable Shower Rod Soap Dish Instruction Manual

Delaman MN-27039-HV

Delaman Adjustable Shower Rod Soap Dish Instruction Manual

Model: MN-27039-HV

1. INTRODUCTION

Thank you for choosing the Delaman Adjustable Shower Rod Soap Dish. This manual provides detailed instructions for the proper installation, operation, and maintenance of your new soap dish. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

Product Features:

- **Simple and Modern Design:** This practical soap dish features a simple and modern appearance, designed for shower rods with a 25mm diameter.
- **High Quality Material:** The soap dish holder is made of durable ABS material with a chrome-plated surface, ensuring wear resistance and long-lasting use.
- **Easy Installation:** Designed for easy installation on your shower rod, allowing you to adjust the installation position according to your specific needs.
- **Hollow Design for Drainage:** Equipped with drainage holes to ensure smooth water drainage, keeping your soap dry and clean.
- **Wide Application:** A practical bathroom accessory that adds convenience to your life. Suitable for bathrooms, toilets, and kitchens. Can be used for soap, shower gels, shampoos, towels, and more.



Figure 1: Front view of the Delaman Adjustable Shower Rod Soap Dish, showcasing its chrome finish and modern design.

2. SETUP AND INSTALLATION

Follow these steps to properly install your Delaman Soap Dish on a 25mm diameter shower rod.

1. **Prepare the Shower Rod:** Ensure your shower rod is clean and free from obstructions where you intend to install the soap dish.
2. **Remove Rubber Cover:** Carefully remove the rubber cover from the soap dish attachment point. This cover helps secure the dish to the rod.
3. **Insert onto Shower Rod:** Slide the soap dish, with the rubber cover removed, onto the shower rod at your desired height.
4. **Place Protective Cover:** Once the soap dish is in position, place the protective rubber cover back onto the attachment point, ensuring it is securely fitted around the shower rod and within the soap dish's holder. This will help stabilize the dish.
5. **Adjust Position:** You can adjust the vertical position of the soap dish on the shower rod by loosening the protective cover, sliding the dish, and then re-securing the cover.



Figure 2: Close-up view of the attachment mechanism, showing where the rubber cover is inserted to secure the dish to the shower rod.

3. OPERATION

The Delaman Soap Dish is designed for straightforward use.

- **Placement:** Place your bar soap, small bottles of shower gel, shampoo, or other small bathroom items directly onto the dish.
- **Drainage:** The hollow design at the bottom of the dish allows water to drain away, preventing soap from becoming soggy and promoting hygiene.
- **Accessibility:** Position the dish at a convenient height on your shower rod for easy access during showering.



Soap Dish

Easy to install on the shower rod and can adjust the installation position according to actual demand

Figure 3: The soap dish installed on a shower rod, demonstrating its practical use for holding soap.

Soap Holder

Hallow out design on the bottom can keep soap dry and clean
This is a practical soap dish, designed with a simple and modern appearance



Figure 4: A close-up of the soap dish with a bar of soap, highlighting the effective drainage design that keeps soap dry and clean.

4. MAINTENANCE AND CARE

To ensure the longevity and appearance of your Delaman Soap Dish, follow these simple maintenance guidelines:

- **Regular Cleaning:** Clean the soap dish regularly with a soft cloth and mild soap or a non-abrasive bathroom cleaner.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the chrome finish.
- **Rinse Thoroughly:** After cleaning, rinse the dish thoroughly with clean water to remove any soap residue.
- **Dry After Cleaning:** Wipe the dish dry with a soft cloth to prevent water spots and maintain its shine.
- **Check Stability:** Periodically check that the soap dish is securely attached to the shower rod. If it feels loose, re-tighten the protective rubber cover.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your soap dish.

Problem	Possible Cause	Solution
Soap dish slides down the rod.	Rubber cover not securely fitted or worn out.	Ensure the rubber cover is properly inserted and tightened. If worn, contact customer support for a replacement.
Water accumulates in the dish.	Drainage holes are blocked.	Clean the drainage holes to remove any soap residue or debris.
Chrome finish appears dull.	Soap scum buildup or improper cleaning.	Clean with a mild soap and soft cloth, then dry thoroughly. Avoid abrasive cleaners.

6. SPECIFICATIONS

Detailed technical specifications for the Delaman Adjustable Shower Rod Soap Dish.

Attribute	Detail
Brand	Delaman
Model Number	MN-27039-HV
Color	Silver (Chrome-plated)
Material	Acrylonitrile Butadiene Styrene (ABS) Terpolymer
Product Dimensions	Approx. 17 x 8.5 cm (Length x Width)
Hole Diameter	Approx. 25 mm
Weight	Approx. 62g (0.14 lbs)
Shape	Oval
Recommended Use	Soap dish for shower rods
UPC	663862410525



Figure 5: Diagram showing the key dimensions of the Delaman Soap Dish, including its length, width, and the 25mm diameter of the shower rod opening.

7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the purchase documentation or contact your retailer. Delaman is committed to providing high-quality products and customer satisfaction. For further assistance, you may visit the official Delaman website or contact their customer service department through the contact information provided with your purchase.



© 2024 Delaman. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.