

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GE](#) /

› **GE 34459 6-Device Universal Remote Instruction Manual**

GE 34459

GE 34459 6-Device Universal Remote Instruction Manual

Model: 34459 | Brand: GE

INTRODUCTION

The GE 34459 6-Device Universal Remote is designed to simplify your home entertainment experience by allowing you to control up to six different audio/video devices with a single remote. This includes your television, Blu-ray player, DVD player, DVR, cable/satellite receivers, and digital converter boxes.

Key features of this universal remote include:

- Controls up to 6 devices
- Master volume control for seamless audio adjustment across devices
- Navigation buttons for menu and guide screens
- Digital dot button for easy access to sub-channels (e.g., 4.2)
- Advanced DVR functions
- Programmable favorites
- Comprehensive code library for device compatibility

This manual provides detailed instructions for setting up, operating, and maintaining your universal remote.

SETUP

1. Battery Installation

The GE 34459 Universal Remote requires two (2) AA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote.
2. Press down on the tab and slide the cover off.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Replace batteries when the remote's performance diminishes or if the indicator light does not illuminate during button presses.

2. Device Programming

To control your devices, the universal remote must be programmed with the correct codes. There are typically two methods for programming:

Code Entry Method:

This method involves entering a specific code from a provided code list (usually included with the product or available online) that corresponds to your device's brand and type.

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the "SETUP" button on the remote until the indicator light illuminates.
3. Press the device button you want to program (e.g., "TV", "DVD"). The indicator light will blink once and remain lit.
4. Enter the 4-digit code for your device's brand from the code list. After entering the last digit, the indicator light should turn off.
5. Point the remote at the device and press the "POWER" button. If the device turns off, the code is correct. If not, try the next code listed for your brand or proceed to the Auto Code Search method.

Auto Code Search Method:

If you cannot find a code or the code entry method does not work, the remote can search for the correct code automatically.

1. Turn on the device you wish to program.
2. Press and hold the "SETUP" button until the indicator light illuminates.
3. Press the device button you want to program (e.g., "TV", "DVD"). The indicator light will blink once and remain lit.
4. Point the remote at the device and repeatedly press the "POWER" button (or "CH+" for TV/VCR) until the device turns off. This may take several presses as the remote cycles through codes.
5. Once the device turns off, immediately press the "OK" button to lock in the code. The indicator light will turn off.
6. Test other functions (e.g., volume, channel) to ensure the remote is fully programmed.

For a visual guide, the product description mentions an online setup video. However, no official seller video is available for embedding in this manual. Please refer to the manufacturer's website or product packaging for any provided video links.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your GE 34459 Universal Remote.





An image of the GE 34459 6-Device Universal Remote, showing its black casing and white buttons. Key buttons visible include power, device selection (TV, DVR, Cbl, Sat, Amp, Aux), navigation pad, volume, channel, playback controls, and numeric keypad.

Remote Button Functions

Button Name	Function
POWER	Turns the selected device On or Off.
DEVICE SELECTORS (TV, DVR, Cbl, Sat, Amp, Aux)	Selects the device you wish to control. Press the corresponding button before operating a device.

Button Name	Function
INPUT	Cycles through video inputs on your TV or other devices.
NAVIGATION PAD (Up, Down, Left, Right, OK)	Navigates menus and guides. OK confirms selections.
VOL +/-	Adjusts the volume. The remote features a master volume control, allowing volume adjustment regardless of the selected device.
CH +/-	Changes channels.
DIGITAL DOT (located near 0)	Accesses sub-channels (e.g., 4.1, 4.2). Press the main channel number, then the DIGITAL DOT , then the sub-channel number.
GUIDE	Displays the program guide.
INFO	Displays information about the current program or selection.
MENU	Accesses the device's main menu.
EXIT	Exits menus or guides.
FAV	Accesses favorite channels or functions (if programmed).
OVR LIST	Accesses the DVR recording list.
PLAYBACK CONTROLS (Rewind, Play, Fast Forward, Rec, Pause, Stop)	Controls media playback functions for compatible devices (e.g., DVD, Blu-ray, DVR).
NUMERIC KEYPAD (0-9, Enter)	Enters channel numbers or other numerical inputs. "Enter" confirms the channel selection.
A, B, C, D (Colored Buttons)	These buttons typically correspond to special functions within menus or specific device features. Their function varies by device.
SHIFT	Used in combination with other buttons to access secondary functions (e.g., for programming or advanced features).
SETUP	Used for programming the remote to control your devices.

MAINTENANCE

Battery Replacement

When the remote's range decreases or buttons become unresponsive, it's time to replace the batteries. Always replace both AA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean your remote, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting liquids inside the remote.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Remote does not operate your device.	<ul style="list-style-type: none">Ensure the remote is pointed directly at the device and there are no obstructions.Verify that you have selected the correct device button (e.g., "TV" for your television).Check if the batteries are installed correctly and are not depleted. Replace if necessary.Re-program the remote for the device using the Code Entry or Auto Code Search method.
Some buttons work, but others do not.	<ul style="list-style-type: none">The programmed code may only support basic functions. Try another code from the code list for your device brand.Ensure the device you are trying to control supports the specific function (e.g., not all TVs have a "GUIDE" button function).
Indicator light does not illuminate when pressing buttons.	<ul style="list-style-type: none">Check battery installation.Replace batteries with fresh ones.

SPECIFICATIONS

Feature	Detail
Model Number	34459
Brand	GE
Product Dimensions	6.5 x 1.9 x 0.81 inches
Item Weight	3.21 ounces
Batteries Required	2 AA batteries
Max Number of Supported Devices	6
Compatible Devices	Television, Blu-ray player, DVD player, DVR, Cable/Satellite receivers, Digital converter boxes
Color	Black
Special Feature	Universal
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information, technical support, or to access the full code library for your GE 34459 Universal Remote, please refer to the documentation included with your product or visit the official GE consumer electronics support website. Contact information for customer service is typically provided on the product packaging or the manufacturer's website. Always ensure you have your product model number (34459) ready when contacting support.

© 2025 GE. All rights reserved.