

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic ER-SB60S-803 Beard Trimmer Instruction Manual](#)

Panasonic ER-SB60-S803

Panasonic ER-SB60S-803 Beard Trimmer Instruction Manual

Model: ER-SB60-S803

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Panasonic ER-SB60S-803 Beard Trimmer. Please read all instructions carefully before use and retain this manual for future reference.

Package Contents

- Panasonic ER-SB60S-803 Beard Trimmer Unit
- Precision Comb Attachment
- Charger
- Charging Stand
- Cleaning Brush
- Lubricating Oil
- Storage Pouch



Components of the Panasonic ER-SB60S-803 Beard Trimmer, including the trimmer unit, precision comb attachment, charger, charging stand, cleaning brush, oil, and storage pouch.

2. SAFETY WARNINGS

- Avoid direct contact with eyes, broken skin, and open wounds.
- Do not use this product on infants or young children.
- Ensure the appliance is completely dry before connecting it to the power source for charging.
- Always follow the cleaning and maintenance instructions to prevent potential hazards and ensure proper functioning.
- Do not disassemble or attempt to repair the trimmer yourself. Contact authorized service personnel for repairs.
- Keep the appliance away from water when not in use or during charging, unless specifically designed for wet use and disconnected from power.

3. SETUP

Initial Charging

1. Before first use, fully charge the trimmer.
2. Connect the charger to the charging stand, then place the trimmer onto the stand.

3. Plug the charger into an appropriate power outlet.
4. The LED indicators on the trimmer will show the charging status. A full charge typically takes approximately 1 hour, providing up to 60 minutes of cordless operation.
5. Once fully charged, disconnect the charger from the power outlet and remove the trimmer from the stand.

4. OPERATING INSTRUCTIONS

Checking Battery Level

The trimmer features 3 LED indicators to display the current battery level. Refer to these indicators to determine when recharging is necessary.

Adjusting Cutting Length

The quick adjustment dial on the ER-SB60S-803 offers 19 length settings from 1.0 mm to 10 mm, in 0.5 mm intervals. To adjust the length:

1. Ensure the trimmer is turned off.
2. Attach the precision comb securely to the trimmer head.
3. Rotate the quick adjustment dial to select your desired cutting length.
4. For a 0.5 mm cut, remove the comb attachment and use the trimmer directly.



Close-up view of the quick adjustment dial on the Panasonic ER-SB60S-803 Beard Trimmer, showing settings 1 and 2.

Trimming Your Beard

The trimmer can be used corded or cordless, offering flexibility for use in various locations, including the bathroom or while traveling.

1. Select the desired cutting length using the adjustment dial.
2. Turn on the trimmer.
3. Hold the trimmer with the blades facing your beard.
4. Move the trimmer against the direction of hair growth for an even cut.
5. For detail trimming or shaping, use the trimmer without the comb attachment for a 0.5 mm cut.



Illustration of using the Panasonic ER-SB60S-803 Beard Trimmer for detail trimming, highlighting a 5mm cutting length.

5. MAINTENANCE

Cleaning the Trimmer

The Panasonic ER-SB60S-803 is waterproof, allowing for easy cleaning under running water.

1. After each use, turn off the trimmer and disconnect it from any power source.
2. Remove the comb attachment.
3. Rinse the trimmer head and blades thoroughly under running water to remove hair clippings.
4. Use the provided cleaning brush to remove any stubborn hair from the blades.
5. Shake off excess water and allow the trimmer to air dry completely before storing or recharging.



The Panasonic ER-SB60S-803 Beard Trimmer being rinsed under running water for cleaning, demonstrating its waterproof feature.

Oiling the Blades

Regular oiling ensures optimal performance and extends the life of the blades.

1. After cleaning and drying, apply a few drops of the provided lubricating oil to the blades.
2. Turn on the trimmer for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

6. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer runs slowly or pulls hair.	Blades are dirty or not oiled.	Clean and oil the blades as per maintenance instructions.
Uneven cutting.	Comb attachment not properly secured or incorrect technique.	Ensure comb is securely attached. Move the trimmer slowly and evenly against hair growth.

7. SPECIFICATIONS

Product Name	Beard Trimmer
Model Number	ER-SB60-S803
Brand	Panasonic
Power Source	Battery powered and Electric cable
Battery Type	1 A (included)
Blade Material	Stainless Steel
Product Dimensions (L x W x H)	18 x 4.5 x 4 cm
Product Weight	0.8 grams
Color	Silver
Special Feature	Portable
Target Audience	Men



Dimensions of the Panasonic ER-SB60S-803 Beard Trimmer: 179 mm length, 48 mm width, and 45 mm depth.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Panasonic website. For technical support or service inquiries, please contact Panasonic customer service in your region.

© 2026 Panasonic. All rights reserved.