

[manuals.plus](#) /

- › [Our Generation](#) /
- › [Our Generation Awesome Academy School Set Instruction Manual](#)

**Our Generation BD37330**

# Our Generation Awesome Academy School Set Instruction Manual

Model: BD37330

## 1. INTRODUCTION

The Our Generation Awesome Academy School Set is a comprehensive playset designed for 18-inch dolls, offering an immersive schoolroom experience. This manual provides essential information for assembly, operation, maintenance, and safety to ensure proper use and enjoyment of the product.



*Image 1: The complete Our Generation Awesome Academy School Set, showcasing the schoolroom structure and numerous accessories.*

## 2. SETUP AND ASSEMBLY

## 2.1 Unpacking

Carefully remove all components from the packaging. Verify that all 68 pieces, including the 4-piece schoolroom and additional accessories, are present. Dolls, doll accessories, and outfits are sold separately.

## 2.2 Schoolroom Assembly

The schoolroom consists of 4 main pieces that interlock to form the classroom structure. Follow the visual guides provided in the product packaging for proper alignment and secure connection of these pieces.

## 2.3 Battery Installation

The set requires 4 x AAA batteries for the working lights, clock, fire alarm, and school bell features. These batteries are included. Locate the battery compartments, typically on the back or underside of the relevant components, and insert the batteries according to the polarity indicators (+/-).

### 3. COMPONENTS AND FEATURES

---

The Awesome Academy School Set includes a variety of interactive features and accessories:

- **Schoolroom Structure:** A 4-piece playset forming a detailed classroom environment.
- **Chalkboard:** A functional chalkboard for use with real chalk.
- **Whiteboard:** Features working lights for enhanced visibility.
- **Clock:** A functional clock to keep track of playtime.
- **Fire Alarm:** A working fire alarm for realistic play scenarios.
- **School Bell:** A functional school bell to signal class changes.
- **Student Desks and Chairs:** Multiple desks and chairs for 18-inch dolls.
- **Teacher's Desk:** A dedicated desk for the teacher doll.
- **Assorted School Accessories:** A collection of 68 pieces including notebooks, pencils, rulers, and other classroom essentials.




*Image 2: Dolls engaging with the school set, demonstrating scale and play possibilities.*

## 4. OPERATING INSTRUCTIONS

### 4.1 Using the Chalkboard and Whiteboard

Use real chalk on the green chalkboard. The whiteboard features working lights, activated by a switch, to illuminate written content. The whiteboard also has a glow feature for special effects.

Gg Hh Ii Jj Kk Ll Mm Nn Oo Pp Qq Rr Ss Tt Uu

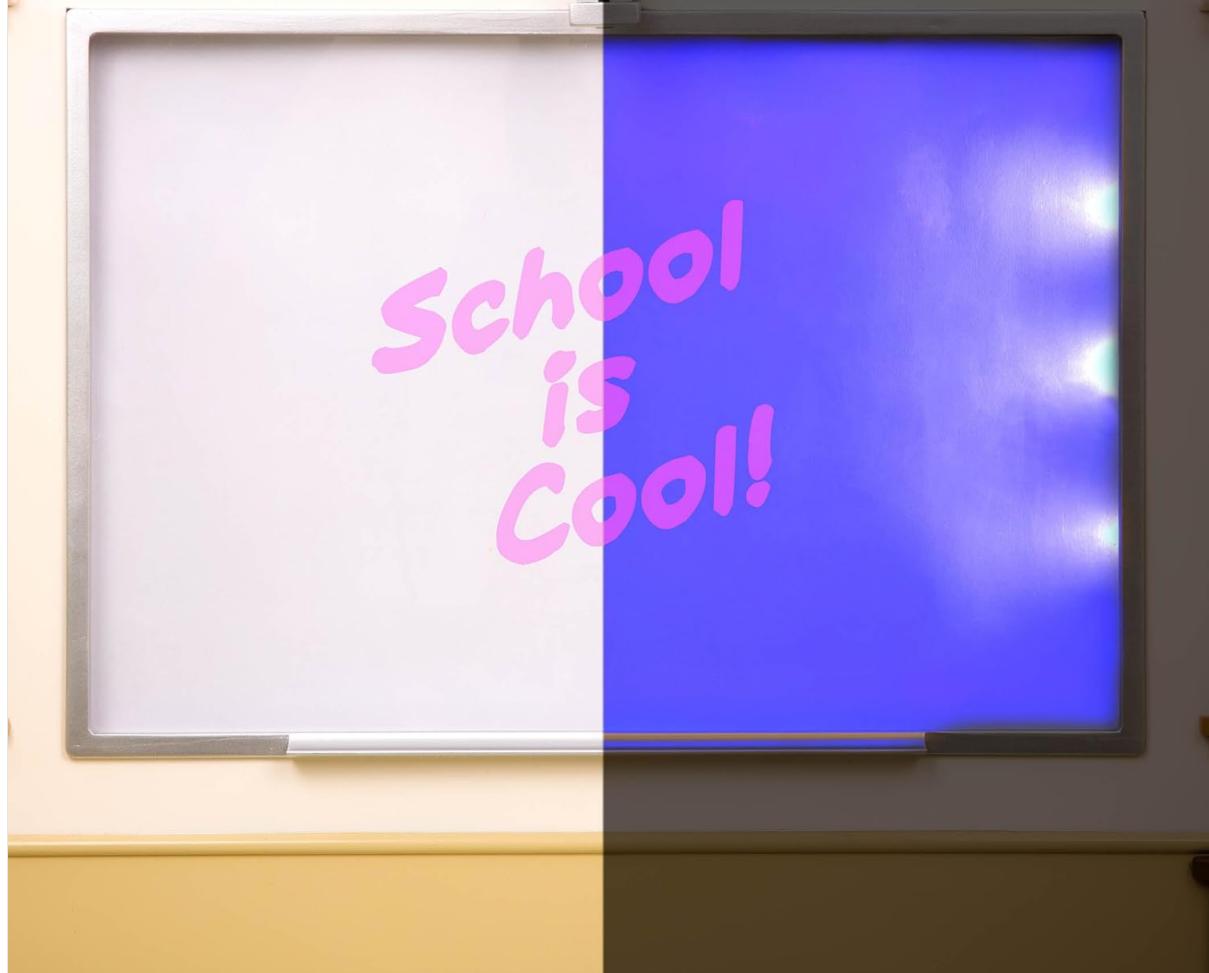

*Image 3: The whiteboard's illuminated glow feature.*

#### **4.2 Activating Lights and Sounds**

The clock, fire alarm, and school bell are equipped with working lights and sounds. Locate the activation buttons or switches on each component to engage their respective features. Ensure batteries are correctly installed for full functionality.



*Image 4: Detail of the functional fire alarm.*

#### **4.3 Doll Interaction**

The school set is designed for 18-inch dolls. Dolls can sit at the desks, stand within the classroom, and interact with the various accessories to create diverse play scenarios.



*Image 5: Dolls interacting with the locker area of the school set.*

## 5. MAINTENANCE

### 5.1 Cleaning

Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the product's finish. Ensure all electronic components are dry before use.

### 5.2 Storage

Store the playset and accessories in a dry, cool place away from direct sunlight to prevent fading or damage. Keep small accessories in a designated container to avoid loss.

## 6. TROUBLESHOOTING

### 6.1 Lights or Sounds Not Working

If the lights, clock, fire alarm, or school bell are not functioning, check the following:

- Ensure batteries are correctly installed with proper polarity.
- Replace old batteries with new ones.
- For the schoolroom structure, ensure all 4 pieces are securely connected. Loose connections can sometimes prevent electronic features from working. Carefully push all plastic clips through the floor until they click into place to ensure proper electrical contact.

## 7. SPECIFICATIONS

- **Product Dimensions:** 28.25 x 13 x 21.5 inches
- **Item Weight:** 1 pound
- **Item Model Number:** BD37330
- **Manufacturer Recommended Age:** 36 months - 8 years
- **Batteries:** 4 x AAA batteries required (included)
- **Manufacturer:** Branford Ltd.
- **Release Date:** September 10, 2019

## 8. SAFETY INFORMATION

**WARNING: Not for children under 3 years of age. Contains small parts which may pose a choking hazard.**

Adult supervision is recommended during play, especially during initial assembly and when handling small accessories.

## 9. OFFICIAL PRODUCT VIDEOS

### Doll Classroom Set Overview

*Video 1: A seller-provided overview of a doll classroom set, highlighting various features and accessories.  
This video demonstrates the interactive elements of a similar playset.*

### Back to School 18 Inch Doll Accessory Set

*Video 2: A seller-provided video showcasing a back-to-school accessory set for 18-inch dolls, demonstrating the types of small items included with such playsets.*

## 10. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for proof of purchase.