

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [KYOCERA](#) /

› KYOCERA TK-5217K Black Toner Cartridge User Manual

KYOCERA TK-5217K

KYOCERA TK-5217K Black Toner Cartridge User Manual

Model: TK-5217K | Brand: KYOCERA

1. INTRODUCTION

This user manual provides essential information for the proper handling, installation, and maintenance of your KYOCERA TK-5217K Black Toner Cartridge. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

2. PRODUCT OVERVIEW

The KYOCERA TK-5217K is a genuine black toner cartridge designed for use with the Kyocera TASKalfa 406ci A4 Color Multifunctional Printer. This cartridge is engineered to deliver consistent, high-quality black prints.

Key Features:

- Designed specifically for Kyocera TASKalfa 406ci A4 Color Multifunctional Printer.
- Provides a yield of up to 20,000 pages at 5% average coverage.
- Ensures sharp, clear black text and images.

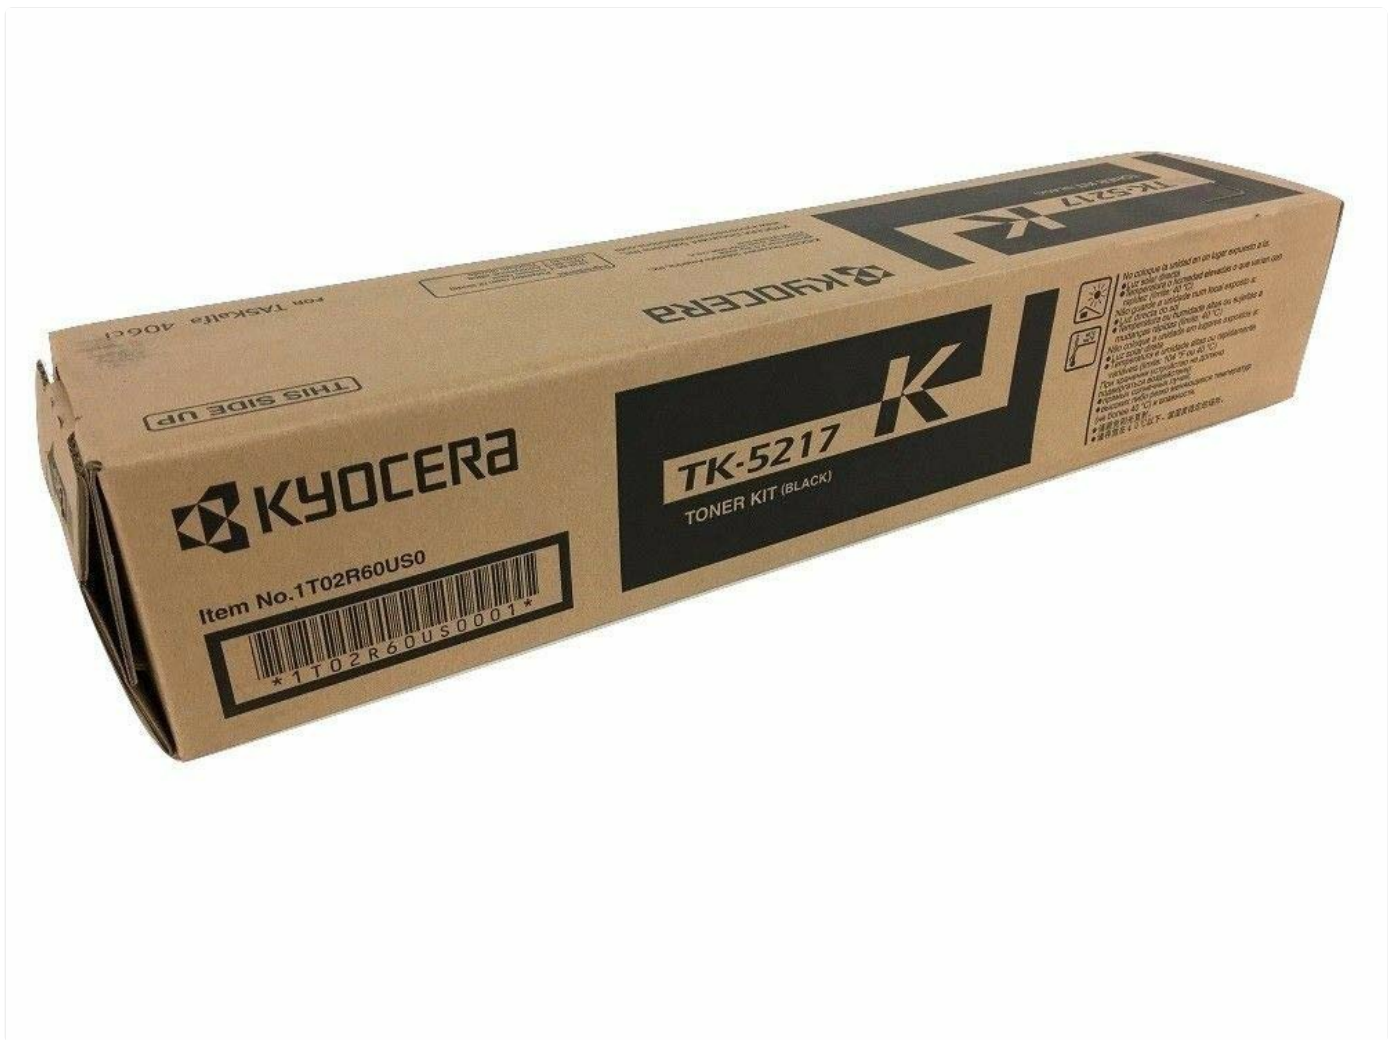


Figure 2.1: KYOCERA TK-5217K Black Toner Cartridge retail packaging. The box displays the model number TK-5217 and indicates it is a black toner kit, along with the KYOCERA brand logo and item number 1T02R60US0.

3. SETUP AND INSTALLATION

Follow these steps to properly install the toner cartridge into your Kyocera TASKalfa 406ci printer. Always refer to your printer's specific user manual for detailed instructions on opening the toner compartment.

1. **Unpack the Cartridge:** Carefully remove the TK-5217K toner cartridge from its retail packaging. Avoid touching the drum or toner opening.
2. **Shake Gently:** Before installation, gently shake the new toner cartridge horizontally 5-6 times to distribute the toner evenly inside.
3. **Open Printer Cover:** Open the front cover or toner compartment cover of your Kyocera TASKalfa 406ci printer as instructed in your printer's manual.
4. **Remove Old Cartridge:** If replacing an empty cartridge, carefully pull out the old toner cartridge. Place it in a sealed bag for proper disposal.
5. **Insert New Cartridge:** Align the new TK-5217K cartridge with the corresponding slot in the printer. Gently push it in until it clicks securely into place. Do not force the cartridge.
6. **Close Printer Cover:** Close the printer cover. The printer should recognize the new cartridge automatically.

Note: Always power off the printer before installing or removing toner cartridges to prevent damage.

4. OPERATING INSTRUCTIONS

The KYOCERA TK-5217K toner cartridge functions as an integral component of your Kyocera TASKalfa 406ci printer. Once installed, the printer will manage its operation automatically.

- **Toner Level Monitoring:** Your printer's display or software utility will indicate the current toner level. Replace the cartridge when the "Toner Low" or "Replace Toner" message appears.
- **Print Quality:** If print quality degrades (e.g., faded prints, streaks), it may indicate low toner or a need for printer maintenance. Refer to your printer's manual for print quality troubleshooting.

5. MAINTENANCE AND STORAGE

Storage:

- Store the toner cartridge in its original, unopened packaging until ready for use.
- Keep the cartridge in a cool, dry place, away from direct sunlight and extreme temperatures (below 40°C / 104°F).
- Avoid storing in areas with high humidity or significant temperature fluctuations.
- Store horizontally to prevent toner clumping.

Handling:

- Handle the cartridge carefully to avoid dropping it, which could damage internal components or cause toner leaks.
- Do not attempt to refill the cartridge.
- Dispose of empty cartridges according to local regulations for electronic waste or through Kyocera's recycling programs if available.

6. TROUBLESHOOTING

If you encounter issues related to printing or toner, consider the following common troubleshooting steps:

Problem	Possible Cause	Solution
"Toner Low" or "Replace Toner" message persists after installing new cartridge.	Cartridge not seated correctly, or printer sensor issue.	Remove and re-insert the cartridge firmly. Ensure it clicks into place. Restart the printer.
Faded or light prints.	Toner unevenly distributed or cartridge nearing end of life.	Gently shake the cartridge horizontally. If problem persists, replace the cartridge. Check printer settings for toner density.
Streaks or lines on prints.	Damaged cartridge, or printer drum/fuser issue.	Inspect the cartridge for visible damage. If none, the issue might be with the printer's internal components. Consult your printer's manual.
Printer not recognizing cartridge.	Improper installation or faulty cartridge.	Ensure the cartridge is correctly installed. Verify it is a genuine Kyocera cartridge. If issues persist, contact Kyocera support.

For more complex issues, refer to your Kyocera TASKalfa 406ci printer's comprehensive user manual or contact Kyocera technical support.

7. SPECIFICATIONS

- **Model Number:** TK-5217K

- **Part Number:** 1T02R60US0
- **Color:** Black
- **Page Yield:** Up to 20,000 pages at 5% average coverage
- **Compatible Printer Models:** Kyocera TASKalfa 406ci A4 Color Multifunctional Printer
- **Product Dimensions:** Approximately 1 x 1 x 1 inches (Packaging dimensions may vary)
- **Item Weight:** Approximately 1.92 pounds
- **Manufacturer:** KYOCERA
- **UPC:** 768202253784

8. WARRANTY AND SUPPORT

Kyocera toner cartridges are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the official Kyocera website or the documentation included with your printer.

For technical support or inquiries about your TK-5217K toner cartridge or Kyocera printer, please visit the official KYOCERA support website or contact their customer service department. Ensure you have your product model number and any relevant purchase information ready when seeking support.

Official KYOCERA Website: www.kyoceradocumentsolutions.com

