

[Manuals.plus](#) /

› [MEUBLE COSY](#) /

› MEUBLE COSY Adjustable Mobile Laptop Desk - Model BELLO WOOD

MEUBLE COSY BELLO WOOD

MEUBLE COSY Adjustable Mobile Laptop Desk

Model: BELLO WOOD

1. INTRODUCTION

Thank you for purchasing the MEUBLE COSY Adjustable Mobile Laptop Desk, Model BELLO WOOD. This versatile desk is designed to provide a comfortable and adaptable workspace for various activities, whether you are working on a laptop, reading, or enjoying a meal from your bed or sofa. Its adjustable height and mobile design offer convenience and flexibility in any home or office environment.

2. SAFETY INFORMATION

- Ensure all parts are securely fastened before use.
- Do not overload the desk. The maximum weight capacity is 5 kg (11 lbs).
- Keep hands and fingers clear of moving parts during height adjustment.
- Avoid placing hot items directly on the tabletop without protection.
- Do not stand or sit on the desk.
- Use on a flat, stable surface to prevent tipping.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Tabletop (1)
- Vertical Support Column (1)
- Base Frame with Casters (1)
- Height Adjustment Knob (1)
- Assembly Hardware (Screws, Allen wrench)



Image 1: All components and dimensions of the desk.

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your laptop desk:

1. **Attach the Vertical Support Column to the Base Frame:** Align the bottom of the vertical support column with the designated slot on the base frame. Secure it using the provided screws and Allen wrench. Ensure it is firmly attached.
2. **Attach the Tabletop to the Vertical Support Column:** Slide the tabletop onto the top of the vertical support column. Ensure the pre-drilled holes on the tabletop align with the holes on the column. Secure with the remaining screws.
3. **Insert the Height Adjustment Knob:** Locate the height adjustment knob. Insert it into the threaded hole on the vertical support column and turn clockwise to secure it. Do not overtighten.
4. **Check Stability:** Once assembled, gently shake the desk to ensure all connections are stable and secure. Tighten any loose screws if necessary.



Image 2: Assembled desk, side view.

5. OPERATING INSTRUCTIONS

5.1. Height Adjustment

The desk features an adjustable height mechanism, allowing you to use it comfortably while sitting or standing. The height can be adjusted between 67 cm and 79 cm.

1. **Loosen the Adjustment Knob:** Turn the height adjustment knob counter-clockwise to loosen it.
2. **Adjust Height:** Gently raise or lower the tabletop to your desired height.
3. **Secure the Knob:** Once the desired height is reached, turn the adjustment knob clockwise firmly to lock the desk in position. Ensure it is tight to prevent the desk from slipping.



Image 3: Desk in use, illustrating height adjustment.

5.2. Mobility

The desk is equipped with four sturdy casters on its nylon base, allowing for easy movement across various floor surfaces. Simply push or pull the desk to reposition it as needed. Ensure the path is clear of obstacles before moving.

6. MAINTENANCE

- **Cleaning:** Wipe the tabletop and metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

- **Caster Care:** Keep the casters free of dust and debris to ensure smooth movement.

7. TROUBLESHOOTING

Problem	Solution
Desk is wobbly.	Check all assembly screws and tighten them securely. Ensure the desk is on a flat surface.
Height adjustment is difficult or slips.	Ensure the height adjustment knob is fully loosened before adjusting and fully tightened after setting the height. Clean any debris from the adjustment mechanism.
Casters do not roll smoothly.	Remove any hair or debris from the caster wheels. Lubricate with a silicone spray if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	MEUBLE COSY
Model Number	BELLO WOOD
Tabletop Dimensions (L x D)	48 cm x 37 cm (18.9 in x 14.6 in)
Adjustable Height Range	67 cm - 79 cm (26.4 in - 31.1 in)
Product Weight	4.2 kg (9.3 lbs)
Top Material	DF Wood
Frame Material	Silver Metal
Casters	4 Nylon Casters
Usage Type	Portable, Adjustable

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact MEUBLE COSY customer service through their official channels. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B078FQH252>

More documents and user manuals: <https://manuals.plus/>