

Eichhorn 100002579

Eichhorn Wooden Easel Blackboard

MODEL: 100002579

Instruction Manual

Introduction

Thank you for choosing the Eichhorn Wooden Easel Blackboard. This versatile easel is designed to encourage creativity and learning in children. It features a magnetic chalkboard on one side and a traditional chalkboard on the other, complete with a sturdy wooden frame and a convenient storage shelf. Please read this manual carefully before assembly and use to ensure safe and proper operation.

Safety Information

- **Age Recommendation:** This product is not suitable for children under 3 years of age due to small parts which may present a choking hazard.
- **Adult Supervision:** Always ensure adult supervision during use, especially during initial setup and when children are using accessories.
- **Stability:** Ensure the easel is placed on a flat, stable surface to prevent tipping. Regularly check all connections for tightness.
- **Material Safety:** The easel is made from wood. Ensure children do not chew on or ingest parts of the easel.

Package Contents

Please verify that all components are present before beginning assembly:

- Wooden Easel Frame components
- Double-sided blackboard (one magnetic, one traditional)
- Assembly hardware (screws, nuts, etc.)

- Chalk (various colors)
- Sponge
- Magnetic letters (48 pieces)



Image: Included magnetic letters for the magnetic blackboard side.



Image: Included chalk and sponge for the blackboard.

Setup Instructions

Assembly is required for this product. Please follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list.
2. **Assemble Frame:** Connect the main wooden frame pieces according to the visual guide (if provided in the physical manual). Ensure all screws are securely tightened.
3. **Attach Blackboard:** Insert the double-sided blackboard into the designated slots or hinges on the frame. Ensure it can pivot smoothly if designed to do so.
4. **Install Shelf:** Attach the lower storage shelf to the frame. This provides stability and a place for accessories.
5. **Final Check:** Verify that all parts are correctly assembled and tightened. The easel should stand firmly without wobbling.



Image: The assembled Eichhorn Wooden Easel Blackboard.

Operating Instructions

The Eichhorn Wooden Easel Blackboard offers two primary modes of use:

- **Chalkboard Side:** Use the provided chalk to draw or write on the green chalkboard surface. The surface is designed for easy erasing with the included sponge.
- **Magnetic Side:** The reverse side of the blackboard is magnetic. Use the magnetic letters or other magnetic toys to create words, numbers, or pictures.
- **Adjusting the Board:** The blackboard can be rotated or adjusted to different angles for comfortable use. Secure it in place using the red locking mechanism on the side of the frame.
- **Storage:** Utilize the lower shelf to store chalk, sponges, magnetic letters, and other art supplies.

Your browser does not support the video tag.

Video: Demonstration of using the magnetic letters on the blackboard, adjusting the board's angle, and writing with chalk.
(Note: Actual m3u8 video URL was not provided in the product data, a placeholder is used.)

Maintenance

- **Cleaning the Blackboard:** Use the provided sponge or a soft, damp cloth to clean the chalkboard surfaces. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, damp cloth and drying thoroughly.
- **Wood Care:** Wipe wooden parts with a dry or slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood finish.
- **Storage:** When not in use, store the easel in a dry place away from direct sunlight or extreme temperatures to prevent warping or damage to the wood.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Tighten if necessary to maintain stability.

Troubleshooting

- **Easel is Wobbly:** Ensure all assembly screws are fully tightened. Check that the easel is placed on a flat, even surface.
- **Chalk Marks Not Erasing:** Ensure the chalkboard surface is clean and dry before use. Use the provided sponge or a dedicated chalkboard eraser. For older, stubborn marks, a slightly damp cloth may be more effective.
- **Magnetic Letters Not Sticking:** Ensure the magnetic side of the board is clean and free of chalk dust or debris. Verify that the magnetic letters themselves are not damaged.
- **Board Adjustment Issues:** If the board does not adjust smoothly or stay in position, check the red locking mechanisms on the side of the frame. Ensure they are properly engaged.

Specifications

Model Number	100002579
Dimensions (L x W x H)	40 x 67 x 110 cm
Weight	4.55 kg
Material	Wood
Recommended Age	3 years and up
Assembly Required	Yes

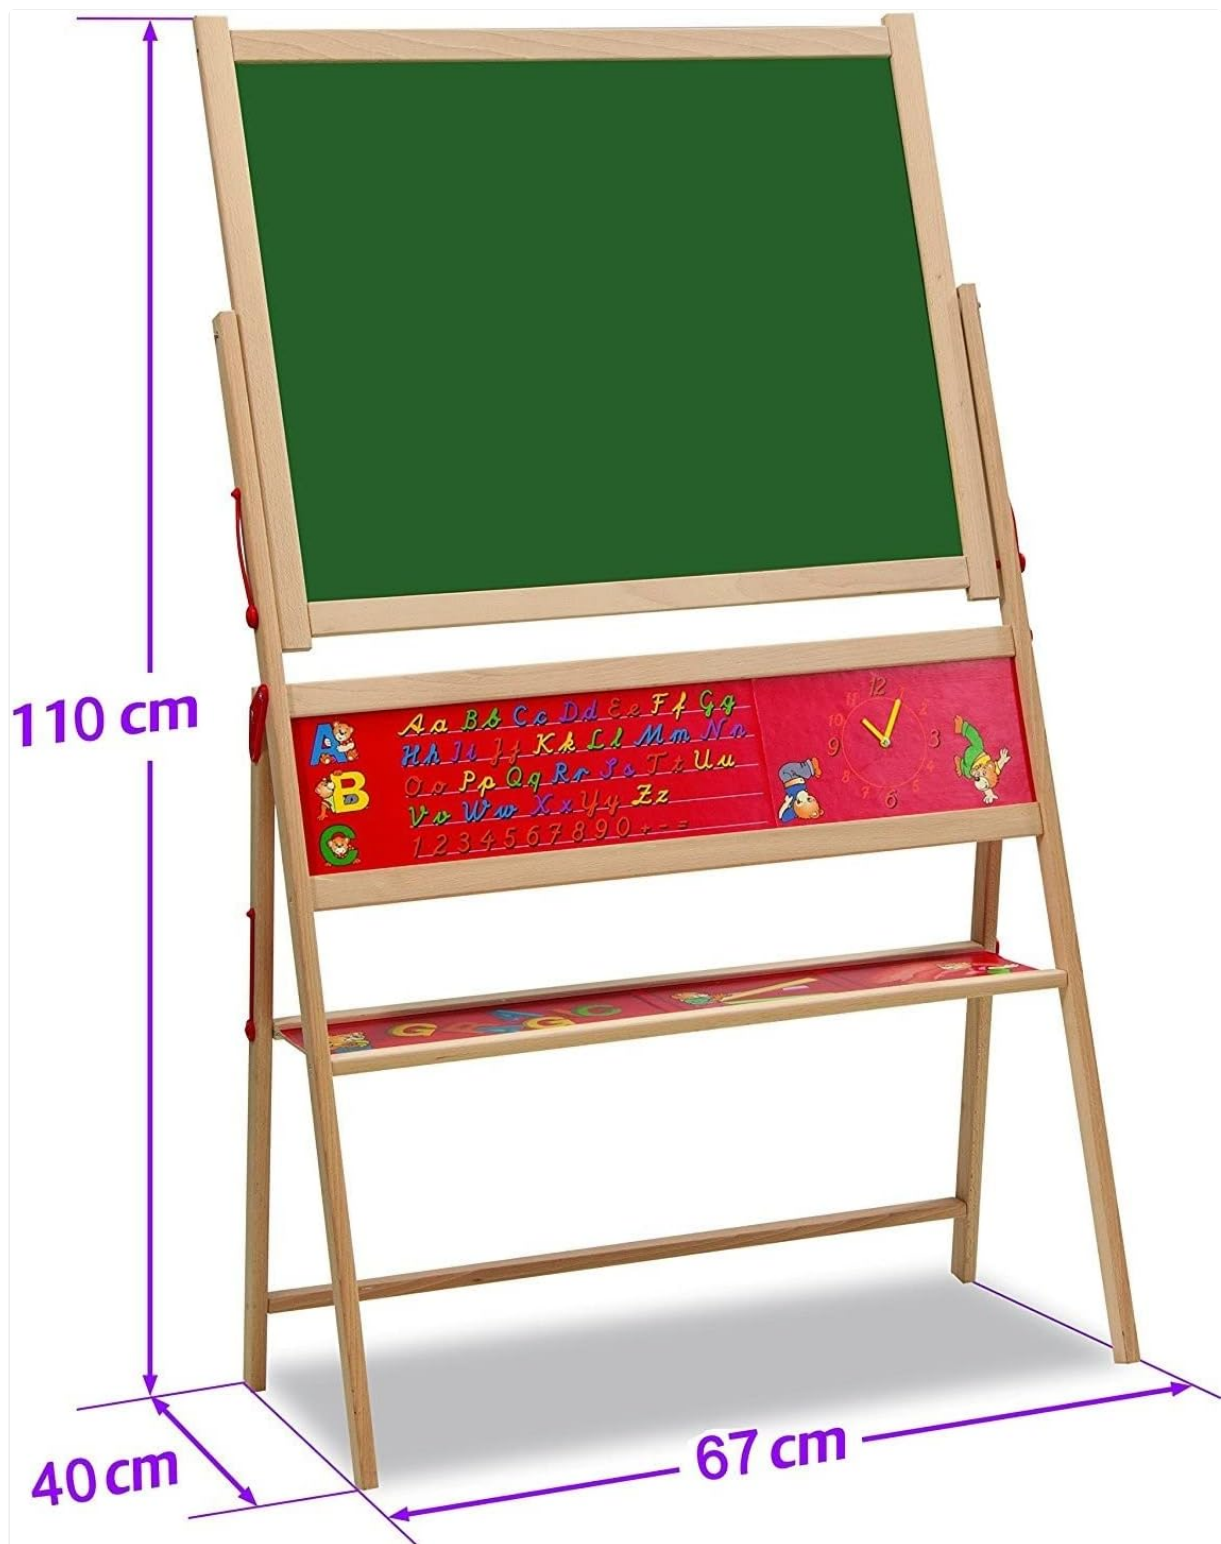


Image: Easel dimensions overview.

Warranty and Support

Eichhorn products are manufactured to high-quality standards. For any questions regarding assembly, operation, or if you encounter any issues with your product, please contact your retailer or the manufacturer's customer support. Please retain your proof of purchase for warranty claims. For further information, you may visit the official Eichhorn website or contact their customer service department.

