

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

## Amazon Basics SW-802C-K

# Amazon Basics Book Safe - Combination Lock

## INSTRUCTION MANUAL

Model: SW-802C-K

### Product Overview

The Amazon Basics Book Safe with Combination Lock is designed to discreetly store small valuables. Its exterior is crafted to resemble a standard book, allowing it to blend seamlessly into a bookshelf or other home environment. This portable lock box provides a secure, yet accessible, storage solution for items such as cash, credit cards, important documents, and jewelry.

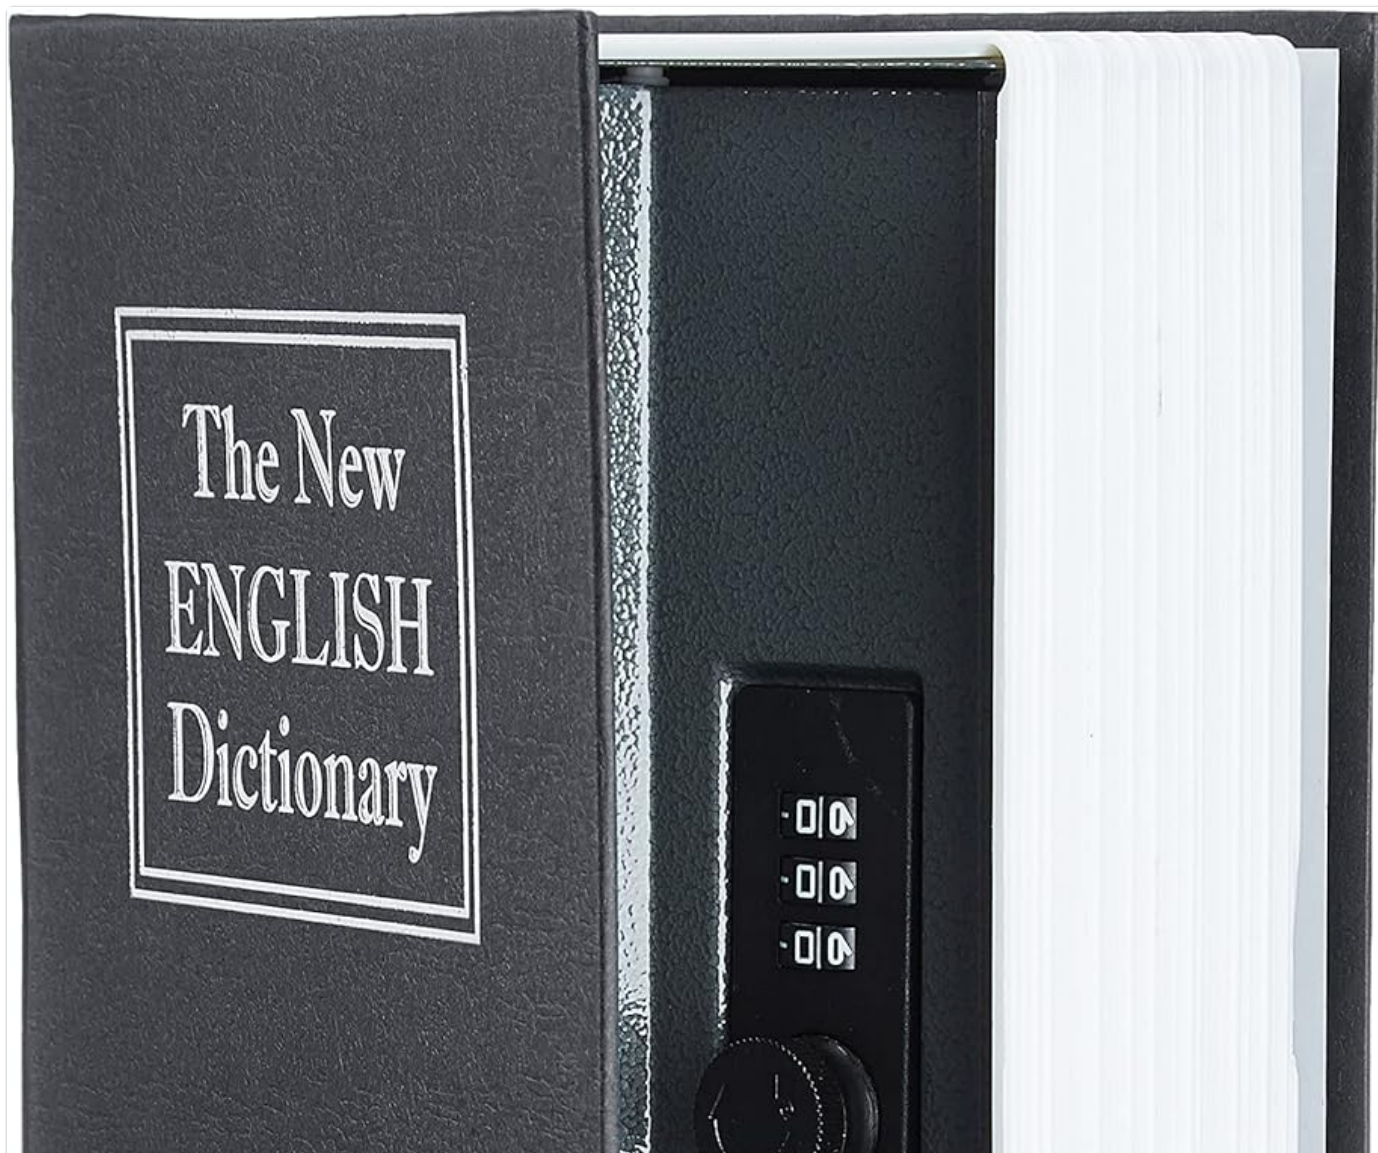 


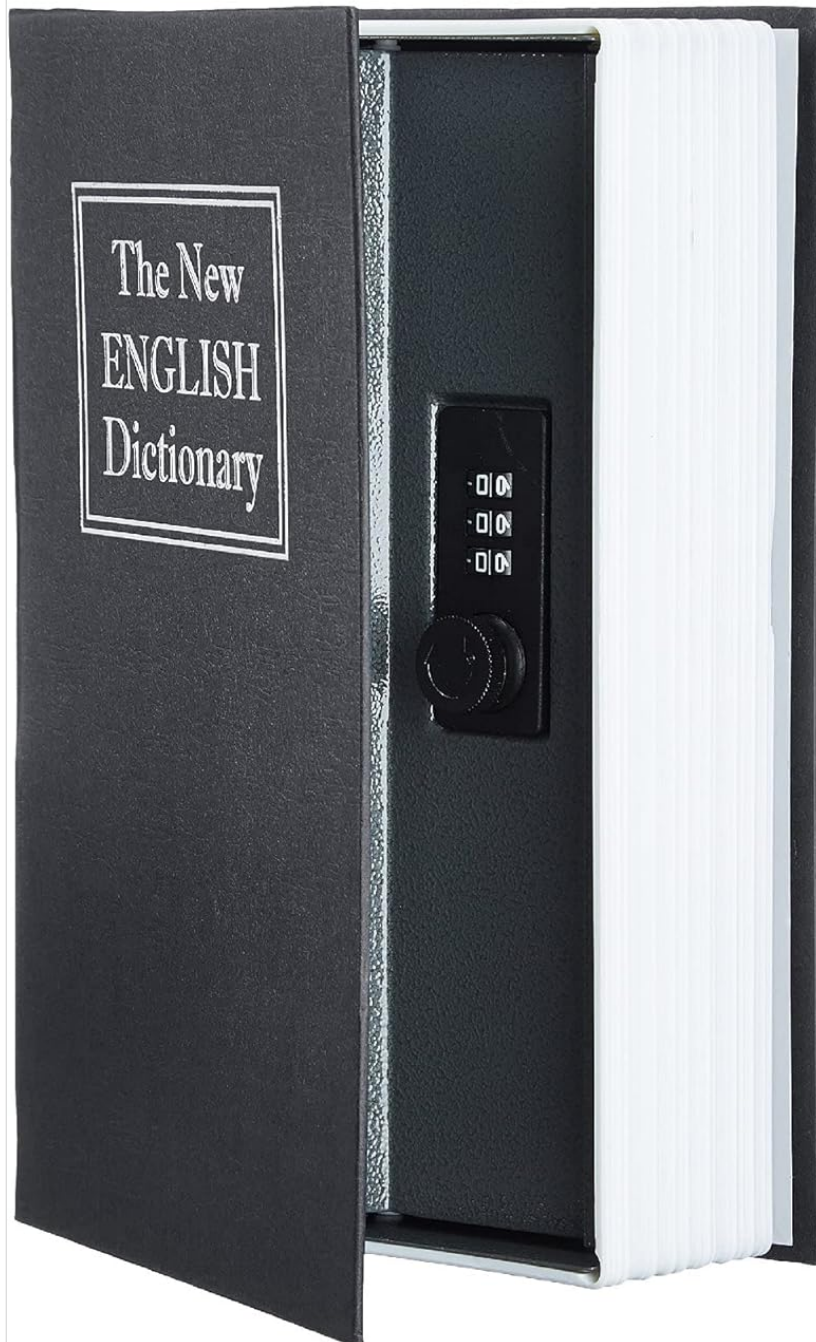 


Image: The Amazon Basics Book Safe in its closed state, designed to look like a black book titled "The New English Dictionary".

- **Discreet Design:** Fabric cover and spine designed to look like a book, ideal for hiding small valuables on a bookshelf.
- **Secure Storage:** Features a 3-digit combination lock to deter unauthorized access.
- **Versatile Use:** Suitable for storing cash, credit cards, important documents, jewelry, and other small items.
- **Portable:** Ideal for both home use and travel.

# Multi-Purpose & Portable

Hide valuables easily



Ideal for traveling or  
at home



Store jewellery,  
credit cards, cash,  
documents & more



Designed to  
deter theft

Image: An illustration highlighting the multi-purpose and portable features of the book safe, showing it can be used at home or for travel, and is suitable for storing various valuables.

## Setup: Setting Your Combination

Your Amazon Basics Book Safe comes with a factory default combination, typically "000". It is highly recommended to change this to a personal, memorable 3-digit combination immediately after purchase.

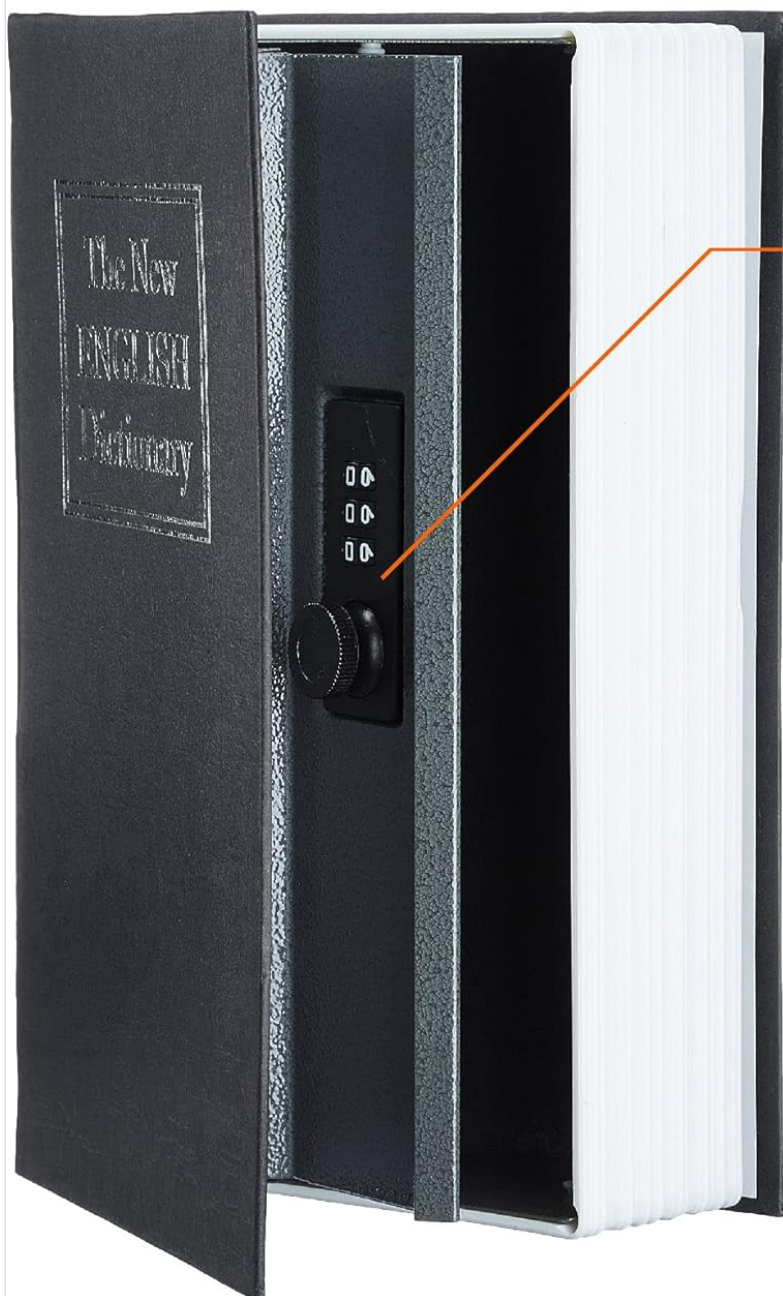
1. **Open the Safe:** With the safe in its closed position, dial the numbers to the factory default combination (e.g., "000"). The front cover lifts to reveal the safe's actual cover and the combination lock mechanism.
2. **Locate the Reset Lever/Button:** Inside the safe, on the back of the lock mechanism, you will find a small lever or button. This is typically located near the combination dials.



3. **Engage Reset Mode:** While the safe is open and set to the current combination, push the lever from position A to B (or press and hold the button). Keep it in this position.
4. **Set New Combination:** While holding the lever/button, dial the three number wheels to your desired new combination. Choose a combination that is easy for you to remember but difficult for others to guess.
5. **Release Reset Mode:** Release the lever/button, moving it back to its original position (from B to A, or release the button). Your new combination is now set.
6. **Test the New Combination:** Before closing the safe, scramble the dials to a random set of numbers. Then, dial your new combination to ensure it opens correctly. If it does not open, repeat the steps carefully.

## Safe With Diversion Design

Offers customisable code



3-digit combination lock

Front cover lifts to reveal  
safe's actual cover

Image: A detailed view of the 3-digit combination lock, illustrating the mechanism for setting and entering the code.

---

## Opening the Safe

1. Ensure the safe is in a stable position.
2. Carefully dial the three number wheels to your personal 3-digit combination. Align the numbers precisely with the indicator line.
3. Once the correct combination is set, the front cover will be unlocked and can be lifted to access the inner safe compartment.

## Closing and Securing the Safe

1. Place your valuables inside the safe compartment.
2. Close the inner metal lid, then gently lower the book-style front cover until it is fully closed.
3. To secure the safe, scramble the combination dials to random numbers. This locks the safe and prevents unauthorized opening.

## Placement for Discretion

For optimal discretion, place the book safe on a bookshelf amongst other books. Its realistic design allows it to blend in, making it an ideal diversion safe. Avoid placing it in isolated areas where it might draw attention.





Image: The Amazon Basics Book Safe positioned on a bookshelf, demonstrating how it blends in with other books for discreet storage.





Image: The book safe opened, showing the spacious interior compartment suitable for various small valuables.

## Maintenance

To ensure the longevity and proper function of your Amazon Basics Book Safe, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and materials.
- **Moisture:** Keep the safe in a dry environment. Avoid exposure to excessive moisture or humidity, which can affect the metal components and the book cover material.
- **Mechanism Care:** The combination mechanism is designed for durability and typically requires no lubrication. Avoid forcing the dials or the lid, as this can cause damage.

## Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Safe does not open with combination.	Incorrect combination entered; dials not precisely aligned; combination forgotten.	Double-check that you are dialing the correct 3-digit combination.  Ensure each number is precisely aligned with the indicator mark.  If the combination is forgotten, the safe cannot be opened without it. There is no master key or override.
Safe lid does not close properly.	Obstruction inside the safe; mechanism misalignment.	Ensure no items are protruding from the safe, preventing the lid from closing fully.  Check for any debris or foreign objects obstructing the hinge or locking mechanism.
Combination dials are stiff or difficult to turn.	Dust or debris; lack of use.	Gently wipe the dials with a soft, dry cloth to remove any surface dust.  Regular use can help keep the mechanism smooth.  Avoid applying excessive force.

*Note: If you have forgotten your combination, there is no way to reset it without knowing the current combination. Please keep your combination in a secure, memorable location.*

Specifications

Feature	Detail
Model Number	SW-802C-K
Dimensions (L x W x H)	15.49 x 5.59 x 23.88 cm (6.1 x 2.2 x 9.4 inches)
Weight	798 g (1.76 lbs)
Material	Steel + Crepe Paper
Lock Type	3-Digit Mechanical Combination Lock
Capacity	Approximately 2 litres
Colour	Black
Special Feature	Portable, Diversion Design



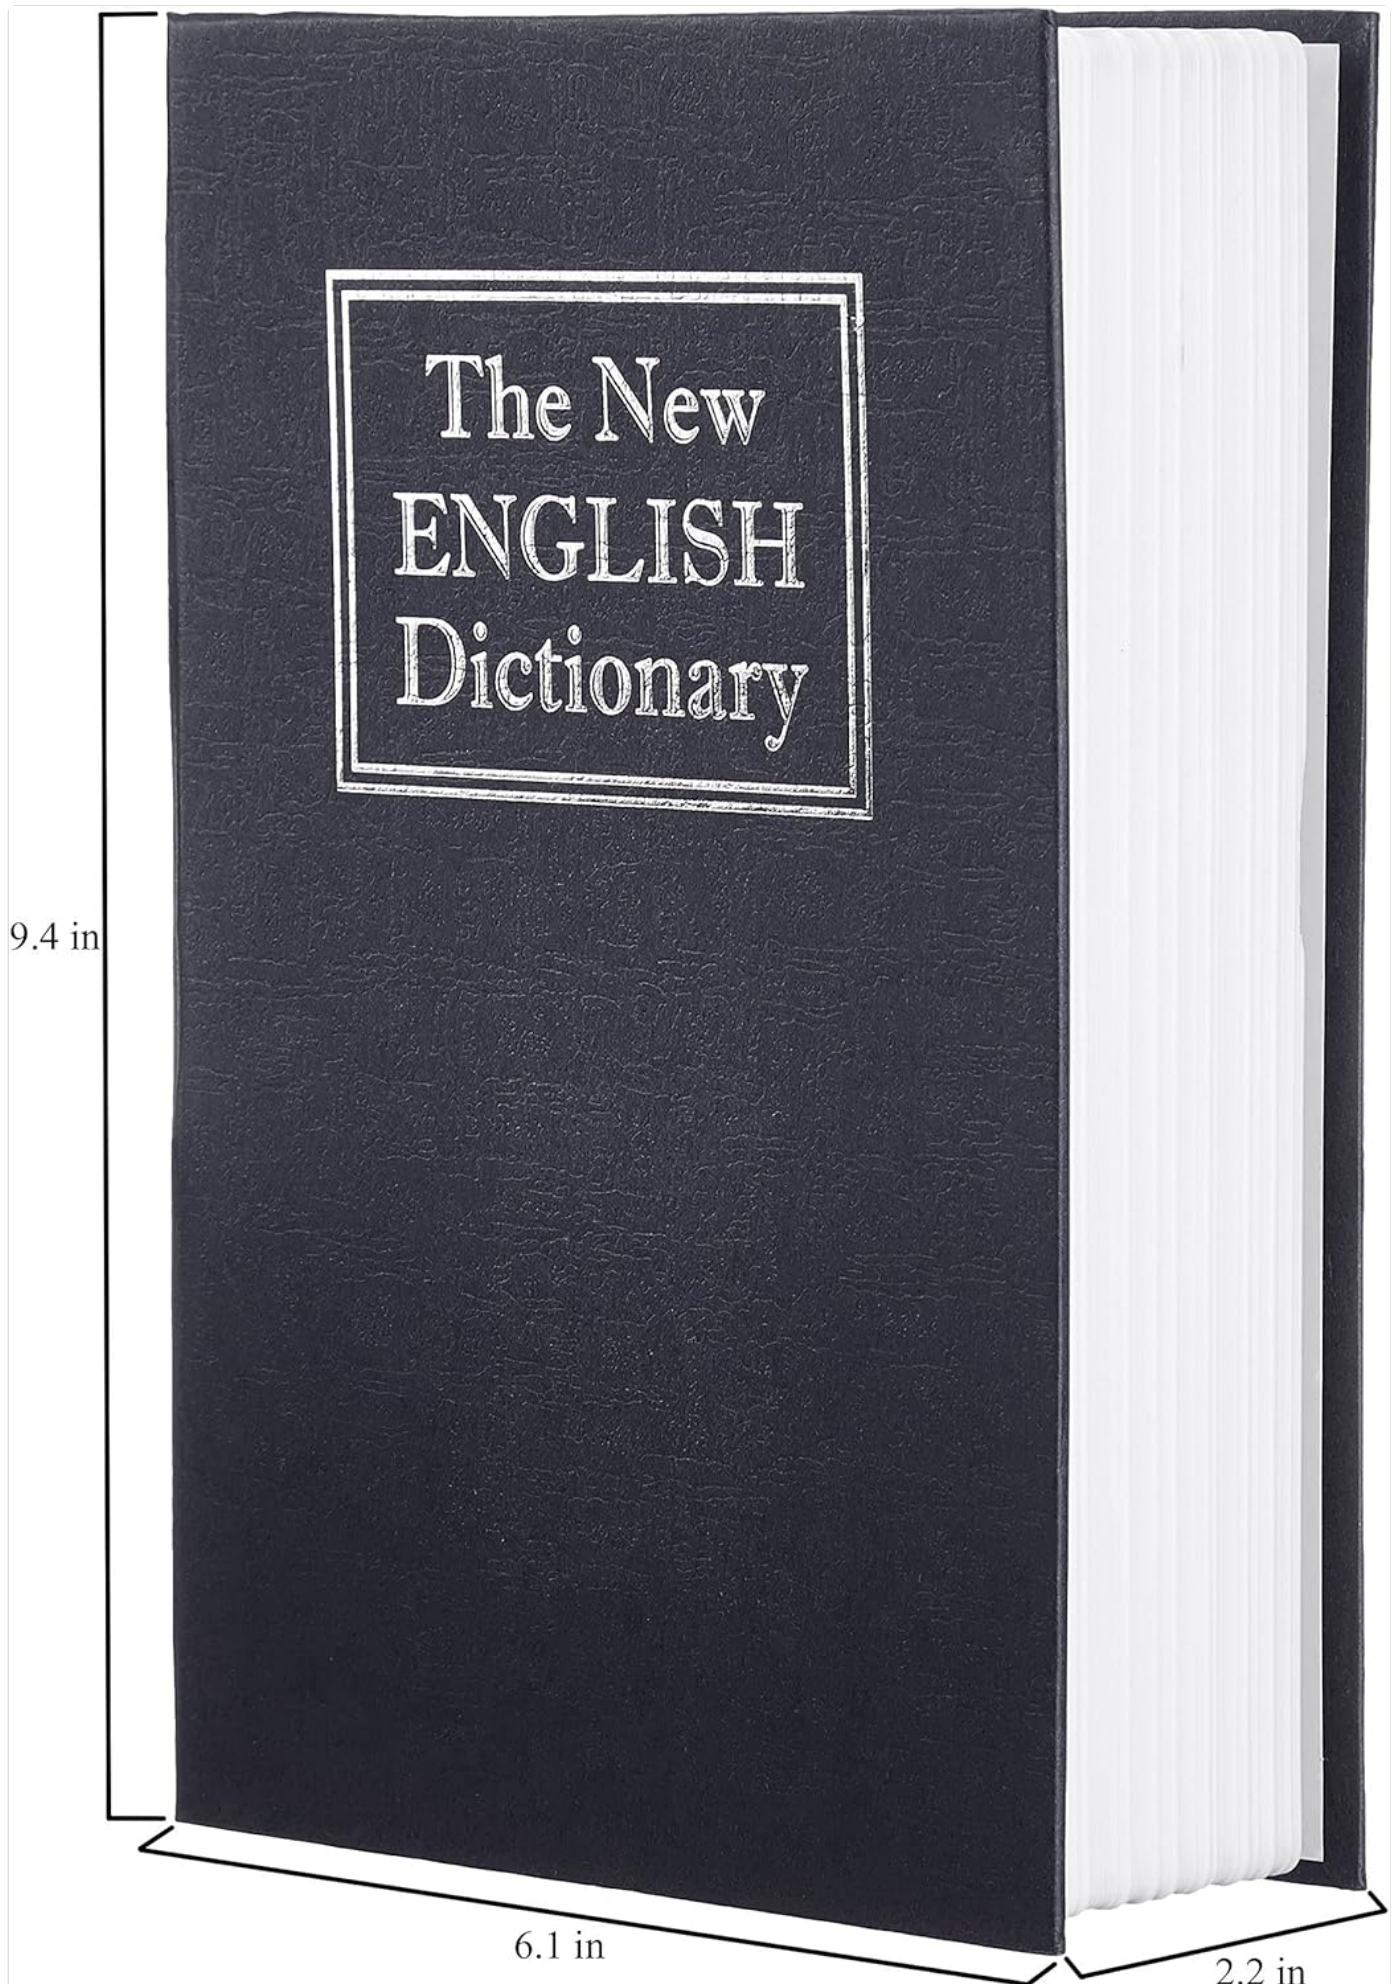 


Image: Visual representation of the book safe's dimensions, indicating its height, width, and depth.

# Available Colours



ASIN	Weight	Dimensions
B078HDCWXM	1.76 lbs 800 g	2.2 x 6.1 x 9.4 in (5.6 x 15.5 x 23.9 cm)
B078HD9TB7	1 lbs 450 g	2.2 x 4.5 x 7.1 in (5.6 x 11.4 x 18 cm)
B078HDDS9Y	1.76 lbs 800 g	2.2 x 6.1 x 9.4 in (5.6 x 15.5 x 23.9 cm)
B078HDG995	1.76 lbs 800 g	2.2 x 6.1 x 9.4 in (5.6 x 15.5 x 23.9 cm)
B078HGD5SN	1.76 lbs 800 g	2.2 x 6.1 x 9.4 in (5.6 x 15.5 x 23.9 cm)
B078HGRGWY	1.76 lbs 800 g	2.2 x 6.1 x 9.4 in (5.6 x 15.5 x 23.9 cm)

Image: A table detailing the available colors (black, blue, red) and their respective ASINs, weights, and dimensions for various book safe models.

## Warranty and Support

For information regarding warranty coverage, returns, or technical support for your Amazon Basics Book Safe, please refer to the documentation included with your purchase or visit the official Amazon Basics support page on the Amazon website. You can typically find support resources by searching for "Amazon Basics support" or by navigating to the product page on Amazon.co.uk and looking for customer service links.

For direct assistance, please contact Amazon Customer Service through their official channels.