

[Manuals.plus](#) /

› [DURGOD](#) /

› DURGOD Taurus K320 TKL Mechanical Gaming Keyboard User Manual

## DURGOD k320

# DURGOD Taurus K320 TKL Mechanical Gaming Keyboard User Manual

Model: K320

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your DURGOD Taurus K320 TKL Mechanical Gaming Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: The DURGOD Taurus K320 TKL Mechanical Gaming Keyboard, showcasing its compact 87-key layout in Space Grey with Cherry Blue switches.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- DURGOD Taurus K320 TKL Mechanical Gaming Keyboard
- USB Type-C to Type-A Cable
- USB Type-C to Type-C Cable
- Keycap Puller
- User Manual (this document)

## SETUP

### Connecting the Keyboard

1. Locate the USB Type-C port on the back of the keyboard.

2. Connect one end of the provided USB Type-C cable to the keyboard's Type-C port.
3. Connect the other end of the cable (USB Type-A or Type-C, depending on your computer's port) to an available USB port on your computer.
4. The keyboard is plug-and-play and should be automatically recognized by your operating system.

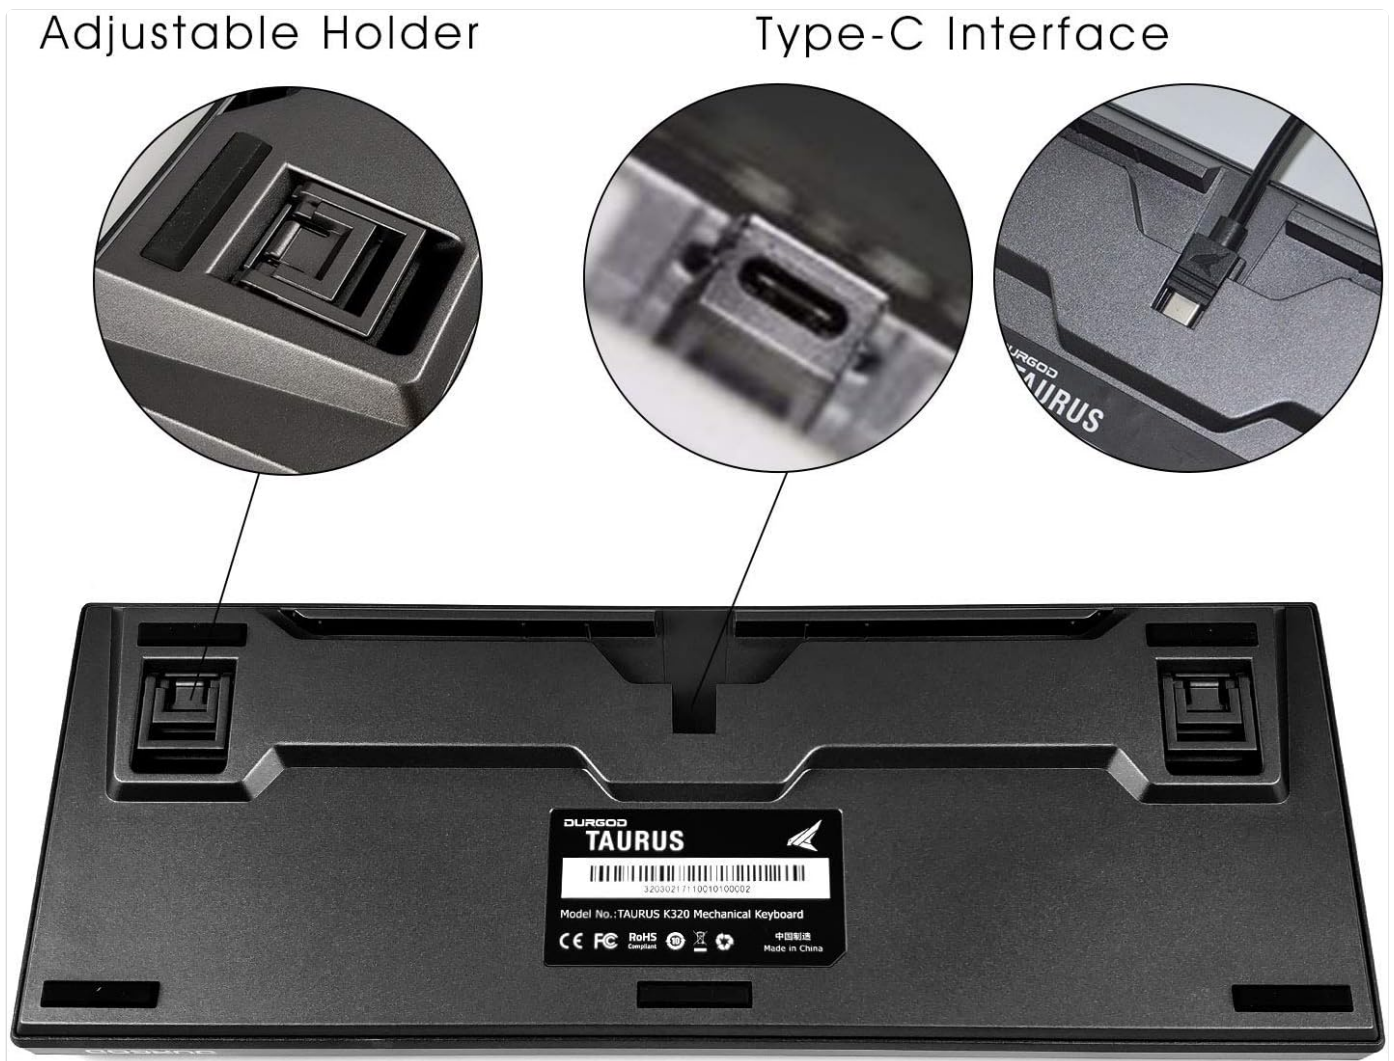


Image: The underside of the DURGOD K320 keyboard, highlighting the adjustable feet and the central USB Type-C port for cable connection.

## Adjusting Keyboard Angle

The keyboard features adjustable feet to customize the typing angle for ergonomic comfort.

- Gently flip out the two adjustable holders located on the rear underside of the keyboard to raise the back.
- Ensure both feet are extended evenly for stability.



Image: A close-up view of the adjustable foot mechanism on the DURGOD K320 keyboard, allowing users to modify the typing angle.

## OPERATING INSTRUCTIONS

### Basic Functions

The DURGOD Taurus K320 is an 87-key TKL (Tenkeyless) mechanical keyboard. All standard alphanumeric and symbol keys function as expected. The keyboard features Cherry MX Blue mechanical switches, known for their tactile and clicky feedback.



Image: A detailed view of the Cherry MX Blue mechanical switches installed on the DURGOD K320 keyboard, showing their distinct blue stems.

### Function Key Combinations (FN Keys)

The keyboard utilizes the **Fn** key for accessing multimedia controls and other special functions. Press and hold the **Fn** key, then press the corresponding F-key or other designated key.

| Combination       | Function                                                        |
|-------------------|-----------------------------------------------------------------|
| Fn + F1           | Play/Pause Media                                                |
| Fn + F2           | Stop Media                                                      |
| Fn + F3           | Previous Track                                                  |
| Fn + F4           | Next Track                                                      |
| Fn + F5           | Mute Volume                                                     |
| Fn + F6           | Volume Down                                                     |
| Fn + F7           | Volume Up                                                       |
| Fn + F12          | Switch Customize Profile (requires Durgod Zeus Engine software) |
| Fn + Left Win Key | Lock/Unlock Windows Key                                         |





FN+F1: Play/Pause

FN+F2: Stop

FN+F3: Prev Track

FN+F4: Next Track

FN+F5: Mute

FN+F6: Volume Down

FN+F7: Volume Up

FN+F12: Switch Customize Profile

FN+左Win: Windows Key Lock

Image: The DURGOD K320 keyboard layout, illustrating the various function key combinations for multimedia control and Windows key lock.

## Software Customization (Durgod Zeus Engine)

For advanced customization, including key remapping, macro assignment, and profile management, download the Durgod Zeus Engine software from the official DURGOD website. This software allows users to personalize their keyboard experience beyond the default functions.

## MAINTENANCE

### Cleaning the Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution to wipe down the keycaps and chassis.
- For dust and debris between keycaps, use compressed air.
- To clean under the keycaps, use the provided keycap puller to carefully remove the keycaps. Clean the switches and plate with compressed air or a small brush. Reattach keycaps by pressing them firmly onto the switch stems.



Image: A close-up view of the PBT double-shot keycaps, highlighting their durable construction and textured surface.

### Cable Management

The keyboard features integrated cable routing channels on the underside to help manage the USB cable and keep your desk tidy.

- Route the USB cable through one of the three channels (left, center, or right) on the underside of the keyboard to suit your setup.



Image: The underside of the DURGOD K320 keyboard, illustrating the three different cable management channels for organized desk

## TROUBLESHOOTING

### Keyboard Not Responding

- Ensure the USB cable is securely connected to both the keyboard and the computer.
- Try connecting the keyboard to a different USB port on your computer.
- Test the keyboard on another computer to determine if the issue is with the keyboard or the computer's setup.
- Restart your computer.

### Keys Not Registering or Double-Typing

- Clean the affected key switch using compressed air to remove any debris.
- If the issue persists, it may indicate a faulty switch. Contact customer support for assistance.

### Windows Key Locked

- Press **Fn + Left Win Key** simultaneously to toggle the Windows key lock feature.

## SPECIFICATIONS

| Feature               | Detail                                  |
|-----------------------|-----------------------------------------|
| Model                 | K320                                    |
| Brand                 | DURGOD                                  |
| Keyboard Type         | TKL Mechanical Gaming Keyboard          |
| Number of Keys        | 87                                      |
| Switch Type           | Cherry MX Blue (as per product variant) |
| Keycap Material       | PBT Double-Shot                         |
| Connectivity          | USB Type-C (Detachable Cable)           |
| N-Key Rollover (NKRO) | Supported                               |
| Product Dimensions    | 14.07 x 5.3 x 0.96 inches               |
| Item Weight           | 2.18 pounds                             |
| Language              | English                                 |
| Country of Origin     | China                                   |

# WARRANTY AND SUPPORT

DURGOD products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the official DURGOD website or contact their customer service directly. For further assistance, visit the [DURGOD Store on Amazon](#).

© 2024 DURGOD. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question