

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Globe Electric](#) /
- › [Globe Electric Gatineau 63361 Floor Lamp Instruction Manual](#)

Globe Electric 63361

Globe Electric Gatineau 63361 Floor Lamp Instruction Manual

Model: 63361

INTRODUCTION

Thank you for purchasing the Globe Electric Gatineau 63361 Floor Lamp. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new floor lamp. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

- Ensure the power is disconnected before assembly, cleaning, or replacing the bulb.
- Do not exceed the maximum wattage specified for the bulb (150W maximum).
- This lamp is designed for indoor use only. Do not expose to moisture or extreme temperatures.
- Keep the lamp away from flammable materials.
- Always use the correct bulb type (E26/medium base A21).
- If the cord is damaged, the lamp should not be used. Contact qualified personnel for repair.
- Position the lamp on a stable, level surface to prevent tipping.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- Lamp Base
- Lamp Pole Sections (typically multiple screw-together sections)
- Lamp Head/Socket Assembly
- Alabaster Glass Shade
- Shade Ring (pre-installed on socket)
- Information Sheet (this manual)



Image: Packaging box for the Globe Electric Gatineau Floor Lamp, showing the lamp's design and brand logo.

SETUP AND ASSEMBLY

Follow these steps to assemble your floor lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.

2. **Assemble Lamp Pole:** Screw the lamp pole sections together clockwise until secure. Ensure all connections are tight.
3. **Attach Lamp Pole to Base:** Thread the bottom section of the assembled lamp pole into the lamp base. Turn clockwise until firmly attached.
4. **Install Lamp Head:** If the lamp head is separate, carefully attach it to the top of the lamp pole. Ensure the electrical wire passes freely through the pole.
5. **Install Glass Shade:**
 - Unscrew the shade ring from the lamp socket.
 - Place the alabaster glass shade over the socket.
 - Screw the shade ring back onto the socket to secure the glass shade. Do not overtighten.



Image: A close-up view of the lamp's upper structure, showing the alabaster glass shade resting on the dark bronze torchiere arms and socket.

6. **Insert Bulb:** Screw one E26/medium base A21 bulb (150-watt maximum, sold separately) into the lamp socket.

7. **Position Lamp:** Place the lamp in your desired location, ensuring the cord is not pinched or a tripping hazard.

OPERATING INSTRUCTIONS

Your Gatineau Floor Lamp features a rotary switch for easy control.

1. **Connect to Power:** Plug the lamp's power cord into a standard 120V electrical outlet.
2. **Turn On/Off and Adjust Brightness:** Locate the rotary switch on the lamp socket.
 - Turn the switch clockwise to cycle through low, medium, and high light levels.
 - Continue turning to switch the lamp off.



Image: The Globe Electric Gatineau Floor Lamp providing ambient light in a modern living room setting.

MAINTENANCE

- **Cleaning:**
 - Always unplug the lamp before cleaning.
 - Wipe the lamp base and pole with a soft, dry cloth.

- For the glass shade, use a soft, damp cloth and a mild glass cleaner if necessary. Ensure the shade is completely dry before reattaching or turning on the lamp.

- **Bulb Replacement:**

- Ensure the lamp is unplugged and the bulb has cooled completely.
- Unscrew the old bulb counter-clockwise.
- Screw in a new E26/medium base A21 bulb (150-watt maximum) clockwise until snug. Do not overtighten.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not light up.	<ol style="list-style-type: none"> 1. Lamp not plugged in. 2. Bulb is loose or burnt out. 3. Power outlet is not functioning. 	<ol style="list-style-type: none"> 1. Ensure the plug is fully inserted into the outlet. 2. Tighten or replace the bulb. 3. Test the outlet with another appliance or check the circuit breaker.
Lamp flickers.	<ol style="list-style-type: none"> 1. Loose bulb. 2. Incorrect bulb wattage. 	<ol style="list-style-type: none"> 1. Tighten the bulb. 2. Ensure the bulb wattage is within the specified range (150W max).
Lamp is unstable.	<ol style="list-style-type: none"> 1. Pole sections not fully tightened. 2. Lamp base not on a level surface. 	<ol style="list-style-type: none"> 1. Re-tighten all pole sections. 2. Move the lamp to a flat, stable surface.

SPECIFICATIONS

Model Number	63361
Brand	Globe Electric
Dimensions (D x W x H)	10.24"D x 13"W x 70.75"H (25.4 cm D x 33 cm W x 179.7 cm H)
Item Weight	1 Pounds
Finish Type	Satin Dark Bronze
Shade Material	Alabaster Glass
Base Material	Metal
Bulb Base	E26 Medium
Max Wattage	150 Watts
Voltage	120 Volts
Switch Type	Rotary
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor

13" (33 cm)



70.75"
(179.7 cm)



Image: A diagram illustrating the key dimensions of the floor lamp, including height (70.75 inches), shade width (13 inches), and base diameter (10.24 inches).

WARRANTY AND SUPPORT

Warranty: The manufacturer states "No warranty." for this product. Please refer to your retailer's return policy for details on returns or exchanges.

Customer Support: For further assistance or inquiries, please visit the official Globe Electric store or contact your retailer.

[Visit the Globe Electric Store on Amazon](#)